

[Manuals.plus](#) /

› [iLive Electronics](#) /

› iLive BHBUSAZIN025745 Under-Cabinet CD Player Radio Bluetooth Speaker System User Manual

iLive Electronics BHBUSAZIN025745

iLive BHBUSAZIN025745 Under-Cabinet CD Player Radio Bluetooth Speaker System User Manual

Model: BHBUSAZIN025745

INTRODUCTION

The iLive Wireless Under-Cabinet CD Player Radio Bluetooth Speaker System is designed to provide versatile audio entertainment in your kitchen or other suitable spaces. This unit features a compact design that mounts conveniently under a cabinet, saving valuable counter space. It offers multiple audio sources including Bluetooth connectivity for wireless streaming, a front-loading CD player, an FM radio tuner, and an auxiliary input for wired devices. Additionally, it includes a digital clock and a built-in cooking timer.



Image: The iLive Under-Cabinet CD Player Radio Bluetooth Speaker System, shown mounted beneath a wooden kitchen cabinet. The unit features a black and silver finish with a digital display showing the time and various control buttons. A power cable is visible connecting to a wall outlet.

PACKAGE CONTENTS

- iLive Under-Cabinet CD Player Radio Bluetooth Speaker System
- Remote Control
- Mounting Template
- Mounting Hardware
- AC/DC Power Adapter
- User Manual

SETUP

1. Mounting the Unit

1. Select a suitable location under a kitchen cabinet, ensuring adequate space for operation and ventilation.
2. Use the provided mounting template to mark the screw positions on the underside of the cabinet.
3. Drill pilot holes at the marked positions.
4. Secure the mounting brackets (if separate) or the unit directly using the supplied mounting hardware. Ensure the unit is firmly attached.

2. Power Connection

Connect the AC/DC power adapter to the DC input jack on the unit and then plug the adapter into a standard wall outlet. The unit will power on and the clock display will activate.

3. Setting the Clock

Refer to the 'Operating Instructions' section for detailed steps on setting the current time on the digital display.

OPERATING INSTRUCTIONS

Power On/Off

Press the **POWER** button on the unit or remote control to turn the system on or off.

Adjusting Volume

Use the **VOLUME +** or **VOLUME -** buttons on the unit or remote control to increase or decrease the audio level.

Source Selection

Press the **SOURCE** button repeatedly to cycle through available modes: Bluetooth, CD, FM Radio, and Auxiliary Input.

Bluetooth Pairing

1. Select Bluetooth mode using the **SOURCE** button. The Bluetooth indicator will flash.
2. On your Bluetooth-enabled device (smartphone, tablet), enable Bluetooth and search for new devices.
3. Select "iLive BHBUSAZIN025745" (or similar name) from the list of found devices.
4. Once paired, the Bluetooth indicator will stop flashing and remain solid. You can now stream audio wirelessly.

CD Playback

1. Select CD mode using the **SOURCE** button.
2. Gently insert a CD (CD-R, CD-RW, MP3 CD compatible) into the front-loading CD slot with the label side facing up. The CD will automatically load and begin playing.
3. Use the **PLAY/PAUSE**, **STOP**, **SKIP/SEARCH** buttons on the unit or remote control to manage playback.

FM Radio Operation

1. Select FM Radio mode using the **SOURCE** button.
2. Press the **TUNE +** or **TUNE -** buttons to manually tune to a station.
3. Press and hold **TUNE +** or **TUNE -** to automatically scan for the next available station.
4. To save a preset station (up to 20), tune to the desired station, then press **PROG/MEM**. Use **TUNE +** or **TUNE -** to select a preset number, then press **PROG/MEM** again to confirm.
5. To recall a preset, press the **PRESET** button and use **TUNE +** or **TUNE -** to select the desired preset.

Auxiliary Input

Connect an external audio device (e.g., MP3 player) to the 3.5mm AUX IN jack on the unit using a 3.5mm audio cable (not

included). Select Auxiliary Input mode using the **SOURCE** button. Audio from the connected device will play through the system speakers.

Cooking Timer

The unit includes a built-in cooking timer. Press the **TIMER** button to activate the timer function. Use the **HOURL** and **MINUTE** buttons to set the desired countdown time. Press **TIMER** again to start the countdown. An audible alert will sound when the timer reaches zero.

Remote Control

The included remote control provides convenient access to all major functions, including power, volume, source selection, CD playback controls, and radio tuning/presets. Ensure the remote has fresh batteries and is pointed towards the unit's front panel for optimal operation.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches.
- **Ventilation:** Ensure the unit has adequate ventilation and is not obstructed by other objects.
- **Battery Backup:** If the unit has a battery backup feature for the clock (check specific model details), replace batteries periodically to maintain timekeeping during power outages.

TROUBLESHOOTING

Problem	Solution
No power	Ensure the AC/DC adapter is securely plugged into both the unit and a working wall outlet.
No sound	Check the volume level. Ensure the correct source (Bluetooth, CD, FM, AUX) is selected. If using AUX, verify the external device's volume.
Bluetooth pairing fails	Ensure the unit is in Bluetooth mode and discoverable. Turn off and on Bluetooth on your device. Move your device closer to the unit.
CD not playing	Ensure the CD is inserted correctly with the label side up. Check if the CD is dirty or scratched. Try a different CD.
Poor FM radio reception	Adjust the position of the FM antenna (if applicable). Try relocating the unit to a different area.
Remote control not working	Check and replace the remote control batteries. Ensure there are no obstructions between the remote and the unit.

SPECIFICATIONS

- **Brand:** iLive Electronics
- **Model Number:** BHBUSAZIN025745
- **Connectivity Technology:** Bluetooth, Auxiliary
- **Speaker Type:** Stereo
- **Power Source:** AC Adapter (with optional battery backup for clock)
- **Compatible Devices:** Smartphone, Tablet
- **CD Playback:** CD, CD-R, CD-RW (MP3 compatible)

- **FM Tuner:** Digital FM with 20 station presets
- **Special Features:** Under-cabinet mounting, Digital Clock, Cooking Timer, Remote Control
- **Item Weight:** 3.83 pounds
- **Package Dimensions:** 13.43 x 13.3 x 3.78 inches

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official iLive Electronics website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B012BA056A>

More documents and user manuals: <https://manuals.plus/>