

VTech 80-166710

VTech Musical Rhymes Book Instruction Manual

Model: 80-166710

PRODUCT OVERVIEW

The VTech Musical Rhymes Book is an interactive learning toy designed to introduce young children to classic nursery rhymes, colors, and musical instruments through engaging activities.



Image: Front view of the VTech Musical Rhymes Book in pink, featuring a bear, cat, and dog characters.

- **Interactive Pages:** Features big, easy-to-turn pages with 6 classic nursery rhymes.
- **Learning Modes:** Includes two modes of play: a learning mode for vocabulary and a music mode for songs and instrument sounds.
- **Fine Motor Skills:** Sliding and twisting play pieces help develop fine motor skills.
- **Musical Interaction:** Five colorful piano buttons introduce colors and instruments.
- **Visual Stimulation:** Brightly colored pages and a light-up Star that flashes with sounds enhance visual engagement.

SETUP

Battery Installation

The VTech Musical Rhymes Book requires 2 AAA batteries for operation. Batteries are included for demo purposes, but new batteries are recommended for regular use.

1. Locate the battery compartment on the back of the book.
2. Using a screwdriver, open the battery compartment cover.

3. Insert 2 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Power On/Off and Volume Control

The book features a power switch and volume control for user convenience.

- Locate the green power switch on the spine of the book.
- Slide the switch to the "On" position to activate the book.
- The switch also allows adjustment between two volume levels or to turn the unit off.

OPERATING INSTRUCTIONS

Selecting Play Modes

The VTech Musical Rhymes Book offers two distinct play modes:

- **Learning Mode:** In this mode, the book introduces age-appropriate vocabulary and concepts related to the rhymes and illustrations.
- **Music Mode:** This mode plays music and instrument sounds, encouraging musical exploration.
- Toggle between modes using the switch located near the power button.

Interacting with Pages

Each page of the book is designed for interactive play:



Image: The book open to "A-Tisket, A-Tasket" and "Little Boy Blue" pages, with interactive elements visible.

Turn the
pages to
explore!



Image: The book open to "Old MacDonald Had a Farm" and "Hey Diddle Diddle" pages, highlighting interactive elements.



Image: The book open to "Are You Sleeping?" and "Here We Go Round the Mulberry Bush" pages, showing movable parts.

- **Turning Pages:** Gently turn the large, durable pages to explore different nursery rhymes. The book will

respond with sounds and phrases relevant to the current page.

- **Interactive Elements:** Slide and twist the fun play pieces embedded on each page to activate sounds and enhance motor skills.
- **Piano Keys:** Press the five colorful piano keys on the side of the book to hear piano sounds and learn about colors and instruments.
- **Light-up Star:** The light-up star on the spine of the book flashes along with the sounds, providing visual feedback.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the surface of the book with a slightly damp cloth. Do not immerse the book in water.
- **Storage:** Store the book in a cool, dry place away from direct sunlight and moisture.
- **Battery Care:** Remove batteries if the book will not be used for an extended period to prevent leakage. Dispose of old batteries responsibly.
- **Durability:** The book is designed for durability, but avoid dropping it from high places or applying excessive force to the pages or interactive elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Book does not turn on or respond.	Low or dead batteries; incorrect battery polarity; power switch is off.	Ensure power switch is in the "On" position. Replace batteries with new ones, checking polarity.
Sounds are distorted or too low.	Low batteries; volume set too low.	Replace batteries. Adjust the volume switch to a higher setting.
Interactive elements (sliding/twisting) do not work.	Mechanism might be stuck or damaged.	Gently check for any obstructions. If damaged, contact customer support.

SPECIFICATIONS

- **Model Number:** 80-166710
- **Product Dimensions:** 1.74 x 8.76 x 7.48 inches
- **Item Weight:** 1.08 pounds
- **Recommended Age:** 6 months - 3 years
- **Batteries:** 2 x AAA (included for demo)

- **Country of Origin:** China
- **Manufacturer:** VTech

WARRANTY AND SUPPORT

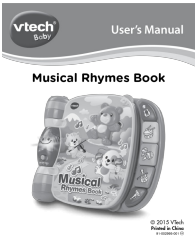 
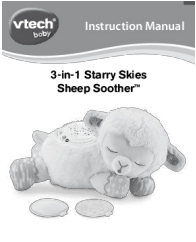 

For warranty information or further assistance, please refer to the official VTech website or the included user manual PDF.


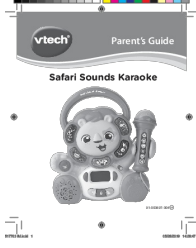 

Official User Manual (PDF): [Download PDF](#)

For additional support, visit the [VTech Store on Amazon](#).

© 2025 VTech. All rights reserved.

Related Documents - 80-166710

	<p>VTech Musical Rhymes Book User's Manual - Features, Activities, and Warranty</p> <p>Comprehensive user's manual for the VTech Musical Rhymes Book. Learn about product features, activities, troubleshooting, care instructions, and warranty information.</p>
	<p>VTech 3-in-1 Starry Skies Sheep Soother Instruction Manual</p> <p>Comprehensive instruction manual for the VTech 3-in-1 Starry Skies Sheep Soother, detailing features, operation, assembly, and troubleshooting.</p>
	<p>VTech 3-in-1 Starry Skies Sheep Soother Instruction Manual</p> <p>This instruction manual provides detailed guidance on the VTech 3-in-1 Starry Skies Sheep Soother, covering setup, features, operation, care, and troubleshooting for parents and caregivers.</p>

 <p>The cover of the 'Vtech Safari Sounds Guitar Parent's Guide' features the Vtech logo at the top left, followed by 'Parent's Guide' and 'Safari Sounds Guitar'. Below the text is a photograph of the guitar-shaped toy, which is grey with colorful buttons and a small screen. The bottom left corner has a small 'I' icon.</p>	<p>VTech Safari Sounds Guitar Parent's Guide: Features, Modes, and Songs</p> <p>Comprehensive parent's guide for the VTech Safari Sounds Guitar. Learn about its features, modes, song lyrics, troubleshooting, and care instructions for this interactive musical toy.</p>
 <p>The cover of the 'Vtech Safari Sounds Karaoke Parent's Guide' features the Vtech logo at the top left, followed by 'Parent's Guide' and 'Safari Sounds Karaoke'. Below the text is a photograph of the karaoke machine, which is a small, round, grey device with a screen and buttons. The bottom left corner has a small 'I' icon.</p>	<p>VTech Safari Sounds Karaoke Parent's Guide: Features, Songs, and Setup</p> <p>Comprehensive parent's guide for the VTech Safari Sounds Karaoke. Learn about product features, setup, battery installation, songs, activities, care, troubleshooting, and consumer services.</p>
 <p>The cover of the 'Vtech Sunshine Days Tummy Time Piano Instruction Manual' features the Vtech logo at the top left, followed by 'Instruction Manual' and 'Sunshine Days Tummy Time Piano'. Below the text is a photograph of the piano, which is a small, grey, rectangular device with a screen and buttons. The bottom left corner has a small 'I' icon.</p>	<p>VTech Sunshine Days Tummy Time Piano: Instruction Manual and Features</p> <p>Comprehensive guide to the VTech Sunshine Days Tummy Time Piano, covering setup, battery installation, product features, activities, melody list, song lyrics, care, maintenance, troubleshooting, and consumer services.</p>