

[manuals.plus](#) /

› [nixplay](#) /

› [Nixplay Smart Digital Picture Frame W08G User Manual - 8 Inch WiFi Frame](#)

nixplay W08G

Nixplay Smart Digital Picture Frame W08G User Manual

Model: W08G Black - 8 Inch WiFi Frame

1. INTRODUCTION

Welcome to your Nixplay Smart Digital Picture Frame W08G. This manual provides detailed instructions for setting up, operating, and maintaining your frame to ensure you get the most out of its features. The Nixplay frame allows you to display your cherished photos and videos, share them with family and friends, and manage content remotely via the Nixplay App or website.



Image 1.1: The Nixplay Smart Digital Picture Frame W08G displaying a family photo in portrait orientation.

2. PACKAGE CONTENTS

Please verify that all items are present in your Nixplay Smart Digital Picture Frame W08G package:

- Nixplay Smart Digital Picture Frame W08G (8-inch, Black)
- Power Adapter
- Remote Control
- Quick Start Guide
- Wall Mounting Guide (if applicable)



(Power supply will be replaced with EU/UK Adaptor for purchases in EU/UK)

Image 2.1: The Nixplay Smart Digital Picture Frame W08G and its included accessories: power adapter, remote control, and documentation.

3. SETUP

3.1 Initial Power-On

1. Unpack the frame and all accessories.
2. Connect the power adapter to the frame and plug it into a power outlet. The frame will automatically power on.
3. The power cord also functions as a stand. Adjust it to position the frame in either portrait or landscape orientation.

3.2 Wi-Fi Connection

Follow the on-screen instructions to connect your frame to a Wi-Fi network. You will use the included remote control to navigate the menu and enter your Wi-Fi password.

3.3 Nixplay Account Setup

1. Once connected to Wi-Fi, the frame will display a unique code.
2. On your computer or smartphone, visit the Nixplay website or download the Nixplay App (available for iOS and Android).
3. Create a new Nixplay account or log in to an existing one.
4. Enter the unique code from your frame into your Nixplay account to link the device.

3.4 Wall Mounting (Optional)

Refer to the included Wall Mounting Guide for instructions on securely mounting your frame to a wall. Ensure proper tools and safety precautions are used.

4. OPERATING INSTRUCTIONS

4.1 Using the Remote Control

The remote control allows you to navigate menus, adjust settings, and control playback on your frame. Point the remote directly at the frame's sensor for optimal response.

4.2 Display Orientation

The frame automatically adjusts its display to portrait or landscape orientation based on how it is positioned. No manual adjustment is required for this feature.

4.3 Motion Sensor

The integrated motion sensor can be configured to turn the frame on or off automatically when movement is detected in the room. This feature helps conserve energy and ensures the frame is active when you are present.

4.4 Amazon Alexa Integration

Your Nixplay frame is compatible with Amazon Alexa. Once linked, you can use voice commands to control your frame, such as asking Alexa to play a specific playlist.

5. MANAGING CONTENT

The Nixplay platform offers multiple ways to upload and manage photos and videos for your frame.

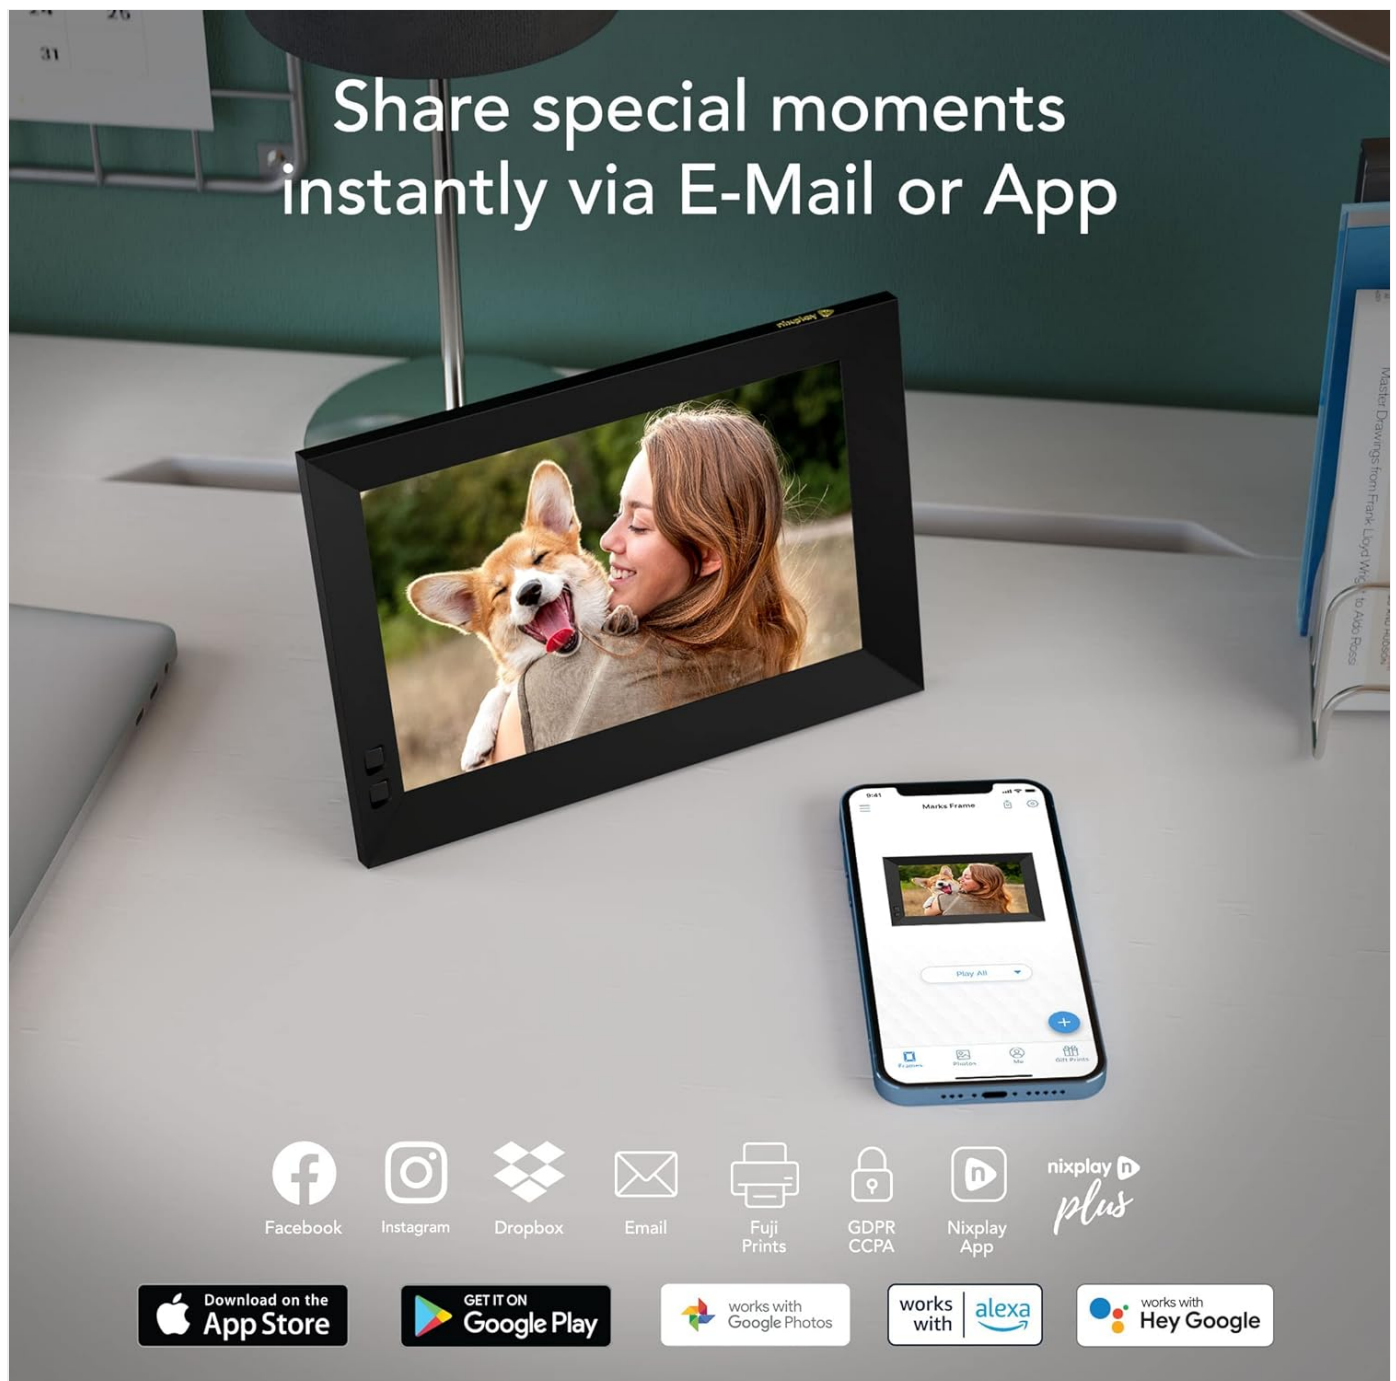


Image 5.1: Share special moments instantly via the Nixplay App or Email.

5.1 Nixplay Mobile App

The Nixplay App (iOS and Android) provides full control over your frame. You can upload photos and videos directly from your phone, create and manage playlists, and adjust frame settings.

5.2 Email Sharing

Each Nixplay frame has a unique email address. You can send photos and videos directly to this email address, and they will appear on your frame. This is an easy way for family and friends to share content.

5.3 Cloud Services Integration

Through the Nixplay website, you can connect your account to various cloud services and social media platforms to import photos:

- Google Photos
- Dropbox

- Facebook
- Instagram

Ensure your frame is always up to date by linking these services.

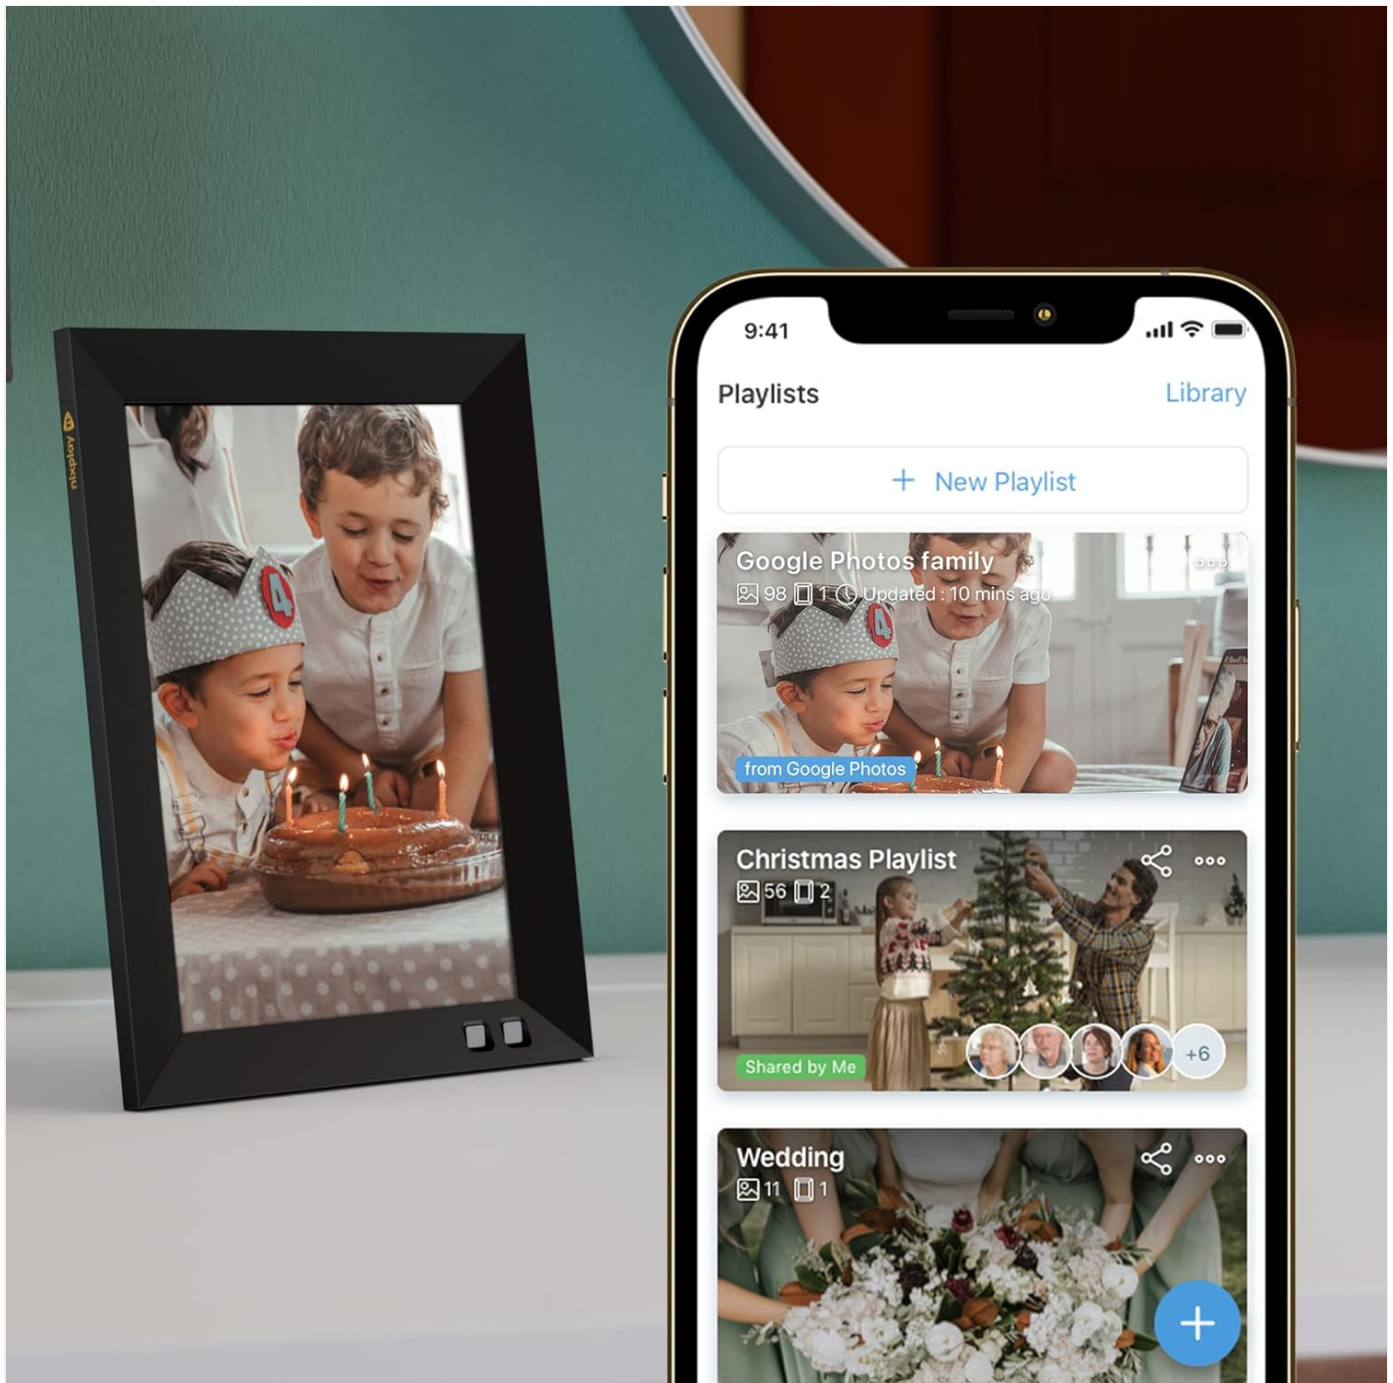


Image 5.2: The Nixplay App interface showing various playlists, including Google Photos, Christmas, and Wedding playlists.

5.4 Playlists

Organize your photos and videos into playlists using the Nixplay App or website. You can send unique photos or playlists to separate frames and invite others to contribute to your playlists.

6. MAINTENANCE

6.1 Cleaning the Frame

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water.

Avoid using harsh chemicals or abrasive materials.

6.2 Software Updates

Your Nixplay frame may receive automatic software updates to improve performance and add new features. Ensure your frame is connected to Wi-Fi to receive these updates.

7. TROUBLESHOOTING

If you encounter issues with your Nixplay Smart Digital Picture Frame W08G, please refer to the following common solutions:

Problem	Possible Solution
Frame does not power on.	Ensure the power adapter is securely connected to both the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Verify your Wi-Fi password. Ensure the frame is within range of your Wi-Fi router. Restart your router and the frame.
Photos are not appearing on the frame.	Confirm that photos have been uploaded to a playlist and that the playlist is assigned to your frame in the Nixplay App or website. Check your internet connection.
Remote control is not responding.	Ensure there are no obstructions between the remote and the frame's sensor. Replace the remote control battery if necessary.
Frame display is dim or off.	Check the brightness settings in the frame's menu or via the Nixplay App. If the motion sensor is enabled, ensure there is movement in the room or temporarily disable it for testing.

8. SPECIFICATIONS

- **Model:** W08G Black
- **Screen Size:** 8 Inches
- **Resolution:** 1024 x 768 (XGA)
- **Aspect Ratio:** 4:3
- **Connectivity:** Wi-Fi
- **Color:** Black
- **Product Dimensions:** 8.35 x 5.83 x 0.99 inches
- **Item Weight:** 9.6 ounces
- **Power:** AC Adapter (1 Lithium Metal battery required for remote)
- **Features:** Motion Sensor, Auto-adjusts to portrait/landscape, Amazon Alexa compatible
- **Compatible Devices:** Smartphone (via Nixplay App)



Image 8.1: Side profile of the Nixplay Smart Digital Picture Frame W08G, highlighting its slim design.

9. WARRANTY AND SUPPORT

Nixplay is committed to providing excellent customer service. If you require assistance with your Nixplay Smart Digital Picture Frame W08G, please contact our customer service team. Support is available to help you with setup, troubleshooting, and any other inquiries you may have.

For the most current warranty information and support contact details, please visit the official Nixplay website or refer to the documentation included with your product.

 
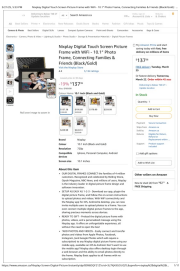 



Image 9.1: Nixplay frames displayed in various home and office settings, emphasizing available customer support.

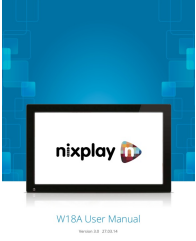 


Related Documents - W08G

	<p>Nixplay WiFi Cloud Frame User Guide: Setup, Features, and Support</p> <p>Comprehensive guide to the Universal Nixplay WiFi Cloud Frame. Learn setup, photo management, cloud sharing, mobile app usage, frame settings, and troubleshooting. Connect with family and friends.</p>
	<p>Nixplay W15F Wifi Digital Photo Frame User Guide</p> <p>A comprehensive guide to setting up, using, and troubleshooting your Nixplay W15F Wifi Digital Photo Frame. Learn about the remote control, Wi-Fi connection, account creation, wall mounting, and photo sharing features.</p>
	<p>Nixplay Smart Photo Frame 8 Inch Wall Mounting Guide</p> <p>Step-by-step instructions and guide for wall mounting your Nixplay Smart Photo Frame 8 inch, including orientation details and screw placement.</p>

	<p>Nixplay 10.1" Digital Touch Screen WiFi Photo Frame for Connecting Families</p> <p>Discover the Nixplay 10.1-inch WiFi digital touch screen photo frame, designed to connect families and friends. Easily share photos and videos, enjoy a vibrant HD display, and utilize secure cloud storage for cherished memories.</p>
	<p>Nixplay W18A User Manual: Setup, Features, and Safety Guide</p> <p>Comprehensive user manual for the Nixplay W18A Cloud Frame, covering setup, cloud account management, photo uploading, slideshow creation, frame settings, troubleshooting, and safety information.</p>
	<p>Nixplay Smart Photo Frame: Quick Start Guide and Setup</p> <p>Comprehensive guide to setting up and using your Nixplay Smart Photo Frame, including remote control functions, wall mounting, app connection, and app features.</p>

Documents - nixplay – W08G

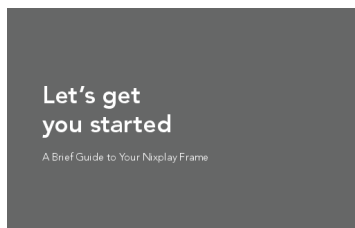 


[\[pdf\]](#) Quick Start Guide Instructions Specifications Guide

Quick Start Guide Nixplay Smart Photo Frame 8 inch tech specs W08G QSG V1 RB210622 v
1632714128 cdn shopify s files 1 0366 8553 |||

Let s get you started A Brief Guide to Your Nixplay Frame Read This First, Please
Nixplay cares deeply about providing your family with a great frame and service. We
go to great lengths to ensure your frame is delivered into your hands in perfect
working order. If your Nixplay isn t working perfec...

lang:en score:38 filesize: 1.49 M page_count: 20 document date: 2021-07-13

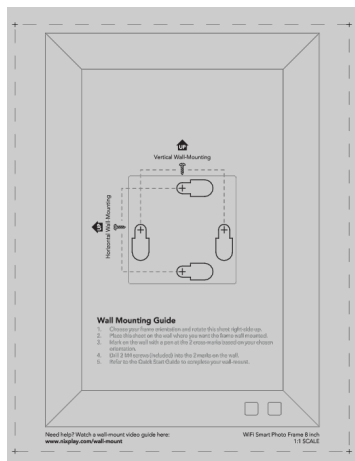

[Nixplay Smart Photo Frame 8 Inch Wall Mounting Guide](#)

Step-by-step instructions and guide for wall mounting your Nixplay Smart Photo
Frame 8 inch, including orientation details and screw placement.

lang:en score:24 filesize: 398.33 K page_count: 1 document date: 2021-06-24

