

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MPM](#) /

> [MPM MMK-05 Professional Coffee Grinder User Manual](#)

## MPM MMK-05

# MPM MMK-05 Professional Coffee Grinder User Manual

Model: MMK-05 | Brand: MPM

## INTRODUCTION

---

Thank you for choosing the MPM MMK-05 Professional Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The MPM MMK-05 coffee grinder features a durable steel burr system designed to extract maximum flavor and aroma from coffee beans. With its 100W motor, it can grind up to 60 grams of coffee per minute. The grinder offers 17 grind settings, allowing you to achieve the perfect consistency for various brewing methods, from coarse to ultra-fine.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids.
- Ensure the lid is properly positioned before operation. The grinder is equipped with a safety system that prevents operation if the lid is not correctly closed.
- Always unplug the appliance from the power outlet before cleaning or when not in use.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the appliance on a stable, flat, non-slip surface. Non-slip rubber feet ensure stability during use.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your MPM MMK-05 coffee grinder.



Figure 1: Labeled diagram of the MPM MMK-05 Coffee Grinder components.

1. **Bean Hopper:** Top compartment for whole coffee beans.
2. **Manual Lock:** Secures the bean hopper.
3. **Grind Selector:** Dial to adjust grind fineness (Fine, Medium, Coarse).
4. **Timer Dial:** Sets grinding duration (up to 60 seconds) or Pulse function.
5. **Ground Coffee Container:** Removable container for collecting ground coffee.
6. **Cord Storage:** Area for winding the power cord.



**Figure 2:** The MPM MMK-05 Coffee Grinder with its transparent lid and removable ground coffee container.

## SETUP

---

1. **Unpack:** Carefully remove all packaging materials and ensure all parts are present.
2. **Clean:** Before first use, clean the removable parts (bean hopper lid, ground coffee container) with warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Assemble:**
  - Place the ground coffee container into its designated slot on the front of the grinder.
  - Ensure the bean hopper is securely in place on top of the unit.
  - Close the transparent lid firmly. The safety mechanism prevents operation if the lid is not correctly closed.

4. **Placement:** Position the grinder on a stable, flat, and dry surface, away from water sources and heat.
5. **Power Connection:** Plug the power cord into a suitable electrical outlet (220V).

## OPERATING INSTRUCTIONS

---

1. **Add Coffee Beans:** Open the bean hopper lid and pour the desired amount of whole coffee beans into the hopper. Do not overfill. The maximum capacity is 60 grams.
2. **Select Grind Fineness:** Turn the grind selector dial to your desired setting (Fine, Medium, Coarse). Refer to the "Grind Settings" section for guidance.



**Figure 3:** The grind selector dial allows adjustment from fine to coarse.

3. **Set Grinding Time:** Turn the timer dial to select the desired grinding duration, up to 60 seconds. Alternatively, use the "PULSE" setting for manual control.







**Figure 4:** Front view highlighting the timer dial and power button.

4. **Start Grinding:** Press the power button (located in the center of the timer dial) to start the grinding process. The grinder will operate for the set duration or as long as the pulse button is held.
5. **Collect Ground Coffee:** Once grinding is complete, carefully remove the ground coffee container from the front of the unit.
6. **Unplug:** Always unplug the grinder after use.

## GRIND SETTINGS

---

The MPM MMK-05 offers 17 levels of grind fineness to suit various coffee brewing methods. Experiment to find your preferred setting.

| Grind Setting                  | Description                  | Recommended Brewing Method               |
|--------------------------------|------------------------------|--|
| <b>Fine</b> (Settings 1-5)     | Powdery, similar to flour.   | Espresso, Turkish Coffee, Moka Pot       |
| <b>Medium</b> (Settings 6-11)  | Similar to sand.             | Drip Coffee Makers, Pour Over, Aeropress |
| <b>Coarse</b> (Settings 12-17) | Chunky, similar to sea salt. | French Press, Cold Brew                  |

**Note:** Adjusting the grind setting while the grinder is operating or with beans in the hopper may cause damage to the burrs. It is recommended to adjust the setting when the grinder is empty and off.

## TIMER FUNCTION

---

The integrated timer allows for automatic grinding for up to 60 seconds. Turn the timer dial clockwise to select the desired duration. The grinder will automatically stop once the set time has elapsed.

For manual control, turn the dial to the "PULSE" setting. The grinder will operate only while the power button is pressed and held. This is useful for small adjustments or quick grinds.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your coffee grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Empty:** Remove any remaining coffee beans from the hopper and discard any ground coffee from the container.
3. **Disassemble:** Remove the ground coffee container and the bean hopper lid.



**Figure 5:** Top view of the bean hopper, showing the manual lock for removal.

4. **Clean Removable Parts:** Wash the ground coffee container and the bean hopper lid with warm, soapy water. Rinse thoroughly and dry completely before reassembling. These parts are generally not dishwasher safe.
5. **Clean Burr Grinders:** Use a small brush (often supplied with grinders, or a stiff brush) to remove coffee grounds from the burr grinding mechanism. You can also use a vacuum cleaner with a narrow attachment to remove stubborn particles. Do not use water directly on the burrs.
6. **Clean Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
7. **Reassemble:** Ensure all parts are dry before reassembling. Securely place the bean hopper and ground coffee container back into position.

## TROUBLESHOOTING

---

If you encounter issues with your MPM MMK-05 coffee grinder, refer to the following table for common solutions.

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                                | Possible Cause  | Solution   |
|--|---|--|
| Grinder does not start.                | <ul style="list-style-type: none"> <li>Not plugged in.</li> <li>Lid not properly closed.</li> <li>Timer not set or set to "PULSE" without pressing the button.</li> </ul>             | <ul style="list-style-type: none"> <li>Ensure the power cord is securely plugged into a working outlet.</li> <li>Check that the transparent lid is firmly closed and the safety mechanism is engaged.</li> <li>Set the timer to a desired duration or press and hold the power button if using "PULSE".</li> </ul> |
| Grinding is inconsistent or very slow. | <ul style="list-style-type: none"> <li>Burrs are clogged with old coffee grounds.</li> <li>Too many beans in the hopper.</li> <li>Grind setting is too fine for the beans.</li> </ul> | <ul style="list-style-type: none"> <li>Unplug the unit and clean the burr grinding mechanism thoroughly (see Maintenance section).</li> <li>Reduce the amount of coffee beans in the hopper.</li> <li>Try a slightly coarser grind setting.</li> </ul>   |
| Grinder makes unusual noises.          | <ul style="list-style-type: none"> <li>Foreign object in the burrs.</li> <li>Burrs are worn.</li> </ul>   | <ul style="list-style-type: none"> <li>Immediately unplug and inspect the burrs for any foreign objects. Remove carefully.</li> <li>If burrs are worn, contact customer support for replacement options.</li> </ul>  |

## SPECIFICATIONS

| Feature                | Detail                                     |
|------------------------|--|
| Brand                  | MPM  |
| Model Number           | MMK-05                                     |
| Color                  | Black                                      |
| Dimensions (L x W x H) | 20 x 20 x 20 cm (approximately)            |
| Capacity               | 60 Grams (coffee beans)                    |
| Power                  | 100 Watts                                  |
| Voltage                | 220V                                       |
| Material               | Stainless Steel (burrs), Plastic (housing) |
| Item Weight            | 998 g                                      |
| Grind Settings         | 17 levels (Fine to Coarse)                 |
| Timer                  | Up to 60 seconds, plus Pulse function      |

## WARRANTY AND SUPPORT

The MPM MMK-05 Coffee Grinder comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact MPM customer service. Contact information can typically be

found on the manufacturer's website or on the product packaging.

**Spare Parts Availability:** 2 Years (as per product specifications).

© 2023 MPM. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.