

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Indesit](#) /
- › [Indesit Innex Washer Dryer XWDE-751480XSUK User Manual](#)

Indesit XWDE-751480XSUK

Indesit Innex Washer Dryer

Model: XWDE-751480XSUK

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Indesit Innex Washer Dryer, model XWDE-751480XSUK. This appliance is designed to combine both washing and drying functions in a single unit, offering convenience and space-saving benefits. Please read these instructions carefully before using the appliance and retain them for future reference.



Figure 1: Front view of the Indesit Innex Washer Dryer XWDE-751480XSUK. This image shows the appliance's control panel,

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washer dryer. It is recommended to have the appliance installed by a qualified technician.

Unpacking

- Remove all packaging materials, including the polystyrene base and any inserts holding the drum.
- Remove the transport bolts located at the rear of the appliance. These bolts secure the drum during transit and must be removed before use. Keep them for future transport.

Positioning

- Place the appliance on a flat, stable floor, ensuring there is adequate space around it for ventilation and access.
- Adjust the feet to level the appliance. A level appliance reduces vibration and noise during operation.

Water and Electrical Connections

- Connect the water inlet hose to a cold water tap. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or secure it to a sink. Ensure the hose is not kinked.
- Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters.

OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Indesit Innex Washer Dryer.

Control Panel Overview



Figure 2: Detailed view of the control panel, showing the program selector dial, Push&Wash+Dry button, and digital display.

The control panel features a program selector dial, function buttons, and a digital display. Familiarize yourself with these components for optimal use.

- **Program Selector Dial:** Used to select the desired wash or dry program.
- **Push&Wash+Dry Button:** A quick, one-touch program for mixed cottons and synthetics.
- **Digital Display:** Shows program duration, remaining time, and selected options.
- **Start/Pause Button:** Initiates or pauses the selected program.

Loading Laundry



Figure 3: The washer dryer with its door open, revealing the stainless steel drum ready for loading laundry.

- Open the appliance door and load laundry into the drum. Do not overload the machine. The maximum wash capacity is 7 kg, and the maximum dry capacity is 5 kg.
- Add detergent and fabric softener to the appropriate compartments in the dispenser drawer.



Figure 4: The detergent dispenser drawer pulled out, showing compartments for pre-wash, main wash, and fabric softener.

Selecting a Program

Your washer dryer offers 16 wash programs and integrated drying cycles.

1. Turn the program selector dial to the desired wash or dry program. Refer to the program chart (see Specifications section) for details on each cycle.
2. For a quick and easy cycle, press the **Push&Wash+Dry** button. This automatically selects a program suitable for mixed cottons and synthetics.
3. The digital display will show the estimated program duration. You can adjust certain options (e.g., spin speed, temperature) if available for the selected program.
4. Press the **Start/Pause** button to begin the cycle.

The appliance features an **Inverter Motor** for quiet operation and energy efficiency, and a maximum spin speed of 1400 RPM for effective water extraction.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your appliance.

Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Rinse it under running water to remove any detergent or softener residue.
- Clean the housing of the dispenser drawer with a brush.
- Reinsert the drawer.

Cleaning the Door Seal

- Regularly wipe the rubber door seal with a damp cloth to remove lint and residue.
- Ensure no foreign objects are trapped in the seal.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Auto Clean Function

The appliance features an "Auto Clean" function to maintain the drum and internal components. Consult your program chart for how to activate this cycle.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not start	Power cord not plugged in; door not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure door is firmly closed; select a program; press Start/Pause.
No water filling	Water tap closed; water inlet hose kinked; water supply cut off.	Open water tap; straighten hose; check household water supply.
Appliance vibrates excessively	Transport bolts not removed; appliance not level; laundry unevenly distributed.	Remove transport bolts; adjust leveling feet; redistribute laundry in the drum.
Clothes are not dry enough after drying cycle	Overloaded dryer; incorrect drying program selected; lint filter clogged.	Reduce load size; select a more intensive drying program; clean the lint filter.

SPECIFICATIONS

Feature	Detail
Model	XWDE-751480XSUK
Brand	Indesit
Wash Capacity	7 kg
Dry Capacity	5 kg
Maximum Spin Speed	1400 RPM
Number of Wash Programs	16
Control Type	Touch
Access Location	Front Load
Drum Material	Stainless Steel

Feature	Detail
Special Features	Inverter Motor, Push&Wash+Dry, Auto Clean
Product Dimensions (D x W x H)	35.6 x 35.6 x 85 cm
Item Weight	67.5 kg

Program Chart (Example)

Program No.	Program Name	Description / Fabric Type
1	Sport	For sportswear and light dirt.
2	Dark	For dark garments to prevent fading.
3	Anti-odour	Removes unpleasant odors from fabrics.
4	Delicate	For delicate items requiring gentle care.
5	Wool	Specific program for wool garments.
6	Rapid 30'	Quick wash cycle for lightly soiled items.
7	White Cotton 90°	High temperature wash for white cottons.
8	Synthetic	For synthetic fabrics.
9	Coloured	For colored garments.
10	Eco Cotton 40°/60°	Energy-efficient cotton wash at 40°C or 60°C.
11	Eco Cotton 20°	Low temperature cotton wash for energy saving.
12	Eco Synthetic 20°	Low temperature synthetic wash for energy saving.
13	Wash & Dry 45'	Combined wash and dry cycle in 45 minutes.
14	AirFresh	Refreshes garments with air, without water.
-	Rinse	Separate rinse cycle.
-	Spin + Drain	Separate spin and drain cycle.

WARRANTY AND SUPPORT

Your Indesit Innex Washer Dryer is covered by a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including coverage period and what is covered.

For technical assistance, spare parts, or to report a fault, please contact Indesit Customer Service. Have your appliance model number (XWDE-751480XSUK) and serial number ready when you call.

You may also visit the official Indesit website for support resources, FAQs, and service center locations.

www.indesit.com

Extended warranty options may be available from your retailer or third-party providers. For example, 1-Year and 2-Year Extended Warranties by Salama Care are listed as options for this product.

© 2024 Indesit. All rights reserved.

This manual is for informational purposes only. Indesit reserves the right to make changes to its products without prior notice.