

- › [ECS Elitegroup](#) /
- › [ECS Elitegroup AMD Socket FM2+ A68F2P-M4 Motherboard User Manual](#)

ECS Elitegroup A68F2P-M4

ECS Elitegroup AMD Socket FM2+ A68F2P-M4 Motherboard User Manual

Model: A68F2P-M4 (1.0)

1. INTRODUCTION

This manual provides detailed instructions for the installation, configuration, and operation of your ECS Elitegroup A68F2P-M4 motherboard. This Micro ATX motherboard is designed for AMD Socket FM2+ APUs, supporting both "Kaveri" and backward-compatible "Richland" and "Trinity" series processors. It features DDR3 memory support, PCI-Express 3.0, SATA 3 Gb/s connectivity, and integrated display outputs.



Image 1.1: Retail packaging of the ECS Elitegroup A68F2P-M4 motherboard.

2. KEY FEATURES

- **Socket FM2+ Support:** Compatible with AMD A-Series "Kaveri" APUs and backward compatible with "Richland" and "Trinity" APUs.
- **Memory Support:** Two DDR3 DIMM slots supporting up to 32 GB of dual-channel DDR3 memory.
- **Expansion Slots:** One PCI-Express 3.0 x16 slot and one PCI-Express 3.0 x1 slot.
- **Storage:** Four SATA 3 Gb/s ports for connecting storage devices.
- **Integrated Graphics:** Display outputs including HDMI and D-Sub (VGA).
- **Connectivity:** Four USB 3.0 ports, six USB 2.0 ports, Gigabit Ethernet, and PS/2 connectors.
- **Audio:** 6-channel HD audio.

3. PACKAGE CONTENTS

Verify that all items are present in your motherboard package. If any items are missing or damaged, contact your retailer.

- ECS Elitegroup A68F2P-M4 Motherboard
- I/O Shield
- SATA Data Cables (quantity may vary)
- Driver CD/DVD
- Quick Installation Guide

4. SETUP AND INSTALLATION

4.1. Pre-Installation Checks

- Ensure your power supply is compatible with ATX standards and provides sufficient wattage.
- Prepare your computer case for motherboard installation.
- Gather all necessary components: CPU, CPU cooler, RAM, storage devices, and graphics card (if not using integrated graphics).
- Always handle the motherboard by its edges to avoid static discharge. Use an anti-static wrist strap if available.

4.2. Motherboard Installation

1. Install the I/O shield into the rear opening of your computer case.
2. Carefully align the motherboard with the standoffs in your case.
3. Secure the motherboard with screws, ensuring it is firmly seated.



Image 4.1: The ECS Elitegroup A68F2P-M4 motherboard alongside its retail packaging.

4.3. CPU Installation (Socket FM2+)

1. Locate the CPU socket on the motherboard. Lift the load lever to open the socket.
2. Align the triangular mark on the CPU with the corresponding mark on the socket.
3. Gently place the CPU into the socket. Do not force it.
4. Lower the load lever to secure the CPU in place.
5. Install the CPU cooler according to its manufacturer's instructions.



Image 4.2: An angled view of the ECS Elitegroup A68F2P-M4 motherboard, highlighting the CPU socket and DIMM slots.

4.4. RAM Installation

1. Open the clips at both ends of the DDR3 DIMM slots.
2. Align the notch on the RAM module with the notch in the DIMM slot.
3. Press down firmly on both ends of the RAM module until the clips snap into place.

4.5. Storage Device Connection

Connect your SATA storage devices (HDDs, SSDs) to the SATA 3 Gb/s ports on the motherboard using SATA data cables. Connect the power cables from your power supply to the storage devices.

4.6. Power Connections

- Connect the 24-pin ATX power connector from your power supply to the main power socket on the motherboard.
- Connect the 4-pin CPU power connector (ATX12V) from your power supply to the corresponding socket near the CPU.

4.7. Front Panel Connectors

Connect the front panel cables from your computer case (power button, reset button, HDD LED, power LED, front USB, front audio) to the corresponding headers on the motherboard. Refer to the motherboard diagram for exact pin assignments.

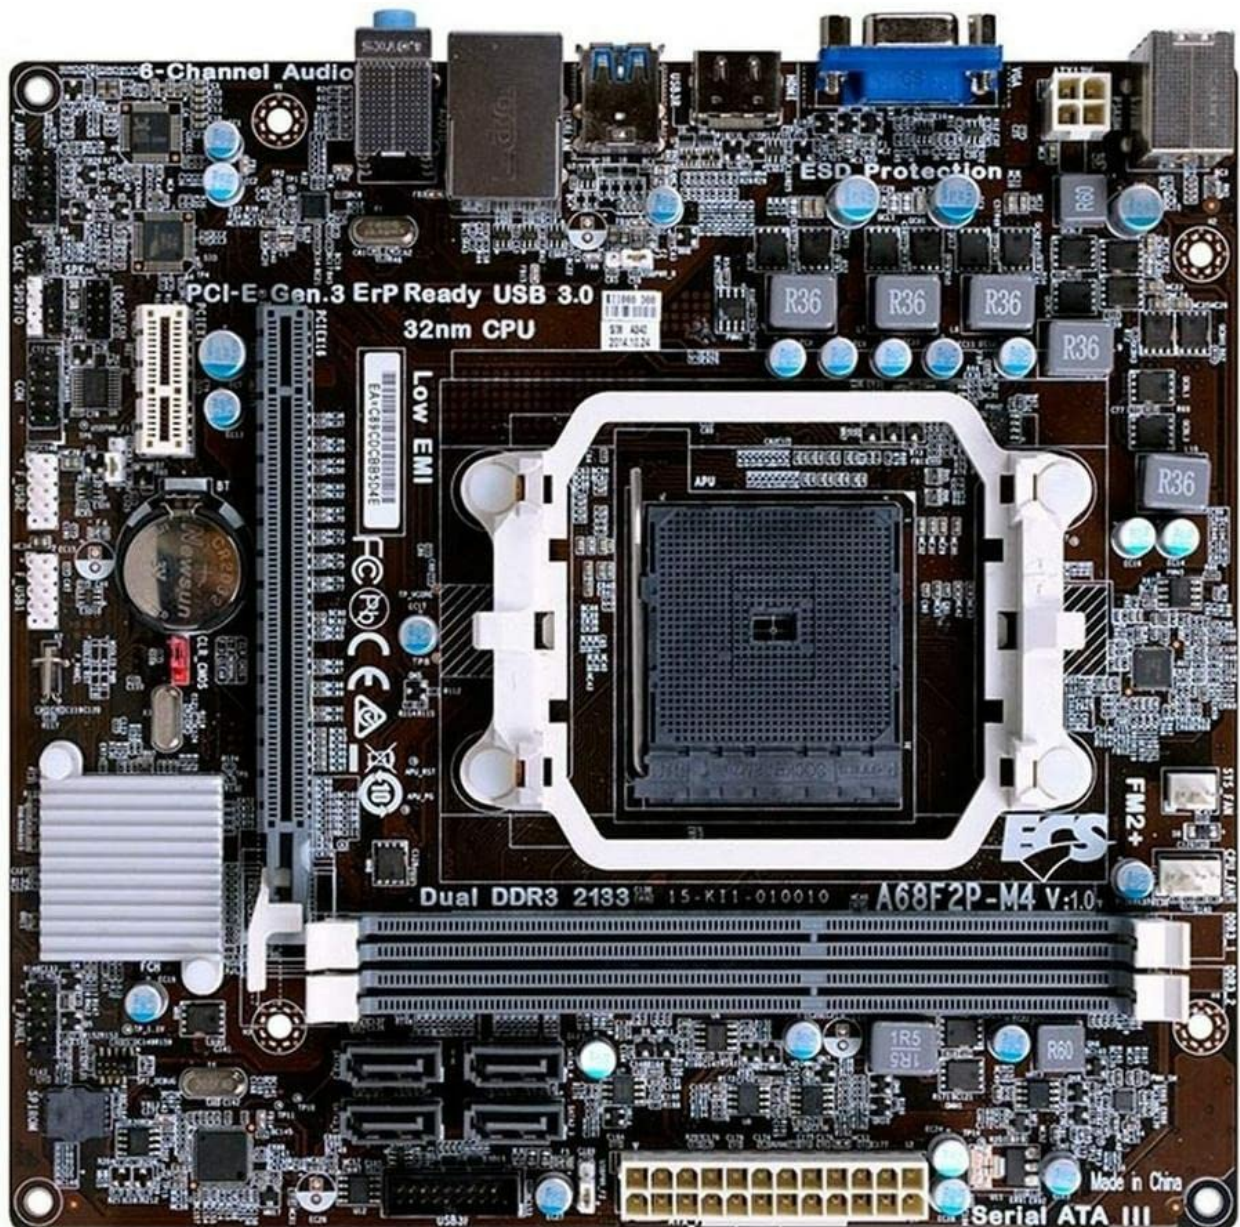


Image 4.3: A top-down view of the ECS Elitegroup A68F2P-M4 motherboard, showing all major components and connectors.

4.8. Expansion Cards

If installing a dedicated graphics card or other PCI-Express expansion cards, insert them into the appropriate PCI-Express slots and secure them with the case's retention mechanism.

5. OPERATING INSTRUCTIONS

5.1. First Boot and BIOS Setup

1. After connecting all components and peripherals, power on your system.
2. Press the designated key (usually **DEL** or **F2**) during startup to enter the BIOS/UEFI setup utility.
3. Configure boot order, date/time, and other system settings as needed. Save changes and exit.

5.2. Driver Installation

After installing your operating system, install the necessary drivers for the motherboard's components (chipset, audio, LAN, integrated graphics) from the provided driver CD/DVD or the ECS Elitegroup website. This ensures optimal performance and stability.

5.3. Operating System Installation

Insert your operating system installation media (USB drive or DVD) and follow the on-screen instructions to install the operating system on your chosen storage device.

6. MAINTENANCE

6.1. Cleaning

Regularly clean dust from inside your computer case and motherboard components using compressed air. Ensure the system is powered off and unplugged before cleaning.

6.2. BIOS Updates

Periodically check the ECS Elitegroup website for BIOS updates. BIOS updates can improve system stability, compatibility, and performance. Follow the update instructions carefully to avoid system damage.

6.3. CMOS Battery Replacement

The motherboard uses a CR2032 lithium coin cell battery to retain BIOS settings and the system clock. If you experience issues with incorrect time or lost BIOS settings, the battery may need replacement. Ensure the system is powered off and unplugged before replacing the battery.

7. TROUBLESHOOTING

- **No Power:** Check all power connections (24-pin ATX, 4-pin CPU, power supply to wall outlet). Ensure the power supply switch is on.
- **No Display:** Verify that the monitor is connected to the correct display output (motherboard or graphics card). Reseat RAM modules and graphics card.
- **System Fails to Boot:** Check CPU and RAM installation. Ensure all necessary cables are connected. Clear CMOS settings by removing the CMOS battery for a few seconds or using the clear CMOS jumper (if available).
- **Operating System Not Found:** Check boot order in BIOS. Ensure storage devices are properly connected and detected.
- **Peripheral Issues:** Ensure drivers are installed correctly. Test peripherals in different ports.

8. SPECIFICATIONS

Feature	Specification
Brand	ECS Elitegroup
Model Number	A68F2P-M4 (1.0)
CPU Socket	Socket FM2+
Compatible Devices	Personal Computer
Chipset Type	AMD A68H

Memory Technology	DDR3 SDRAM
Maximum Memory Supported	32 GB
Memory Clock Speed	Up to 1800 MHz
Graphics Card Interface	PCI Express 3.0 x16
Storage Ports	4 x SATA 3 Gb/s
USB Ports	4 x USB 3.0, 6 x USB 2.0
Display Outputs	HDMI, D-Sub (VGA)
Connectivity Type	Gigabit Ethernet
Form Factor	Micro ATX
Dimensions (LxWxH)	21.08 x 20.07 x 3.81 cm (8.3 x 7.9 x 1.5 inches)
Item Weight	318 g
Batteries	1 Lithium Metal battery (CR2032) included









Image 8.1: Rear I/O panel of the ECS Elitegroup A68F2P-M4 motherboard, showing various connectivity ports.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official ECS Elitegroup website. Support resources typically include FAQs, driver downloads, and contact information for technical assistance.



Related Documents - A68F2P-M4

	<p>ECS Elitegroup Smart Watch WA068CR User Guide</p> <p>Comprehensive user guide for the ECS Elitegroup Smart Watch WA068CR, covering setup, features, software, battery, specifications, and safety precautions.</p>
	<p>ECS A68M-C4DL Motherboard User Guide</p> <p>Comprehensive user guide for the ECS A68M-C4DL motherboard. Provides detailed information on specifications, installation procedures, BIOS configuration, software utilities, and troubleshooting tips for building and maintaining desktop systems with AMD A-series APUs.</p>
	<p>ECS PF21 Extreme Motherboard User Manual: Features, Installation, and BIOS Guide</p> <p>Detailed user manual for the ECS PF21 Extreme motherboard. Learn about its features, installation steps, BIOS settings, and troubleshooting. Supports Intel Pentium 4 processors, DDR2 memory, and PCI Express.</p>
	<p>ECS H110I-C4P Motherboard User Guide</p> <p>Comprehensive user guide for the ECS DURATHON 2 series H110I-C4P motherboard, detailing installation, BIOS configuration, software setup, and troubleshooting.</p>
	<p>ECS H61H2-I5 Motherboard User Manual</p> <p>User manual for the ECS H61H2-I5 motherboard, detailing specifications, installation, BIOS setup, software, and troubleshooting.</p>
	<p>ECS H61H2-M5 Motherboard User Manual: Installation and Configuration Guide</p> <p>Comprehensive user manual for the ECS H61H2-M5 motherboard, detailing installation, BIOS setup, software configuration, and troubleshooting for Intel LGA1155 socket systems.</p>