

[manuals.plus](#) /› [EZICLEAN](#) /› [EZICLEAN E.Zichef & Mix Classic Multifunction Cooking Food Processor User Manual](#)

EZICLEAN E.ZICHEF & MIX CLASSIC

EZICLEAN E.Zichef & Mix Classic Multifunction Cooking Food Processor User Manual

Model: E.ZICHEF & MIX CLASSIC

1. INTRODUCTION

Thank you for choosing the EZICLEAN E.Zichef & Mix Classic Multifunction Cooking Food Processor. This appliance is designed to simplify your cooking tasks with its versatile functions. To ensure safe and efficient operation, please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions carefully before operating the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Ensure the lid is securely locked in place before operating the appliance.
- Exercise extreme caution when handling sharp blades. Always use the blade cover when storing or cleaning.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with hot surfaces, especially during and after cooking functions. Use oven mitts or handles.
- This appliance is for household use only. Do not use outdoors.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your E.Zichef & Mix Classic food processor.



Figure 3.1: The EZICLEAN E.Zichef & Mix Classic Multifunction Cooking Food Processor, fully assembled with its stainless steel bowl and control panel visible.



Figure 3.2: The base unit of the food processor, showing the motor housing and control panel without the cooking bowl attached. This view highlights the slot where the bowl is inserted.



Figure 3.3: Rear view of the EZICLEAN E.Zichef & Mix Classic, showing the ventilation grilles and power cord connection point. The stainless steel cooking bowl is in place.

Components:

- **Main Unit:** Contains the motor, control panel, and heating element.
- **Cooking Bowl:** 2-liter capacity, stainless steel.
- **Lid:** Secures the bowl during operation.
- **Blades:** Stainless steel blades for chopping, mixing, and blending.
- **Accessories:** (Specific accessories may vary, refer to packaging for full list)

4. SETUP

Follow these steps for initial setup before first use.

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or transport.
2. **Initial Cleaning:** Before first use, wash the cooking bowl, lid, and blades with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Assembly:**
 - Place the main unit on a stable, flat, and dry surface.
 - Insert the blades into the bottom of the cooking bowl.
 - Place the cooking bowl onto the main unit, ensuring it is securely seated.
 - Place the lid onto the cooking bowl and twist or lock it into position according to the markings on

the lid and bowl.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is now ready for use.

5. OPERATING INSTRUCTIONS

The E.Zichef & Mix Classic offers 10 functions and 10 motor speeds, with cooking temperatures up to 120°C.

Basic Operation:

1. **Add Ingredients:** Ensure the appliance is unplugged. Add your desired ingredients to the cooking bowl. Do not exceed the 2-liter maximum capacity.
2. **Secure Lid:** Place the lid on the bowl and lock it securely. The appliance will not operate if the lid is not properly closed.
3. **Power On:** Plug the appliance into the power outlet. The display will illuminate.
4. **Select Function/Settings:** Use the control panel dials and buttons to select your desired function (e.g., mixing, cooking), set the speed (1-10), and temperature (up to 120°C).
5. **Start/Stop:** Press the Start button to begin operation. Press it again to pause or stop.
6. **Pulse/Blender Function:** For short bursts of high-speed blending, use the dedicated Pulse/Blender button. Hold for desired duration.
7. **Monitor Progress:** Observe the cooking process through the lid (if transparent) or by pausing the appliance and carefully opening the lid.
8. **Finish:** Once cooking or processing is complete, press the Stop button and unplug the appliance. Carefully remove the lid and bowl.

Note: Always refer to specific recipe instructions for optimal speed, temperature, and time settings.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

- **Unplug:** Always unplug the appliance before cleaning.
- **Cool Down:** Allow the appliance to cool completely before cleaning, especially after cooking functions.
- **Hand Wash:** The cooking bowl, lid, and blades should be washed by hand with warm soapy water. Rinse thoroughly and dry immediately.
- **Dishwasher:** Do not place the cooking bowl, lid, or blades in a dishwasher.
- **Main Unit:** Wipe the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
- **Stubborn Residue:** For stubborn food residue, soak the bowl and blades in warm soapy water for a short period before cleaning.
- **Storage:** Store the appliance in a dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

If you encounter issues with your E.Zichef & Mix Classic, refer to the following common problems and solutions.

- **Appliance does not turn on:**

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the lid is correctly closed and locked. The appliance has a safety mechanism that prevents operation if the lid is not secured.

- **Motor stops during operation:**

- The appliance may have overheated. Unplug it and let it cool down for at least 30 minutes before attempting to use it again.
- Check if the bowl is overloaded. Reduce the amount of ingredients.

- **Unusual noise or vibration:**

- Ensure the appliance is on a stable, flat surface.
- Check that the blades are correctly installed and not obstructed by large pieces of food.

- **Food not processing evenly:**

- Ensure ingredients are cut into appropriate sizes before adding to the bowl.
- Adjust the speed setting or use the Pulse function for better control.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Brand	EZICLEAN
Model Number	E.ZICHEF & MIX CLASSIC
Power	1500 W
Functions	10
Maximum Temperature	Up to 120°C
Motor Speeds	10
Bowl Capacity	2 Liters
Noise Level	70 Decibels
Dimensions (L x W x H)	42.5 x 29.5 x 37.5 cm
Weight	4.7 Kilograms
Blade Material	Stainless Steel
Care Instructions	Hand wash. Do not put in dishwasher.

9. WARRANTY AND SUPPORT

Your EZICLEAN E.Zichef & Mix Classic Multifunction Cooking Food Processor comes with a **2-year warranty** from the date of purchase.

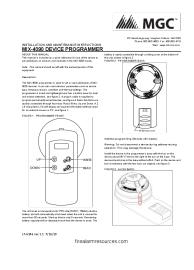
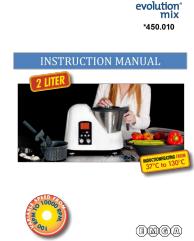
This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

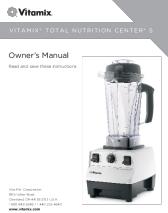
For warranty claims, technical support, or inquiries about spare parts, please contact EZICLEAN customer

service through their official website or the retailer where the product was purchased. Please have your proof of purchase and model number ready.

© 2023 EZICLEAN. All rights reserved.

Related Documents - E.ZICHEF & MIX CLASSIC

	<p><u>Manuel d'utilisation Eziclean Aqua Connect x1200 - Robot Aspirateur Laveur Connecté</u></p> <p>Ce manuel d'utilisation détaillé présente le robot aspirateur laveur connecté Eziclean Aqua Connect x1200. Il couvre l'installation, l'utilisation, la maintenance et les consignes de sécurité pour une performance optimale.</p>
	<p><u>Mircom MIX-4090 Device Programmer: Installation and Maintenance Guide</u></p> <p>Comprehensive guide for installing and maintaining the Mircom MIX-4090 Device Programmer, detailing its features, operation, address programming, and parameter reading for MIX-4000 series fire alarm devices.</p>
	<p><u>Simply GOOD Pizza Base Mix Recipe and Instructions</u></p> <p>A simple recipe and preparation guide for Simply GOOD Pizza Base Mix, including ingredients, steps, and tips for making delicious homemade pizza.</p>
	<p><u>Evolution Mix 450.010 Food Processor Instruction Manual</u></p> <p>Comprehensive instruction manual for the Evolution Mix 450.010 food processor, covering safety instructions, parts description, operation, maintenance, cleaning, troubleshooting, and technical specifications.</p>
	<p><u>Barrettsridge Cheese Flavour Beer Bread Mix: Recipe & Nutritional Information</u></p> <p>Easy-to-follow instructions for making Barrettsridge Cheese Flavour Beer Bread, including ingredients, nutritional values, and allergen information.</p>



[Vitamix Total Nutrition Center S Owner's Manual - Comprehensive Guide](#)

This owner's manual provides comprehensive instructions, safety guidelines, parts information, operating procedures, care and cleaning tips, troubleshooting advice, and warranty details for the Vitamix Total Nutrition Center S blender. Learn how to use and maintain your Vitamix for optimal performance and longevity.