



Manuals.plus /

› Proctor Silex /

› Proctor Silex 0.7 cu. ft. 700 Watt Microwave Oven Instruction Manual

Proctor Silex 6261048

Proctor Silex 0.7 cu. ft. 700 Watt Microwave Oven

Model: 6261048

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Always unplug from outlet when not in use and before cleaning.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use this appliance for commercial purposes.

PRODUCT OVERVIEW



Front view of the Proctor Silex 0.7 cu. ft. 700 Watt Microwave Oven, showcasing its black finish and digital display.



The microwave oven shown with a bowl of popcorn, illustrating its capacity and typical use.



Diagram showing the dimensions of the microwave oven: 18 inches wide, 12 inches deep, and 10 inches high.

SETUP AND INSTALLATION

1. Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check for any damage, such as dents or a broken door. Do not operate the microwave if it appears damaged. Contact customer support for assistance.

2. Placement

Place the microwave oven on a flat, stable surface that is strong enough to hold the oven and the food you place in it. Ensure there is adequate ventilation around the unit. Maintain a minimum of 4 inches (10 cm) of space on the top, back, and sides for proper airflow. The dimensions of the unit are approximately 18 inches (W) x 12 inches (D) x 10 inches (H).

3. Electrical Requirements

The microwave oven operates on a standard 120 Volt, 60 Hz AC power supply. Ensure the electrical outlet is properly grounded and can support 700 Watts of power. Do not use an extension cord unless absolutely necessary, and if so, ensure it is a grounded 3-wire cord with a rating equal to or greater than the appliance's rating.

4. Turntable Assembly

The microwave oven includes a glass turntable and a turntable support ring. Place the turntable support ring in the center of the microwave cavity. Then, place the glass turntable securely on top of the support ring, ensuring it sits properly in the center hub. The turntable must be in place for all cooking operations.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a digital display and various function buttons:

- **Digital Display:** Shows time of day, cooking time, and other indicators.
- **Number Pads (0-9):** Used to enter cooking times, clock time, and other numerical inputs.
- **Popcorn:** One-touch cooking for popcorn.
- **Baked Potato:** One-touch cooking for baked potatoes.
- **Pizza:** One-touch cooking for pizza.
- **Beverage:** One-touch cooking for beverages.
- **Frozen Dinner:** One-touch cooking for frozen dinners.
- **Reheat:** One-touch reheating function.
- **Power:** Adjusts cooking power level.
- **Timer:** Sets a kitchen timer.
- **Cook:** Initiates manual cooking.
- **Cook by Weight:** Cooks food based on entered weight.
- **Defrost by Weight:** Defrosts food based on entered weight.
- **Speed Defrost:** Quick defrost function.
- **Clock:** Sets the time of day.
- **Reset:** Clears current settings.
- **Start/Stop:** Starts or stops cooking.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the microwave door securely.
3. Enter the desired cooking time using the number pads.
4. Press the **Start/Stop** button to begin cooking.
5. To adjust power level: After entering time, press **Power**, then enter a power level (e.g., 9 for 90%, 5 for 50%). Press **Start/Stop**.

Using One-Touch Cooking Functions

For convenience, the microwave offers several pre-programmed settings:

- Press the desired one-touch button (e.g., **Popcorn**, **Baked Potato**). The microwave will automatically set the appropriate cooking time and power level.
- Press **Start/Stop** to begin.

Defrosting

The microwave offers two defrosting methods:

- **Speed Defrost:** Press **Speed Defrost**, then enter the desired defrosting time using the number pads. Press **Start/Stop**.
- **Defrost by Weight:** Press **Defrost by Weight**, then enter the weight of the food in pounds (e.g., 1.5 for 1.5 lbs). Press **Start/Stop**.

MAINTENANCE AND CARE

Cleaning the Microwave Oven

Regular cleaning helps maintain the performance and appearance of your microwave oven.

- **Interior:** After each use, wipe the interior with a damp cloth and mild detergent. For stubborn stains, place a bowl of

water with lemon slices inside and microwave for 2-3 minutes to loosen food particles, then wipe clean.

- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.
- **Turntable and Support Ring:** The glass turntable and support ring can be washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the microwave.
- **Door Seal:** Keep the door seal and adjacent parts clean. Wipe with a damp cloth.

Caution: Always unplug the microwave oven before cleaning. Do not use harsh chemicals or abrasive materials on any part of the microwave.

TROUBLESHOOTING

If you experience issues with your microwave oven, consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Microwave does not start.	Door is not closed properly. Power cord is not plugged in. Fuse is blown or circuit breaker tripped.	Ensure the door is securely latched. Plug the power cord firmly into a grounded outlet. Check your household fuse/circuit breaker box.
Food is not cooking or heating properly.	Cooking time is too short. Power level is set too low. Food quantity is too large.	Increase cooking time. Adjust power level to a higher setting. Reduce food quantity or increase cooking time.
Turntable does not rotate.	Turntable is not properly seated on the support ring. Debris under the turntable or support ring.	Remove and re-seat the turntable and support ring. Ensure they are correctly aligned. Clean the area beneath the turntable and support ring.
Control panel is unresponsive or erratic.	Temporary electronic glitch.	Unplug the microwave from the power outlet for 30 seconds, then plug it back in. This may reset the control panel.

SPECIFICATIONS

Brand: Proctor Silex

Model Number: 6261048

Capacity: 0.7 Cubic Feet

Wattage: 700 Watts

Voltage: 120 Volts

Product Dimensions (W x D x H): 18" x 12" x 10"

Installation Type: Countertop

Included Components: Turntable

Controller Type: Touch

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Proctor Silex customer service. Keep your purchase receipt

and model number (6261048) handy for faster service.

You can typically find contact information on the manufacturer's official website or within the product packaging.

Note: Warranty terms and conditions may vary. Please refer to the warranty card included with your product for specific details.