

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fresh 'n Rebel](#) /
- › [Fresh 'n Rebel Lace In Ear Headphones User Manual](#)

Fresh 'n Rebel 3EP100PT

Fresh 'n Rebel Lace In Ear Headphones User Manual

Model: 3EP100PT

INTRODUCTION

Thank you for choosing Fresh 'n Rebel Lace In Ear Headphones. This manual provides detailed instructions for the proper use, setup, and maintenance of your new headphones. Please read this manual carefully before use to ensure optimal performance and longevity of your product.

PRODUCT OVERVIEW

The Fresh 'n Rebel Lace In Ear Headphones are designed for comfortable listening with a focus on clear audio and ease of use. They feature a durable flat cable and an inline remote for convenient control.



Figure 1: Close-up view of the earbuds and inline remote.



Figure 2: Complete view of the headphones, including the cable and 3.5mm jack.

Components:

- **Earbuds:** Designed for in-ear comfort and sound delivery.
- **Inline Remote with Microphone:** Allows for music control and hands-free calls.
- **Flat Cable:** Tangle-resistant design for durability and ease of storage.
- **3.5mm Audio Jack:** Standard connector for compatibility with various devices.

SETUP

1. **Identify Left and Right Earbuds:** Each earbud is marked with 'L' for left and 'R' for right. Insert them into the corresponding ears for optimal sound experience.
2. **Connect to Audio Device:** Insert the 3.5mm audio jack firmly into the headphone port of your smartphone, tablet, computer, or other compatible audio device.
3. **Adjust Volume:** Adjust the volume on your audio device to a comfortable listening level before playing audio.



Figure 3: Headphones connected to a smartphone.

OPERATING INSTRUCTIONS

The inline remote provides convenient control over your audio playback and calls.

Action	Button Press	Function
Play/Pause Music	Single press the center button	Toggles music playback.
Next Track	Double press the center button	Skips to the next song.
Previous Track	Triple press the center button	Returns to the beginning of the current song or skips to the previous song. (Functionality may vary with Android devices)
Answer/End Call	Single press the center button	Answers an incoming call or ends an active call.
Decline Call	Press and hold the center button	Rejects an incoming call.

Action	Button Press	Function
Activate Voice Assistant	Press and hold the center button (when not on a call)	Activates Siri, Google Assistant, or other voice assistants.

Note: Volume control is managed directly on your connected audio device.

MAINTENANCE

- **Cleaning:** Gently wipe the earbuds and cable with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the headphones in a clean, dry place, preferably in their original packaging or a protective pouch to prevent tangling and damage.
- **Avoid Moisture:** Keep the headphones away from water, excessive humidity, and extreme temperatures.
- **Handle with Care:** Avoid pulling on the cable or the jack forcefully. Always grasp the plug when disconnecting from a device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low volume	<ul style="list-style-type: none"> • Headphones not fully plugged in. • Device volume too low or muted. • Incorrect audio output selected on device. • Damaged cable or jack. 	<ul style="list-style-type: none"> • Ensure the 3.5mm jack is fully inserted into the device's port. • Increase the volume on your audio device. • Check your device's audio settings to ensure output is directed to the headphones. • Try the headphones with another device to rule out a device issue. If still no sound, the headphones may be damaged.
Sound only from one earbud	<ul style="list-style-type: none"> • Headphones not fully plugged in. • Device audio balance settings. • Damaged earbud or cable. 	<ul style="list-style-type: none"> • Ensure the 3.5mm jack is fully inserted. • Check your device's audio settings for balance control and ensure it's centered. • Try with another device. If the issue persists, one earbud or the cable may be damaged.
Inline remote not working	<ul style="list-style-type: none"> • Incompatibility with device. • Damaged remote. 	<ul style="list-style-type: none"> • Some remote functions (e.g., previous track) may have limited compatibility with certain Android devices. • Ensure the jack is fully inserted. • Try with another device. If the remote still doesn't respond, it may be damaged.

SPECIFICATIONS

- **Model:** 3EP100PT
- **Connectivity:** Wired (3.5mm Jack)

- **Ear Placement:** In Ear
- **Form Factor:** In Ear
- **Cable Feature:** Retractable (referring to the flat, tangle-free design)
- **Noise Control:** Active Noise Cancellation
- **Item Weight:** 1.76 ounces (0.05 Kilograms)
- **Product Dimensions:** 0.79 x 0.79 x 0.79 inches (approximate earbud dimensions)
- **Manufacturer:** Fresh 'N Rebel

WARRANTY AND SUPPORT

Fresh 'n Rebel products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Fresh 'n Rebel website. If you encounter any issues not covered in this manual, or require further assistance, please contact Fresh 'n Rebel customer support through their official channels.

For more information, visit: www.freshnrebel.com