

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Solight](#) /

› [Solight TE09 Weather Station User Manual](#)

Solight TE09

Solight TE09 Weather Station User Manual

Model: TE09

INTRODUCTION

Thank you for choosing the Solight TE09 Weather Station. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.

PACKAGE CONTENTS

Please check the package contents upon unpacking. If any items are missing or damaged, contact your retailer.

- Solight TE09 Weather Station Unit
- User Manual (this document)

PRODUCT OVERVIEW

The Solight TE09 Weather Station is designed to provide accurate indoor temperature and humidity readings. Its compact design makes it suitable for various indoor environments.



Image 1: Front view of the Solight TE09 Weather Station, displaying its screen and compact white casing.

Key Components:

- LCD Display:** Shows temperature, humidity, and other relevant information.
- Control Buttons:** For setting time, units, and other functions.
- Battery Compartment:** Located on the back of the unit.

SETUP

1. Battery Installation

- Locate the battery compartment cover on the back of the Solight TE09 Weather Station.
- Slide or unclip the cover to open it.
- Insert 1.5V AAA alkaline batteries (not included) according to the polarity indicators (+ and -) inside the compartment.
- Close the battery compartment cover securely.

Note: Ensure batteries are inserted correctly. Incorrect insertion may damage the device.

2. Initial Power-On and Placement

- Once batteries are installed, the device will power on automatically and display initial readings.
- Place the weather station in a suitable indoor location, away from direct sunlight, heat sources, and drafts, which could affect temperature and humidity accuracy.
- Allow the device a few minutes to stabilize and display accurate readings after initial setup.

OPERATING INSTRUCTIONS

1. Displaying Temperature and Humidity

The main display continuously shows the current indoor temperature and humidity. No specific action is required to view these readings.

2. Changing Temperature Units (Celsius/Fahrenheit)

To switch between Celsius (°C) and Fahrenheit (°F):

- Locate the "°C/°F" button, usually on the back or side of the unit.
- Press the button once to toggle between the two temperature units. The display will update accordingly.

3. Setting Time and Date (if applicable)

Note: The Solight TE09 is primarily a temperature and humidity monitor. If your model includes time/date functionality, follow these general steps:

- Press and hold the "SET" or "MODE" button for a few seconds until the time display starts flashing.
- Use the "UP" or "DOWN" buttons to adjust the hour, then press "SET" or "MODE" to confirm and move to minutes.
- Repeat for minutes, then for date (year, month, day) if available.
- Press "SET" or "MODE" again to exit the setting mode.

MAINTENANCE

1. Cleaning the Device

- Wipe the exterior of the weather station with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, alcohol, or corrosive chemicals, as these can damage the surface and internal components.
- Ensure no liquid enters the device.

2. Battery Replacement

- When the display becomes dim or the device stops functioning, it's time to replace the batteries.
- Follow the "Battery Installation" steps in the Setup section to replace the old batteries with new 1.5V AAA alkaline batteries.
- Dispose of old batteries responsibly according to local environmental regulations.

3. Storage

If the device will not be used for an extended period, remove the batteries to prevent leakage and store the unit in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No display or dim display.	Batteries are dead or incorrectly inserted.	Replace batteries with new 1.5V AAA alkaline batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Inaccurate temperature/humidity readings.	Device placed near heat sources, direct sunlight, or drafts.	Relocate the weather station to a stable indoor environment away from interfering factors. Allow time for readings to stabilize.
Buttons are unresponsive.	Temporary software glitch or low battery.	Remove and reinsert batteries to reset the device. If the issue persists, replace batteries.

SPECIFICATIONS

- **Model:** Solight TE09
- **Color:** White
- **Material:** Plastic
- **Power Source:** Battery (AAA alkaline, 1.5V)
- **Batteries Included:** No
- **GTIN:** 08592718012212
- **Manufacturer:** Solight
- **First Available Date:** October 7, 2018

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.