

Archos T101 HD WIFI 2+16

Archos T101 HD Tablet User Manual

Model: T101 HD WIFI 2+16

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient use of your Archos T101 HD Tablet. The Archos T101 HD is a 10.1-inch touchscreen tablet featuring a 4-core 1.5 GHz processor, 2 GB RAM, and 16 GB of internal storage, running on Android 11 Go Edition. It is designed for everyday tasks, media consumption, and light productivity.



Figure 1.1: The Archos T101 HD Tablet. This image displays the tablet from an angled perspective, highlighting its 10.1-inch display with various app icons and a search bar, indicating its user interface.

2. SETUP

2.1. Initial Charging

Before first use, fully charge your tablet. Connect the provided USB cable to the tablet's charging port and the other end to a compatible USB power adapter (not always included) or a computer's USB port. The charging indicator will show the charging status.

2.2. Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the Archos logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power menu appears. Select "Power off" from the options.
- **To Restart:** From the power menu, select "Restart".

2.3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. Follow the on-screen prompts to:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account (or create a new one).
4. Set up screen lock and other security features.
5. Review and accept terms and conditions.

2.4. Inserting a MicroSD Card

The tablet supports expandable storage via a MicroSD card. Locate the MicroSD card slot (usually on the side or top edge). Gently insert the MicroSD card into the slot until it clicks into place. Ensure the card is oriented correctly as indicated by the slot's icon.

3. OPERATING THE TABLET

3.1. Basic Navigation

The Archos T101 HD uses a capacitive touchscreen for interaction:

- **Tap:** To select an item or open an app.
- **Tap & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.

3.2. Wi-Fi Connectivity

To connect to a Wi-Fi network:

1. Go to *Settings > Network & internet > Wi-Fi*.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

3.3. Using the Cameras

The tablet features a 2 MP front camera and a 5 MP rear camera. Open the Camera app to take photos or record videos. You can switch between front and rear cameras within the app interface.

3.4. USB On-The-Go (OTG)

The Archos T101 HD supports USB OTG, allowing you to connect compatible USB devices such as flash drives, keyboards, or mice directly to the tablet using an appropriate OTG adapter (not included).

3.5. Installing Applications

Applications can be downloaded and installed from the Google Play Store. Ensure you are connected to Wi-Fi and signed in with your Google account to access the Play Store.

4. MAINTENANCE

4.1. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid using harsh chemicals or abrasive materials.

4.2. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not let the battery completely drain frequently.
- Use only approved chargers and cables.

4.3. Software Updates

Regularly check for system updates to ensure optimal performance and security. Go to *Settings > System > System update* to check for and install available updates.

4.4. Storage Management

To free up internal storage, regularly clear app caches, uninstall unused applications, and transfer large files to a MicroSD card or cloud storage. Go to *Settings > Storage* to manage your device's storage.

5. TROUBLESHOOTING

5.1. Common Issues and Solutions

- **Tablet not turning on:** Ensure the battery is charged. Connect to a charger and wait a few minutes before attempting to power on again.
- **Wi-Fi connection issues:**
 - a. Ensure Wi-Fi is enabled in settings.
 - b. Restart your Wi-Fi router.
 - c. Forget the network in tablet settings and reconnect.
- **Apps crashing or freezing:**
 - a. Close and reopen the app.
 - b. Clear the app's cache (*Settings > Apps & notifications > [App Name] > Storage & cache > Clear cache*).
 - c. Restart the tablet.
- **Slow performance:**
 - a. Close unused apps running in the background.

- b. Free up storage space.
- c. Restart the tablet regularly.

5.2. Factory Reset

If issues persist, a factory reset can resolve many software-related problems. **Warning:** A factory reset will erase all data on your tablet. Back up important data before proceeding. Go to *Settings > System > Reset options > Erase all data (factory reset)*.

6. SPECIFICATIONS

| Feature | Specification |
|-------------------------|--------------------------------------|
| Brand | Archos |
| Model Name | T101 HD WIFI 2+16 |
| Model Number | 14134808000 |
| Operating System | Android 11 Go |
| Display Size | 10.1 Zoll (inches) |
| Screen Resolution | 1280 x 800 Pixels |
| Processor Brand | Rockchip |
| Processor Speed | 1.5 GHz |
| Processor Cores | 4 |
| RAM Size | 2 GB (DDR3 SDRAM) |
| Storage Capacity | 16 GB |
| Connectivity Type | WLAN (802.11g) |
| Rear Webcam Resolution | 5 MP |
| Front Webcam Resolution | 2 MP |
| Color | Grey |
| Item Weight | 650 g |
| Special Features | Memory Card Reader, Supports USB OTG |

7. WHAT'S IN THE BOX

The Archos T101 HD Tablet package typically includes:

- Archos T101 HD Tablet
- USB Cable
- USB OTG Adapter (if included, based on "USB OTG" in whats_in_the_box)
- Quick Start Guide (not explicitly mentioned but common)

Note: Contents may vary based on region and specific package.

8. WARRANTY AND SUPPORT

8.1. Warranty Information

Your Archos T101 HD Tablet comes with a 2-year manufacturer's warranty, covering defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the warranty card included in your product packaging or visit the official Archos website.

8.2. Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Archos customer support. You can typically find contact information (phone, email, or support portal) on the official Archos website:

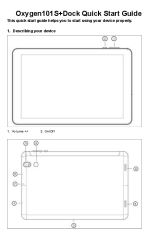



[Visit Archos Support Website](#)



© 2024 Archos. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - T101 HD WIFI 2+16

| | |
|---|--|
|  | <p>ARCHOS T101 HD WiFi Tablet - Quick Start Guide and Specifications</p> <p>Comprehensive guide for the ARCHOS T101 HD WiFi tablet, covering setup, device description, specifications, technical details, and compliance information.</p> |
|  | <p>ARCHOS FIELBOOK LD140 : Le Lapdock Durci Intelligent pour Smartphone</p> <p>Découvrez le FIELBOOK LD140 d'ARCHOS et Logic Instrument, un lapdock 14 pouces durci conçu pour transformer votre smartphone Android en poste de travail mobile sécurisé et résistant, idéal pour les environnements exigeants.</p> |

| | |
|---|---|
|  | <p>Oxygen101S+Dock Quick Start Guide - Setup and Specifications</p> <p>Quick start guide for the Oxygen101S+Dock, covering device description, getting started with SIM/SD cards, main specifications, and regulatory compliance information.</p> |
|  | <p>ARCHOS Conditions d'Utilisation et Garantie</p> <p>Ce document détaille les conditions d'utilisation et la garantie des produits ARCHOS, incluant des consignes de sécurité importantes, des conseils pour l'entretien de la batterie et des informations sur la gestion environnementale.</p> |
|  | <p>ARCHOS Reports Strong Revenue Growth of 27% in First Half of 2025</p> <p>ARCHOS announces a 27% revenue increase in the first half of 2025, reaching 21 million euros. The company highlights strategic acquisitions, partnerships, and expansion into digital transformation, secure hosting, and cybersecurity.</p> |
|  | <p>Archos Camera 100 User Guide: Setup, Features, and Specifications</p> <p>Comprehensive user guide for the Archos Camera 100 add-on module, detailing technical specifications, connection instructions, photo and video recording, and technical support information for Archos Jukebox Multimedia and AV devices.</p> |