

[manuals.plus](#) /› [SONOROUS](#) /› [SONOROUS ST-160 Premium TV Stand Instruction Manual](#)**SONOROUS ST-160**

SONOROUS ST-160 Premium TV Stand Instruction Manual

Model: ST-160

Contents	Introduction	Safety Information	Package
Assembly	Operation	Maintenance	Troubleshooting
			Specifications

1. INTRODUCTION

Thank you for choosing the SONOROUS ST-160 Premium TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. The ST-160 is designed to accommodate televisions up to 75 inches, offering a sleek black glass cover and black wood finish, along with practical storage solutions for your media components.



Image 1.1: The SONOROUS ST-160 TV Stand in a living room environment.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Ensure proper assembly according to the instructions provided.
- Adhere to all weight limits for the top shelf and overall stand capacity to prevent tip-over or structural failure.
- Use caution when moving the assembled unit. It is recommended to have at least two people for relocation due to its weight.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Do not allow children to climb on or play with the TV stand.
- Place the stand on a level, stable surface to prevent wobbling or tipping.
- Avoid placing hot items directly on the surface without protective padding.

Safety information: Ensure proper assembly, follow weight limits, and use caution when moving to avoid tip-over or injury.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. The SONOROUS ST-160 TV Stand typically arrives in two packages due to its weight and size.

Expected components include:

- Main cabinet panels (top, bottom, sides, back)
- Frosted glass door panels
- Adjustable internal shelves
- Hidden casters
- Push-to-open door mechanisms
- Assembly hardware (screws, dowels, cam locks, hinges, etc.)
- Instruction manual (this document)

If any parts are missing or damaged, please contact SONOROUS customer support immediately.

4. ASSEMBLY INSTRUCTIONS

Assembly of the SONOROUS ST-160 TV Stand requires careful attention to detail. It is recommended that two adults perform the assembly due to the weight and size of the components.

1. **Prepare the Area:** Clear a spacious, clean, and level area for assembly. Lay down a blanket or cardboard to protect the furniture pieces and your floor.
2. **Identify Components:** Unpack all boxes and identify each component using the provided parts list (if included separately). Refer to the dimensions diagram for clarity.

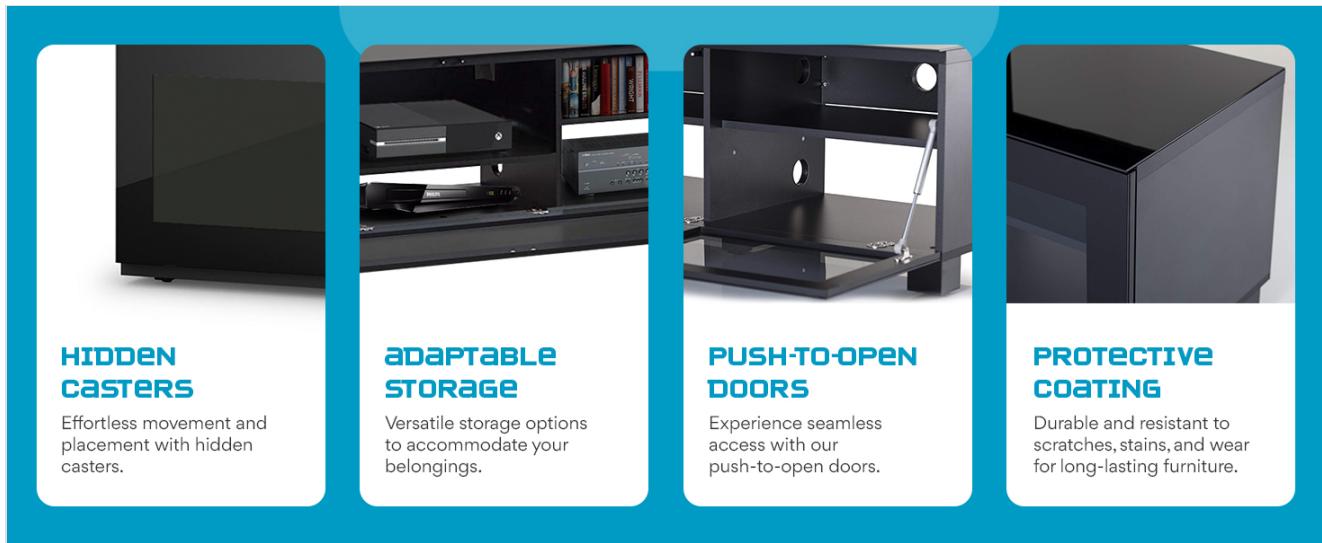


Image 4.1: Dimensions and internal layout of the ST-160 TV Stand.

3. **Assemble the Base:** Connect the bottom panel to the side panels using the provided hardware. Ensure all connections are secure.
4. **Install Internal Dividers and Shelves:** Insert the internal dividers. The shelves are adjustable; choose your desired height and secure them with the shelf pins.



Image 4.2: Adjustable shelving for flexible storage.

5. **Attach the Top Panel:** Carefully align and attach the top panel to the assembled structure. This step often requires two people due to the size and weight of the top panel. Ensure all pegs and holes align perfectly for a flush fit.
6. **Install Doors:** Attach the hinges to the frosted glass door panels and then to the main cabinet. Install the push-to-open mechanisms.



Image 4.3: Push-to-open doors for easy access.

7. **Attach Hidden Casters:** Secure the hidden casters to the bottom of the stand. These allow for effortless mobility.



Image 4.4: Hidden casters for effortless mobility.

8. **Final Check:** Ensure all screws are tightened and the stand is stable.

The total weight of the assembled stand is approximately 152 pounds. Exercise caution during and after assembly.

5. OPERATING INSTRUCTIONS

The SONOROUS ST-160 TV Stand is designed for intuitive use and efficient organization of your entertainment system.

- **Placing Your Television:** Position your TV centrally on the top surface. Ensure the TV's base fits within the stand's dimensions. The stand supports TVs up to 75 inches and a maximum top shelf load of 110 lbs.



Image 5.1: The ST-160 supports TVs up to 75 inches.

- **Accessing Storage:** The frosted glass doors operate with a push-to-open mechanism. Gently press the door to release the latch, and it will open smoothly. Press again to close and latch.
- **Organizing Media Components:** Utilize the adjustable internal shelves to store various devices such as game consoles, DVD/Blu-ray players, sound systems, and speakers. The frosted glass allows remote control signals to pass through, enabling operation of devices while concealed.



Image 5.2: Ample storage space for media components.

- **Cable Management:** The stand features cutouts in the back panel and internal dividers to facilitate organized cable routing, keeping wires tidy and out of sight.
- **Mobility:** The hidden casters allow for easy repositioning of the stand. When moving, ensure all doors are closed and latched, and remove any heavy items from the top surface.

6. MAINTENANCE

Proper care will ensure the longevity and appearance of your SONOROUS ST-160 TV Stand.

- Cleaning:** Wipe surfaces with a damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the high-gloss finish and glass.
- Dusting:** Regularly dust with a soft, dry cloth to prevent buildup.
- Spills:** Clean spills immediately with a soft, damp cloth to prevent staining or damage to the wood and glass.
- Inspection:** Periodically check all hardware connections to ensure they remain tight and secure.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Uneven floor surface; loose hardware.	Ensure the stand is on a level surface. Check and tighten all assembly hardware.
Doors do not close or open smoothly.	Misaligned hinges; faulty push-to-open mechanism.	Adjust hinge screws to align doors. If the push-to-open mechanism is faulty, contact customer support for a replacement.
Remote control signals are not passing through the glass.	Device too far back; strong ambient light interference.	Ensure devices are positioned close to the front of the cabinet. Reduce direct light on the glass if possible.
Scratches or damage to the finish.	Abrasive cleaning materials; sharp objects.	Use only soft cloths for cleaning. Avoid dragging objects across the surface. Minor scratches may be repairable with specialized kits (consult manufacturer).

8. SPECIFICATIONS

Feature	Detail
Brand	SONOROUS
Model Number	STD 160-I-BLK
Product Dimensions (L x W x H)	65 x 17.7 x 17.3 inches (165 x 45 x 44 cm)
Item Weight	152 pounds (68.9 kg)
Material	Wood, Frosted Glass
Color	Black
Maximum TV Size Supported	Up to 75 inches
Maximum Top Shelf Load Capacity	110 lbs (50 kg)
Maximum Stand Load Capacity	177 lbs (80 kg)
Special Feature	Adjustable Shelves, Hidden Casters, Push-to-Open Doors, IR-Friendly Glass

Feature	Detail
Product Care Instructions	Wipe with Damp Cloth
UPC	638845675857

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact SONOROUS customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can visit the official SONOROUS store for more information:[SONOROUS Store on Amazon](#).

© 2024 SONOROUS. All rights reserved.