

Conair GMT171ES

Conair GMT171ES Beard and Moustache Trimmer, 11-Piece Instruction Manual

Model: GMT171ES

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Conair GMT171ES 11-piece beard and moustache trimmer. This versatile grooming kit allows you to customize your look and style with ease. Please read all instructions carefully before use.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** To reduce the risk of electric shock:
 - Do not reach for an appliance that has fallen into water. Unplug immediately.
 - Do not use while bathing or in a shower.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
 - Always unplug this appliance from the electrical outlet immediately after using.
 - Unplug this appliance before cleaning.
- **WARNING:** To reduce the risk of burns, electric shock, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
 - Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and

repair.

- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Ensure the appliance is switched off before storing.
- Do not use near a bathtub. Disconnect after use.

PACKAGE CONTENTS

Your Conair GMT171ES 11-piece grooming kit includes the following items:

- Multi-purpose Trimmer Handle
- Beard and Moustache Trimmer Head (with long-lasting steel blades)
- Nose and Ear Hair Trimmer Head
- Storage Base
- 5-Position Comb (for various cutting lengths)
- 3 Jawline Combs (for precise trimming)
- Moustache Comb
- Cleaning Brush
- Lubricating Oil





Image: All 11 components of the Conair GMT171ES grooming kit, including the trimmer handle, various comb attachments, nose/ear trimmer head, cleaning brush, oil, and storage base.

SETUP

Battery Installation

1. Ensure the trimmer is in the "OFF" position.
2. Locate the battery compartment cover on the back of the trimmer handle.
3. Slide the cover off.
4. Insert two "AA" alkaline batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover, sliding it firmly until it clicks into place.

Attaching/Detaching Trimmer Heads

1. To attach a trimmer head (beard/moustache or nose/ear), align the head with the top of the trimmer handle and gently push down until it clicks securely into place.

2. To detach a trimmer head, hold the trimmer handle firmly and gently pull the head upwards.





Image: The Conair GMT171ES trimmer with the standard beard and moustache trimming head attached, ready for use.

OPERATING INSTRUCTIONS

General Trimming Tips

- Always start with clean, dry hair.
- For best results, trim in the direction of hair growth.
- Use light pressure and avoid pressing the blades too hard against the skin.

Using the Beard and Moustache Trimmer Head

1. Attach the beard and moustache trimmer head to the handle.
2. **For trimming without a comb:** Use the bare blade for precise edging, detailing, and achieving a very close trim. Hold the trimmer at a slight angle to the skin.
3. **For trimming with the 5-Position Comb:** Slide the 5-position comb onto the trimmer head. Adjust the comb to your desired length setting by sliding the selector. Start with a longer setting and gradually reduce it until you achieve the desired length.
4. **For trimming with Jawline Combs:** Select one of the three jawline combs. These are ideal for maintaining specific lengths around the jawline and sideburns. Attach the desired comb firmly to the trimmer head.
5. Turn the trimmer "ON" by sliding the power switch.
6. Move the trimmer against the direction of hair growth, using smooth, controlled strokes.
7. Turn the trimmer "OFF" after use.

Using the Nose and Ear Hair Trimmer Head

1. Attach the nose and ear hair trimmer head to the handle.
2. Turn the trimmer "ON".
3. Gently insert the trimmer tip into your nostril or ear canal. Do not insert too deeply.
4. Move the trimmer in a circular motion to trim unwanted hair.
5. Turn the trimmer "OFF" after use.



Image: Various comb attachments, cleaning brush, and lubricating oil for the Conair GMT171ES trimmer, used for different trimming lengths and maintenance.

MAINTENANCE

Cleaning the Trimmer Heads

1. Ensure the trimmer is "OFF" and remove the trimmer head from the handle.
2. Use the provided cleaning brush to remove any loose hairs from the blades and the inside of the trimmer head.
3. The trimmer heads can be rinsed under running water. Ensure they are completely dry before reattaching or storing. **Do not submerge the trimmer handle in water.**

Oiling the Blades

1. After cleaning and drying, apply 1-2 drops of the lubricating oil (provided) across the top of the trimmer blades.
2. Turn the trimmer "ON" for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.
4. Regular oiling helps maintain blade sharpness and prolongs the life of your trimmer.

Storage

Store the trimmer and all its accessories in the provided storage base when not in use. Ensure the trimmer is clean and dry before storing. Remove batteries if storing for extended periods.

TROUBLESHOOTING

- **Trimmer does not turn on:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new "AA" alkaline batteries.
- Ensure the power switch is fully in the "ON" position.

- **Trimmer pulls hair or cuts poorly:**

- The blades may be dull or dirty. Clean the blades thoroughly and apply lubricating oil.
- Ensure the trimmer head is securely attached.
- Batteries may be low. Replace with fresh batteries.
- You may be moving the trimmer too quickly. Use slower, controlled strokes.

- **Excessive vibration or noise:**

- Ensure the trimmer head is properly attached and secured.
- Check for any hair or debris lodged in the trimmer mechanism. Clean thoroughly.

SPECIFICATIONS

Model Number	GMT171ES
Brand	Conair
Power Source	2 x AA Batteries (not included)
Blade Material	Alloy Steel
Product Dimensions	12.7 x 9.8 x 27.3 cm (L x W x H)
Weight	250 g
Recommended Uses	Trimming beard, moustache, nose, and ear hair
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

Conair products are manufactured to the highest standards and undergo rigorous inspection. While specific warranty details are not provided in this manual, Conair typically offers a limited warranty on its grooming products. Please refer to the packaging or the official Conair website for the most current warranty information and customer support contacts.

For further assistance, product registration, or to inquire about replacement parts, please visit the official Conair website or contact their customer service department.

Conair Website: www.conair.com