

[Manuals.plus](#) /

› [MEUBLE COSY](#) /

› MEUBLE COSY Cromwell Grey Chair Instruction Manual

MEUBLE COSY CROMWELL GREY 2PCS SD

MEUBLE COSY Cromwell Grey Chair Instruction Manual

INTRODUCTION

Thank you for choosing the MEUBLE COSY Cromwell Grey Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new chair. Please read these instructions carefully before use and retain them for future reference.



Image: The MEUBLE COSY Cromwell Grey Chair in a typical dining arrangement.

IMPORTANT SAFETY INSTRUCTIONS

- Ensure all components are present and undamaged before assembly. Do not use if any parts are missing or faulty.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Tighten all screws and bolts securely. Periodically check and re-tighten fasteners to maintain stability.

- Do not stand on the chair.
- Do not exceed the maximum weight capacity of 120 kg (264 lbs).
- Keep children away from small parts during assembly to prevent choking hazards.
- Use the chair only for its intended purpose as a seating furniture.

PACKAGE CONTENTS

Your package contains two (2) MEUBLE COSY Cromwell Grey Chairs. Please verify that all the following components are included for each chair:

- 1 x Seat with backrest (Upholstered fabric)
- 4 x Chair Legs (Metal, wood-look finish)
- 1 x Hardware Pack (Screws, washers, Allen key)
- 1 x Assembly Instruction Sheet

SETUP AND ASSEMBLY

Assembly of the MEUBLE COSY Cromwell Grey Chair is straightforward. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to avoid damage.
2. **Identify Parts:** Refer to the included instruction sheet to identify each component (seat, legs, hardware).
3. **Attach Legs:** Locate the pre-drilled holes on the underside of the chair seat. Align each leg with its corresponding hole. Ensure the legs are oriented correctly (usually angled outwards).
4. **Secure Legs:** Insert the provided screws and washers through the leg brackets and into the seat. Hand-tighten all screws initially.
5. **Final Tightening:** Once all legs are in place, use the Allen key to fully tighten all screws. Do not overtighten.
6. **Check Stability:** Gently place the chair on a flat surface and check for stability. If it wobbles, re-check the tightness of all screws.



Image: Chair dimensions for reference during assembly and placement.

OPERATING INSTRUCTIONS

The MEUBLE COSY Cromwell Grey Chair is designed for comfortable seating in various environments. Its versatile design makes it suitable for:

- **Dining Areas:** Provides comfortable seating for meals.
- **Home Offices:** Can serve as a stylish and comfortable desk chair for extended periods.
- **Living Rooms:** Functions as an accent chair or additional seating.

To ensure longevity, avoid dragging the chair across floors; always lift it when moving. Do not use the chair as a step stool.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your MEUBLE COSY chair:

- **Fabric Upholstery:**
 - Regularly vacuum the fabric to remove dust and debris.
 - For spills, blot immediately with a clean, dry cloth. Do not rub.
 - For stubborn stains, use a mild fabric cleaner according to the product's instructions. Test on an inconspicuous area first.
 - Avoid direct sunlight exposure to prevent fading.
- **Metal Legs:**
 - Wipe clean with a soft, damp cloth.
 - Avoid abrasive cleaners or harsh chemicals that may damage the finish.
 - Ensure legs are dry after cleaning to prevent rust.
- **General:**
 - Periodically check all screws and bolts and re-tighten them as needed to maintain structural integrity.
 - Protect floors by using felt pads on the bottom of the chair legs.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair wobbles	Uneven floor surface; loose leg screws; uneven leg length.	Move chair to a flat surface. Check and tighten all leg screws. If legs are uneven, use felt pads to level.
Squeaking noise	Loose connections between seat and legs.	Re-tighten all assembly screws.
Difficulty assembling legs	Incorrect alignment; screws not properly started.	Ensure legs are aligned with the correct holes. Do not force screws; ensure they are threaded correctly before tightening.

SPECIFICATIONS

Brand	MEUBLE COSY
Model Number	CROMWELL GREY 2PCS SD
Color	Grey
Material	Metal (legs), Fabric (upholstery)
Overall Dimensions (L x D x H)	56 cm x 56 cm x 78 cm (22.05 in x 22.05 in x 30.71 in)
Item Weight (per chair)	5.8 kg (12.79 lbs)
Maximum Weight Recommendation	120 kg (264 lbs)
Back Style	Solid

Frame Material	Metal
Style	Scandinavian

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the specific warranty card included with your product or contact the retailer where the product was purchased. You may also visit the official MEUBLE COSY website for further assistance.

Please have your model number (**CROMWELL GREY 2PCS SD**) and purchase date available when contacting support.

© 2023 MEUBLE COSY. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question