

Chicco 5079335740000

Chicco Polly Progress5 Cherry Instruction Manual

Model: 5079335740000

Introduction	Safety Information	Setup	Operating Instructions	Maintenance	Troubleshooting
		Specifications	Warranty & Support		

1. INTRODUCTION

The Chicco Polly Progress5 is a versatile highchair designed to adapt to your child's growth from birth up to 3 years of age. This innovative product offers 5 different configurations, functioning as a baby recliner, a highchair, and a booster seat, all in one compact unit. Its design prioritizes ease of use, safety, and adaptability to meet the evolving needs of your child during meal times and relaxation.

Key features include an ultra-compact fold for storage, a convenient tray hanging system on the rear legs, and a revolutionary zipper system that allows you to un-zip and remove the upper backrest. Frontal wheels enhance mobility within your home without compromising stability.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use of the Chicco Polly Progress5. Failure to follow these instructions could result in serious injury or death.

- Always use the restraint system. Ensure your child is securely fastened in the harness at all times.
- Never leave your child unattended in the highchair.
- Always use the highchair on a flat, level surface.
- Do not use the highchair if any parts are broken, torn, or missing.
- Keep children away from the product during assembly and disassembly.
- Do not place the highchair near open flames or other sources of strong heat.
- Ensure all locking mechanisms are engaged before placing your child in the highchair.
- The tray is not designed to hold the child in the highchair. Always use the safety harness.

3. SETUP AND ASSEMBLY

The Chicco Polly Progress5 is designed for straightforward assembly. Follow these general steps to set up your highchair.

3.1 Unfolding the Highchair

Carefully remove the highchair from its packaging. Release any transport locks and gently unfold the frame until it clicks securely into place. Ensure all legs are fully extended and stable before proceeding.

3.2 Attaching the Seat Pad and Harness

Place the seat pad onto the highchair frame, ensuring it is correctly aligned. Thread the harness straps through the designated slots in the seat pad and secure them according to the instructions provided in the detailed manual (not included here). The seat pad features a revolutionary zipper system, allowing you to un-zip and remove the upper backrest to adapt the seat as your child grows.

3.3 Attaching the Tray

Align the tray with the attachment points on the highchair arms and push it firmly until it locks into position. The tray can be adjusted along 4 different levels to accommodate your child's size. When not in use, the tray can be conveniently hung on the rear legs of the highchair for compact storage.



Image: The Chicco Polly Progres5 highchair, showcasing its full assembly with the patterned seat pad and adjustable tray. This image illustrates the product's ready-to-use configuration, highlighting its design and features.

4. OPERATING INSTRUCTIONS

The Chicco Polly Progres5 offers multiple adjustments to ensure comfort and functionality for your growing child.

4.1 Adjusting Height

The highchair features 8 intuitive height levels. Locate the height adjustment buttons, typically on the side of the frame, and press them simultaneously to raise or lower the seat to the desired height. Ensure both sides are locked into the same level for stability.

4.2 Reclining the Backrest

The backrest can be reclined to 4 different levels, providing maximum comfort for relaxation, especially for infants from 0 months. Locate the recline lever, usually behind the backrest, and adjust to the preferred angle. Ensure it clicks into place.

4.3 Adjusting the Tray

The tray can be regulated along 4 different levels to provide optimal space for your child. Press the release buttons on the sides of the tray and slide it forward or backward to the desired position. Release the buttons to lock the tray in place.

4.4 Converting Configurations (5-in-1 Functionality)

The Polly Progres5 transforms from a baby recliner to a highchair and then to a booster seat. To convert, utilize the revolutionary zipper system to un-zip and remove the upper backrest as your child grows and no longer requires the full highchair back. Refer to the detailed product manual for specific steps on each conversion.

4.5 Mobility

The highchair is equipped with frontal wheels, making it easier to move around your home. Lift the rear legs slightly and use the front wheels to maneuver the highchair. Always ensure the highchair is stable and stationary when a child is seated.

5. CARE AND MAINTENANCE

Proper care and maintenance will extend the life of your Chicco Polly Progres5 highchair.

5.1 Cleaning the Tray

The upper cover of the tray can be removed and washed in the dishwasher for convenient cleaning. For the main tray, wipe clean with a damp cloth and mild soap. Rinse thoroughly and dry completely before reattaching.

5.2 Cleaning the Seat Pad

The fabric seat pad can be wiped clean with a damp cloth and mild soap. For deeper cleaning, refer to the care label on the seat pad for specific washing instructions. Do not use abrasive cleaners or bleach.

5.3 Frame Cleaning

Wipe the plastic and metal parts of the frame with a damp cloth. Dry thoroughly to prevent rust or mildew. Periodically check all screws, bolts, and fasteners to ensure they are tight and secure.

5.4 Storage

When not in use, the highchair can be folded into an ultra-compact size for storage. Store in a dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter any issues with your Chicco Polly Progress5, please refer to the common problems and solutions below.

- Highchair does not fold/unfold easily:** Ensure all locking mechanisms are disengaged. Check for any obstructions in the folding joints. Apply gentle, even pressure.
- Tray is difficult to adjust or attach:** Ensure the tray is aligned correctly with the attachment points. Check for any food debris or obstructions in the tracks.
- Seat pad is loose:** Verify that all harness straps are correctly threaded and secured. Ensure the seat pad is properly attached to the frame.
- Highchair feels unstable:** Confirm that all legs are fully extended and locked into place. Ensure the highchair is on a flat, level surface.

If the problem persists, please contact Chicco customer support for assistance.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	12.2 x 20.87 x 33.46 inches
Item Model Number	5079335740000
Target Gender	Unisex
Maximum Weight Recommendation	15 Kilograms (approx. 33 lbs)
Item Weight	25.5 pounds (approx. 11.6 Kilograms)
Age Range (Description)	Baby (from birth)
Tray Dishwasher Safe	Yes (upper cover)
Portable	No (refers to being easily carried, but has wheels for mobility)

8. WARRANTY INFORMATION

Chicco products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims.

For detailed warranty information, please refer to the warranty card included with your product or visit the official Chicco website.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a defect, please contact Chicco customer support.

You can find contact information, FAQs, and additional resources on the official Chicco website:www.chicco.com
Please have your product model number (5079335740000) and proof of purchase ready when contacting support.

© 2025 Chicco. All rights reserved.