

[Manuals.plus](#) /

› [ROCKLER](#) /

› Rockler Undermount Drawer Slide Jig Instruction Manual

ROCKLER 122379

Rockler Undermount Drawer Slide Jig Instruction Manual

Model: 122379

PRODUCT OVERVIEW

The Rockler Undermount Drawer Slide Jig is a specialized tool designed to simplify and enhance the accuracy of installing Blum Tandem undermount drawer slides. This jig ensures precise positioning and alignment, making the installation process efficient for both professional woodworkers and DIY enthusiasts.



Image: The Rockler Undermount Drawer Slide Jig, showcasing its design and integrated magnets.

Key Features:

- **Accurate Positioning:** Specifically designed for Blum Tandem undermount drawer slides, ensuring a perfect 2mm setback from the cabinet face.

- **Secure Holding:** Features six powerful rare earth magnets that securely hold the drawer slide in place during installation.
- **Durable Construction:** Made from a robust foamed nylon body for long-lasting use in various workshop environments.
- **Access Holes:** Integrated access holes allow for driving screws while the jig remains in position, streamlining the process.
- **Versatile Use:** Can be clamped in place for added stability if desired.

COMPONENTS

The Rockler Undermount Drawer Slide Jig consists of a single, integrated unit designed for ease of use.



Image: Angled view of the jig, highlighting the integrated scale and magnet placement.

- **Jig Body:** Constructed from durable foamed nylon.
- **Rare Earth Magnets:** Six strategically placed magnets to hold the drawer slide.
- **Handle:** Ergonomically designed for comfortable grip and manipulation.
- **Measurement Scale:** Integrated scale for precise adjustments and verification.

SETUP

Before using the jig, ensure your cabinet and drawer slides are prepared according to the manufacturer's instructions.

1. **Prepare Cabinet Opening:** Ensure the cabinet opening is square and the interior surfaces are clean and free of obstructions.
2. **Select Drawer Slides:** Confirm you are using Blum Tandem undermount drawer slides compatible with your project.
3. **Identify Installation Location:** Determine the desired height for your drawer slides within the cabinet. Mark a reference line if necessary, though the jig is designed to align directly with the cabinet face.
4. **Inspect Jig:** Before each use, inspect the jig for any damage or debris that might affect its accuracy or performance.

OPERATING INSTRUCTIONS

Follow these steps for accurate installation of undermount drawer slides using the Rockler Jig.

1. **Position the Jig:** Place the Rockler Undermount Drawer Slide Jig against the face of your cabinet opening. The jig is designed to automatically provide the necessary 2mm setback for the drawer slide.
2. **Attach Drawer Slide:** Align the Blum Tandem undermount drawer slide onto the jig. The powerful rare earth magnets will securely hold the slide in its correct position, ensuring it is perfectly level.



Image: The jig holding a drawer slide in place against the cabinet, ready for screw installation.

3. **Secure the Jig (Optional):** For added stability, especially when working alone or with longer slides, the jig can be clamped in place using a suitable clamp.



Image: The jig secured with a clamp, providing extra stability during the installation process.

4. **Drive Screws:** Utilize the access holes on the jig to drive the mounting screws into the cabinet. The jig's design allows you to secure the slide without removing the jig.



Image: A drill being used to drive screws through the jig's access holes, securing the drawer slide.

5. **Remove Jig:** Once the screws are securely driven, carefully remove the jig from the cabinet.
6. **Repeat for Opposite Side:** Follow the same procedure for installing the drawer slide on the opposite side of the cabinet opening.

MAINTENANCE

Proper care will extend the life and accuracy of your Rockler Undermount Drawer Slide Jig.

- **Cleaning:** Wipe the jig clean with a dry or slightly damp cloth after each use to remove sawdust and debris. Avoid harsh chemicals that may damage the nylon material.
- **Storage:** Store the jig in a clean, dry place away from direct sunlight and extreme temperatures.
- **Magnet Care:** Ensure the magnets remain free of metal shavings or particles, which can reduce their holding strength.

TROUBLESHOOTING

Refer to this section for solutions to common issues encountered during use.

Issue	Possible Cause	Solution
Jig does not hold slide securely.	Magnets are dirty or weakened; slide is too heavy/long for unassisted holding.	Clean magnets. For longer or heavier slides (e.g., 21" or more), use a clamp to secure the jig and slide in place during installation.
Drawer slide is not level.	Jig not pressed firmly against cabinet face; cabinet opening is not square.	Ensure the jig is firmly pressed against the cabinet face. Verify cabinet opening squareness before installation.
Screws are difficult to drive.	Pilot holes not drilled (if required by slide manufacturer); incorrect screw type.	Refer to your drawer slide manufacturer's instructions for pilot hole requirements and recommended screw types.

SPECIFICATIONS

Attribute	Detail
Model Number	122379
UPC	733175572682
Brand	ROCKLER
Material	Foamed Nylon
Color	Red-95 (as per product data, though product images show grey)
Item Weight	1.02 pounds
Product Dimensions	12 x 8.25 x 2.25 inches
Mounting Type	Under Mount

WARRANTY AND SUPPORT

Specific warranty details for the Rockler Undermount Drawer Slide Jig are not provided within this manual. For information regarding warranty coverage, technical support, or replacement parts, please contact Rockler Woodworking and Hardware directly through their official website or customer service channels.

You can visit the [ROCKLER Store on Amazon](#) for more information or to find contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question