

[Manuals.plus](#) /

› [Beetel](#) /

› Beetel F1K GSM Fixed Wireless Phone User Manual

Beetel F1K

Beetel F1K GSM Fixed Wireless Phone User Manual

Your guide to setting up, operating, and maintaining your Beetel F1K Fixed Wireless Phone.

PRODUCT OVERVIEW

The Beetel F1K is a GSM Fixed Wireless Phone designed for reliable communication using a 2G SIM card. It features an LCD display, speed dial capabilities, and a two-way speakerphone, making it suitable for various communication needs.

Key Features:

- LCD Display with Green Backlight
- Supports Single SIM Operation (2G Quad Band)
- Receive & Send SMS (up to 200 messages stored)
- Phone Book Capacity: 500 contacts with name
- Speed Dial Function for pre-stored numbers
- Call Log: Stores 20 latest missed, dialed, and received calls
- Battery Standby Time: Up to 50 hours
- Battery Talk-Time: Up to 3 hours
- Two-Way Speakerphone with Adjustable Receive Volume
- Displays Battery Capacity, Signal Strength, Date & Time on LCD
- Call Time Reminder Function
- 4 Direct Memory Keys (M1, M2, M3, M4)
- Supports Call Divert, Call Waiting & Call Barring Functions
- Basic Calculator
- Alarm Function
- Auto Lock Keypad



Image: Front view of the Beetel F1K GSM Fixed Wireless Phone, showing the handset, keypad, LCD display, and external antenna.

PACKAGE CONTENTS

Please verify that all the following items are present in your product package:

- Beetel F1K GSM Fixed Wireless Phone Unit
- Handset
- Coiled Handset Cord
- Power Adapter
- Rechargeable Battery Pack
- External Antenna
- User Manual (this document)



Image: Rear view of the Beetel F1K phone, showing the battery compartment, power adapter, and external antenna connection.

SETUP

1. Install SIM Card

1. Carefully remove the battery cover located on the back of the phone unit.
2. Locate the designated SIM card slot.
3. Insert your active 2G GSM SIM card into the slot, ensuring the correct orientation as indicated by the diagram near the slot.
4. Securely replace the battery cover.

2. Install Battery

1. After installing the SIM card, insert the rechargeable battery pack into its compartment.
2. Ensure that the battery contacts align properly with the phone's terminals.

3. Replace the battery cover firmly.

3. Attach Antenna

1. Screw the external antenna into the threaded port on the back of the phone unit.
2. Tighten it clockwise until it is secure, but do not overtighten. A firmly attached antenna ensures optimal signal reception.

4. Connect Power Adapter

1. Connect the small end of the power adapter cable to the charging port on the phone.
2. Plug the larger end of the power adapter into a standard electrical wall outlet.
3. Allow the phone to charge for at least 8-10 hours before initial use to ensure the battery reaches its full capacity. The charging indicator on the display will show charging status.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on: Press and hold the **Power** button (usually the red 'End Call' button) until the LCD screen illuminates and displays network information.
- To power off: Press and hold the **Power** button until the screen turns off.

Making Calls

1. Lift the handset or press the **Speakerphone** button to activate the dial tone.
2. Dial the desired phone number using the numeric keypad.
3. Press the **Call/Send** button (usually green) to initiate the call.
4. To end a call, replace the handset or press the **End Call** button (usually red).

Receiving Calls

- When the phone rings, lift the handset or press the **Speakerphone** button to answer the incoming call.

Speed Dial

1. To set up speed dial: Navigate to the phone book or settings menu, select a speed dial slot (typically numbers 2-9), and assign a contact or phone number.
2. To use speed dial: Press and hold the assigned numeric key (2-9) for a few seconds. The phone will automatically dial the stored number.

Sending and Receiving SMS

- Access the **Menu** button and navigate to the **Messages** section.
- Select **Write Message** to compose a new SMS. Enter the recipient's number and your message using the keypad.
- Select **Send** to transmit the message.
- Received messages can be viewed in the **Inbox** within the Messages menu.

Adjusting Volume

- During an active call, use the **Volume Up/Down** keys (typically the arrow keys) to adjust the earpiece or speakerphone volume to a comfortable level.

MAINTENANCE

Cleaning

- Wipe the phone's surface with a soft, dry, lint-free cloth.
- Do not use liquid cleaners, aerosol sprays, or abrasive materials, as these can damage the phone's finish or internal components.

Battery Care

- Charge the battery fully before its first use.
- Avoid frequently overcharging or completely draining the battery to prolong its overall lifespan.
- Disconnect the power adapter once the battery is fully charged.

Storage

- If storing the phone for an extended period, ensure the battery is partially charged (around 50%) and remove it from the phone if possible.
- Store the phone in a cool, dry place, away from direct sunlight, moisture, and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Battery drained or not installed correctly; Power adapter not connected or faulty.	Ensure battery is charged and correctly inserted. Verify power adapter is securely connected to phone and a working electrical outlet.
No Network Signal	Poor network coverage area; Antenna not properly attached; SIM card issue.	Move to an area with better network coverage. Ensure the external antenna is firmly screwed in. Check if the SIM card is correctly inserted and active with your service provider.
Cannot Make/Receive Calls	No network signal; SIM card not active or expired; Call barring enabled; Insufficient balance (for prepaid).	Check signal strength on the display. Verify SIM card status and balance with your service provider. Disable call barring in the phone's settings if active.
Low Call Volume	Volume setting is low; Poor network quality.	Adjust the volume using the Up/Down arrow keys during a call. If the issue persists, try moving to an area with better network reception.
Display Not Working	Phone is off; Battery drained; Hardware malfunction.	Ensure the phone is powered on and the battery is charged. If the problem persists after charging and restarting, contact customer support.

SPECIFICATIONS

- **Brand:** Beetel
- **Model:** F1K
- **Telephone Type:** Fixed Wireless Phone (GSM)
- **Network Support:** Quad Band 2G GSM

- **Display:** LCD with Green Backlight
- **SIM Support:** Single SIM
- **Phone Book Capacity:** 500 contacts
- **SMS Storage:** Up to 200 messages
- **Call Log:** 20 latest missed, dialed, and received calls
- **Battery Type:** Rechargeable (equivalent to 3 AAA batteries, included)
- **Battery Standby Time:** Up to 50 hours
- **Battery Talk Time:** Up to 3 hours
- **Dimensions (L x W x H):** Approximately 8.27 x 7.48 x 2.36 inches
- **Weight:** Approximately 700 Grams
- **Additional Features:** Speed Dial, Two-Way Speakerphone, Adjustable Volume, Alarm, 4 Direct Memory Keys, Basic Calculator, Caller ID.

WARRANTY AND SUPPORT

For detailed warranty information, terms, and conditions, please refer to the warranty card included in your product packaging. Keep your original purchase receipt as proof of purchase for any warranty claims.

For technical assistance, troubleshooting beyond this manual, or customer service inquiries, please visit the official Beetel support website or contact their customer service department.

Beetel Customer Service: For the most current support information, please visit www.beetel.in/support (Note: This is an example link; please refer to your product documentation for the exact support contact details).

© 2024 Beetel. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0136N1T48>

More documents and user manuals: <https://manuals.plus/>