

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Smeg](#) /
- › [Smeg Genuine Oven and Cooker Control Knob - Model 694975086](#)

Smeg 694975086

Smeg Genuine Oven and Cooker Control Knob

Model: 694975086

1. PRODUCT OVERVIEW

This document provides instructions for the installation, operation, and maintenance of the Smeg Genuine Oven and Cooker Control Knob, Model 694975086. This is an authentic replacement part designed to restore the functionality and aesthetic of your Smeg appliance.



Image 1.1: The Smeg Genuine Oven and Cooker Control Knob. This image displays the knob's design, featuring a polished silver finish on the handle and a black base, with a square shaft for secure attachment to the appliance's control mechanism.

2. SAFETY INFORMATION

Please read these safety instructions carefully before attempting installation or use. Failure to follow these instructions may result in damage to the appliance or personal injury.

- **Disconnect Power:** Always ensure the appliance (oven or cooker) is disconnected from the main power supply before attempting any installation or replacement of parts.
- **Handle with Care:** The control knob is a precision part. Handle it carefully to avoid damage.
- **Professional Installation:** If you are unsure about the installation process, it is recommended to seek assistance from a qualified technician.
- **Genuine Parts:** Use only genuine Smeg replacement parts to ensure compatibility and maintain appliance warranty.

3. PACKAGE CONTENTS

The package should contain the following items:

- 1 x Smeg Genuine Oven and Cooker Control Knob (Model 694975086)
- Installation Hardware (if applicable, typically integrated with the knob design)

4. COMPATIBLE MODELS

This control knob is compatible with a wide range of Smeg oven and cooker models. Please verify your appliance model number against the list below to ensure compatibility:

- 3C85XT, 3C85XT/A, 3C86XMTV, 3C86XMTVA
- A1, A1.1, A1.1K, A11CER, A1-2, A1A, A1A.1, A1A-2, A1AD, A1AD.1, A1AD-2, A1B, A1B.1, A1C, A1C.1, A1C-2, A1CA, A1CA.1, A1CA-2, A1CER, A1D, A1D.1, A1G, A1G.1, A1P.1, A1P-2
- A2, A2-2, A2A, A2A-2, A2AD, A2D
- A3, A3A, A3D, A3SX
- A41, A41A, A41D, A42, A42-2, A42A, A42A-2, A42B, A42C, A42D, A42D-2, A42G
- C85XTV, C85XTV/A, CA61VM, CA65MFV, CA854V, CB61VGMA, CB61VMS, CB661EA
- CD65MFX, CD856MFX
- CE65GGA, CE65GX, CE65MFA, CE65MFX, CE854GA, CE854GX, CE856MFA, CE856MFX
- CI54, CI54/1, CI54/1/A, CI54/A, CI54V, CI54V/A, CI65, CI65/1, CI65/1/A, CI65/A, CI65MF, CI65MF/A, CI65MFV, CI665MFV, CI666MFV, CI665MFV/A, CI65MFVDK, CI65MS, CI65MVDK1, CI65MVDK2, CI65MVDK3, CIA65, CID65MFV, CID65MFV1, CIE631MF, CIE65, CIE65/1, CIE65/1/A, CIE65MF, CIE65MF/1, CIV541, CIV54/1/A, CIV65, CIV65/1, CIV65/1/A, CIV65/A
- CS120, CS120NL, CS19, CS19/1, CS19-2, CS19A, CS19A/1, CS19A-2, CS19B, CS19B/1, CS19BE, CS19NL, CS19NL1, CS19NL2, CS19NLA, CS19NLA1, CS19NLA2, CS19P/1, CS19P-2, CS19V, CS19V/1, CS20, CS20FB, CS20FB-2, CS20NL, CS20NLA, CS71, CS71BE, CS71NL, CS72NL, CS72NL2, CSA19, CSA196, CSA196A, CSA19A, CSA19B, CSA19XLP, CSA20
- CX51VE, CX51VG, CX51VM, CX61GB, CX61VE, CX61VG, CX61VGL, CX61VGMA, CX61VM, CX61VML, CX61VMLS, CX61VMN, CX61VMS, CX66MN, CX66MS, CX81VE, CX81VG, CX81VGT, CX81VM, CX81VMT, CX91VG, CX91VGMA, CX91VM, CX92VM, CX93VG
- FS61MFX, FS61MFXLP, FS61XLPG, FS61XNG, FS62XNG, FS67MFX
- K854XE
- S852X, S852XV, S852XV/A, S852XVK, S854X, S854X/A, S854XQV, S854XQV/A, S854XV, S854XV/A, S855/1X, S855/1X/A, S855/1XV, S855/1XVA, S855/1XVA, S86XMFV, S86XMFV/A
- SA81VG, SA81VGMA, SA9065, SA9065LPG, SA9066, SA9066LPG, SA93VJME, SBA1
- SCB60GB, SCB60MFB, SCB60MFX, SCB61MFX, SCB66MFB, SCB66MFX, SCB90G0GX, SCB90MFX, SCB91GX, SCB91MFX
- SCD60MFX, SCD61MFX, SCD81MFX, SCD91MFX, SCD93MFX
- SCE60GX, SCE60MFX, SCE61GX, SCE61MFX, SCE80GX, SCE80MFX, SCE90GX, SCE90MFX, SCE91GX, SCE91MFX
- SD855/1XV, SD855/2XV, SE852X, SE854X, SE854X/1, SE854XK, SE854XK/A, SIL61VM, SIL61VML, SIL63VML

5. SETUP AND INSTALLATION

Follow these steps to replace your oven or cooker control knob:

1. **Power Disconnection:** Before starting, ensure the oven or cooker is completely disconnected from

the electrical power supply. This is a critical safety measure.

2. **Remove Old Knob:** Gently pull the old control knob directly off its shaft. It should slide off with moderate force. Avoid twisting or prying, which could damage the shaft.
3. **Inspect Shaft:** Examine the control shaft on the appliance for any damage or debris. Clean the shaft if necessary.
4. **Install New Knob:** Align the new Smeg control knob with the shaft. The knob has a specific internal shape (square) that matches the shaft. Push the new knob firmly onto the shaft until it is securely seated. Do not force it if it doesn't align; re-check the alignment.
5. **Test Fit:** Once installed, gently turn the knob to ensure it rotates smoothly and engages with the appliance's control mechanism.
6. **Reconnect Power:** Reconnect the appliance to the power supply.

6. OPERATING INSTRUCTIONS

The control knob functions identically to the original part. It is used to select various settings on your Smeg oven or cooker, such as:

- **Temperature Control:** Rotate the knob to set the desired cooking temperature.
- **Function Selection:** Turn the knob to choose different cooking functions (e.g., bake, grill, fan assist).
- **Timer Settings:** On some models, the knob may also interact with timer functions.

Refer to your specific Smeg oven or cooker's user manual for detailed instructions on its various settings and functions.

7. MAINTENANCE

To ensure the longevity and appearance of your control knob:

- **Cleaning:** Wipe the knob with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive materials, as these can damage the finish.
- **Avoid Excessive Force:** Do not apply excessive force when turning or cleaning the knob, as this can cause internal damage or wear.

8. TROUBLESHOOTING

If you encounter any issues after installing the control knob, consider the following:

- **Knob Does Not Fit:** Double-check that the model number of your appliance is listed in the "Compatible Models" section. Ensure the shaft is clean and free of obstructions.
- **Knob Feels Loose:** Ensure the knob is pushed firmly onto the shaft until it clicks or feels secure. If it remains loose, the shaft or the knob's internal fitting might be damaged.
- **Appliance Not Responding:** If the appliance does not respond to knob adjustments, ensure the appliance is properly connected to power. If the issue persists, it may not be related to the knob itself but rather an internal appliance fault. Consult your appliance's main user manual or a qualified technician.

9. SPECIFICATIONS

Brand	Smeg
Model Number	694975086
Material	Metal (Stainless Steel handle)
Color	Silver / Black
Finish	Polished
Dimensions (Package)	11 x 10.1 x 3.4 cm (approx.)
Weight	30 grams (approx.)
Quantity	1 piece
Special Feature	Adjustable (for control)
Usage	Oven/Cooker Control

10. WARRANTY AND SUPPORT

This Smeg Genuine Oven and Cooker Control Knob is designed to meet the high-quality standards of Smeg appliances. For specific warranty information regarding replacement parts, please refer to your original appliance's warranty documentation or contact Smeg customer support directly.

For further assistance or technical support, please visit the official Smeg website or contact their customer service department.