

[manuals.plus](#) /› [Samsung](#) /› [Samsung ETA0U83EWE 1A Euro Wall Charger Adapter User Manual](#)

Samsung ETA0U83EWE

Samsung ETA0U83EWE 1A Euro Wall Charger Adapter User Manual

Model: ETA0U83EWE / ETA0U81EWE

1. INTRODUCTION

Thank you for choosing the Samsung ETA0U83EWE 1A Euro Wall Charger Adapter. This compact and lightweight charger is designed to provide reliable power to your compatible mobile devices. This manual will guide you through the proper use and care of your charger to ensure optimal performance and safety.

2. SAFETY INFORMATION

- Use only with compatible devices.
- Do not expose the charger to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the charger to strong impacts.
- Do not attempt to disassemble, modify, or repair the charger yourself. Contact qualified service personnel if needed.
- Keep out of reach of children.
- Unplug the charger from the power outlet when not in use or during electrical storms.

3. PACKAGE CONTENTS

- 1x Samsung ETA0U83EWE 1A Euro Wall Charger Adapter

4. PRODUCT OVERVIEW



Figure 1: Front View. This image displays the front of the white Samsung ETA0U83EWE charger, featuring the Samsung logo and the single USB Type-A output port.



Figure 2: Angled Rear View. This image shows an angled view of the charger, highlighting the two Euro-style power pins and the regulatory information printed on the back surface.

5. SETUP

- 1. Connect USB Cable:** Obtain a compatible USB charging cable (not included) for your device. Plug the standard USB Type-A end of the cable into the USB port on the charger adapter.
- 2. Connect to Device:** Plug the other end of the USB cable into your mobile phone or other compatible device.
- 3. Plug into Wall Outlet:** Insert the charger adapter's Euro-style pins firmly into a standard 100-240V AC wall power outlet.

6. OPERATING INSTRUCTIONS

Once properly connected, your device should indicate that it is charging. The charger will automatically deliver the appropriate power (up to 5V/1A) to your device. Charging times may vary depending on your device's battery capacity and current charge level.

- To stop charging, simply unplug your device from the USB cable or remove the charger from the wall outlet.
- It is recommended to unplug the charger from the wall outlet when not in use.

7. MAINTENANCE

- **Cleaning:** Disconnect the charger from the power outlet before cleaning. Use a soft, dry cloth to wipe the surface of the charger. Do not use liquid cleaners or solvents.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the charger and connected cables for any signs of damage, such as frayed wires or cracked casing. Discontinue use if damage is found.

8. TROUBLESHOOTING

- **Device not charging:**
 - Ensure the charger is securely plugged into a working wall outlet.
 - Check that the USB cable is firmly connected to both the charger and your device.
 - Try using a different USB cable to rule out a faulty cable.
 - Test the charger with a different compatible device, if available.
- **Slow charging:**
 - Ensure your device is not heavily in use while charging.
 - Verify that the USB cable is not excessively long or damaged, which can reduce charging efficiency.
 - Some devices may charge slower if they are very hot or cold.

9. SPECIFICATIONS

Model Number	ETA0U83EWE / ETA0U81EWE
Brand	Samsung
Input Voltage	100-240V AC
Output Voltage	5V
Output Current	1A
Connector Type	USB Type-A
Compatible Devices	Mobile phones
Special Features	Lightweight design, Travel-friendly
Color	White

10. WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support for this product is not available in the provided data. Please refer to the original product packaging or contact your retailer for details on warranty coverage and support options.

