



[Manuals.plus](#) /

- › [Bosch Electroménager](#) /
- › Bosch MCM3200W MultiTalent 3 Food Processor Instruction Manual

Bosch Electroménager MCM3200W

Bosch MCM3200W MultiTalent 3 Food Processor Instruction Manual

Model: MCM3200W

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Bosch MCM3200W MultiTalent 3 Food Processor. Please read these instructions carefully before first use and keep them for future reference. This appliance is designed for household use to assist with various food preparation tasks.



Image 1: Bosch MCM3200W MultiTalent 3 Food Processor with its complete set of accessories, including the main unit, mixing bowl, blender, and various blades and discs.

2. IMPORTANT SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the appliance:

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the motor unit in water or other liquids.
- **Sharp Blades:** Blades and cutting discs are extremely sharp. Handle them with extreme care, especially during assembly, disassembly, and cleaning.
- **Children and Supervision:** This appliance should not be used by children. Close supervision is necessary when any appliance is used near children.
- **Proper Assembly:** Ensure all parts are correctly assembled and locked into place before operating the appliance. The appliance will not operate if components are not securely fitted.
- **Avoid Overfilling:** Do not exceed the maximum fill levels indicated on the mixing bowl or blender.
- **Foreign Objects:** Never insert hands or other utensils into the appliance while it is operating. Use the pusher provided for feeding ingredients.
- **Maintenance:** Regularly inspect the appliance for any damage. Do not operate if the power cord, plug, or any other part is damaged.

3. PACKAGE CONTENTS

Your Bosch MCM3200W MultiTalent 3 Food Processor package includes the following components:

- Motor Unit (Base)
- 2.3 Liter Mixing Bowl
- Lid for Mixing Bowl with Filler Opening
- Pusher
- Universal Blade (Chopping/Kneading)
- Reversible Slicing Disc (Thick/Thin)
- Reversible Grating Disc (Coarse/Fine)
- Disc Holder
- 1.0 Liter Blender Attachment with Lid
- Whisking/Beating Disc
- Instruction Manual

4. SETUP AND ASSEMBLY

Before first use, clean all removable parts as described in the "Cleaning and Maintenance" section. Ensure the appliance is unplugged before assembly.

1. **Position the Motor Unit:** Place the motor unit on a stable, flat, and dry surface.
2. **Attach the Mixing Bowl:** Place the mixing bowl onto the motor unit. Align the arrow on the bowl with the arrow on the motor unit and turn clockwise until it clicks securely into place.
3. **Insert Accessories:**
 - **For Chopping/Kneading:** Carefully place the universal blade onto the drive shaft in the mixing bowl.
 - **For Slicing/Grating:** Place the disc holder onto the drive shaft, then carefully place the desired reversible disc onto the disc holder. Ensure the correct side of the disc (for slicing or grating) faces upwards.
 - **For Whisking/Beating:** Place the whisking disc onto the drive shaft.
4. **Secure the Lid:** Place the lid onto the mixing bowl. Align the arrow on the lid with the arrow on the mixing bowl handle and turn clockwise until it locks. The appliance will not start if the lid is not correctly locked.
5. **Attach the Blender (if using):** Place the blender jug onto the motor unit, aligning the arrows and turning clockwise until it locks. Ensure the blender lid is also securely fastened.





Image 2: Front view of the Bosch MCM3200W MultiTalent 3 Food Processor, showing the main unit with the mixing bowl and control dial.

5. OPERATING INSTRUCTIONS

Once assembled, plug the appliance into a power outlet. The control dial allows you to select speed settings.

5.1. Speed Control

- **"0/off"**: Turns the appliance off.
- **"1"**: Low speed for softer ingredients or gentle mixing.
- **"2"**: High speed for harder ingredients or faster processing.
- **"M" (Pulse Function)**: For short bursts of maximum power. Turn the dial to "M" and hold; release to stop. Ideal for crushing ice or achieving coarse textures.

5.2. Using the Mixing Bowl (Chopping, Kneading, Whisking)

Ensure the universal blade or whisking disc is correctly installed.

1. Place ingredients into the mixing bowl. Do not exceed the maximum fill line.
2. Secure the lid with the pusher in the filler opening.
3. Select the desired speed (1, 2, or M).
4. After processing, turn the dial to "0/off" and unplug the appliance.
5. Carefully remove the lid, then the blade/disc, and empty the bowl.



Image 3: Top-down view of the Bosch MCM3200W mixing bowl, showing the universal blade installed for chopping or mixing tasks.

5.3. Using Slicing and Grating Discs

Ensure the disc holder and desired reversible disc are correctly installed.

1. Secure the lid.
2. Turn the appliance on to speed "1" or "2".
3. Feed ingredients through the filler opening using the pusher. Apply even, gentle pressure.
4. After processing, turn the dial to "0/off" and unplug.
5. Carefully remove the lid, then the disc and disc holder.



Image 4: A visual representation of the various accessories, including slicing and grating discs, and examples of food prepared using these functions, such as finely diced vegetables and grated potato pancakes.

5.4. Using the Blender Attachment

The 1.0-liter blender is suitable for preparing smoothies, soups, sauces, and crushing ice.

1. Attach the blender jug to the motor unit and secure its lid.
2. Add ingredients to the blender jug. Do not exceed the maximum fill line.
3. Select speed "2" for continuous blending or use the "M" (pulse) function for controlled processing, especially for ice.
4. After blending, turn the dial to "0/off" and unplug.
5. Carefully remove the blender jug from the motor unit.



Image 5: The Bosch MCM3200W blender attachment in use, demonstrating its capability to crush ice for beverages, alongside prepared drinks.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

- **Always unplug** the appliance before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or other liquids.
- **Removable Parts:** The mixing bowl, blender jug, lids, blades, and discs are dishwasher-safe. Alternatively, wash them in warm soapy water, rinse thoroughly, and dry immediately.
- **Handle Blades with Care:** Be extremely cautious when cleaning sharp blades and cutting discs to avoid injury.
- **Storage:** Store the cleaned and dried appliance and its accessories in a safe place, out of reach of children. The accessories can be stored within the mixing bowl for compact storage.

7. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Lid or bowl not correctly locked.	Ensure the mixing bowl is turned clockwise until it clicks, and the lid is securely locked with its arrow aligned to the bowl's handle.
Motor stops during operation.	Overload protection activated.	Unplug, remove some ingredients, and allow the motor to cool down for a few minutes before restarting.

Problem	Possible Cause	Solution
Ingredients not processed evenly.	Too many ingredients or incorrect speed.	Reduce the quantity of ingredients. Use the pulse function for better control or a higher speed for harder items.
Loud noise or vibration.	Improper assembly or unstable surface.	Check that all components are correctly assembled and locked. Ensure the appliance is on a stable, flat surface.

8. TECHNICAL SPECIFICATIONS

- **Model:** MCM3200W
- **Brand:** Bosch Electroménager
- **Power:** 800 Watts
- **Mixing Bowl Capacity:** 2.3 Liters
- **Blender Capacity:** 1.0 Liter
- **Speeds:** 2 speeds + Pulse function
- **Dimensions (L x W x H):** 22 x 26 x 37.5 cm
- **Weight:** 3.7 Kilograms
- **Material:** Plastic, Metal
- **Noise Level:** 44 dB
- **Energy Class:** A
- **Dishwasher Safe Parts:** Yes (excluding motor unit)

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Bosch Electroménager website. In case of technical issues, spare parts inquiries, or service requests, please contact Bosch customer support.

Bosch Electroménager Customer Service:

- Refer to your local Bosch website for contact details.
- Have your model number (MCM3200W) and purchase date ready when contacting support.