

Manuals.plus /

› Bosch /

› Bosch MUM54G00 StartLine Universal Kitchen Machine User Manual

Bosch MUM54G00

Bosch MUM54G00 StartLine Universal Kitchen Machine User Manual

Model: MUM54G00

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using your Bosch MUM54G00 Kitchen Machine. Keep this manual for future reference.

- Always disconnect the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Never leave the appliance unattended while it is operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only original Bosch accessories and spare parts.
- Check the power cord and plug regularly for damage. If damaged, do not use the appliance.

2. PRODUCT OVERVIEW

The Bosch MUM54G00 StartLine Universal Kitchen Machine is designed for versatile food preparation, including mixing, kneading, and whisking. It features a powerful motor and a large stainless steel bowl.



Figure 2.1: Bosch MUM54G00 Kitchen Machine with mixing bowl and whisk attachment.

Components:

- **Motor Unit:** The main body containing the motor and control dial.
- **Mixing Arm:** Pivoting arm for attaching accessories.
- **Stainless Steel Mixing Bowl:** 3.9-liter capacity bowl for ingredients.
- **Dough Hook:** For heavy doughs like bread or pizza.
- **Beating Whisk:** For light doughs, batters, and creaming butter and sugar.
- **Stirring Whisk:** For whipping cream, egg whites, and light mixtures.
- **Splash Guard:** Prevents splashing during operation.
- **Accessory Bag:** For convenient storage of attachments.



reddot design award best of the best 2011

Figure 2.2: Included accessories: dough hook, beating whisk, stirring whisk, splash guard, and accessory storage bag.

3. SETUP AND ASSEMBLY

Before first use, clean all parts that will come into contact with food. Ensure the appliance is unplugged from the power outlet.

1. **Positioning the Appliance:** Place the motor unit on a clean, stable, and level surface.
2. **Attaching the Mixing Bowl:**
 - Place the stainless steel mixing bowl onto the base of the motor unit.
 - Turn the bowl clockwise until it locks securely into place.
3. **Attaching Accessories:**
 - Press the release button on the side of the motor unit to lift the mixing arm.
 - Select the desired accessory (dough hook, beating whisk, or stirring whisk).
 - Insert the accessory into the drive shaft until it clicks into place. Ensure it is firmly seated.
 - Lower the mixing arm until it locks into position.
4. **Attaching the Splash Guard:**
 - Place the splash guard over the mixing bowl, ensuring the opening aligns with the accessory.
 - Turn it slightly to secure it.

4. OPERATING INSTRUCTIONS

The Bosch MUM54G00 features 7 speed settings and a pulse function for precise control over your mixing tasks.



Figure 4.1: Speed control dial with 7 settings and pulse function.

1. **Adding Ingredients:** Add your ingredients to the mixing bowl. For best results, add liquids first, then dry ingredients.
2. **Connecting to Power:** Plug the appliance into a suitable 220V power outlet.
3. **Selecting Speed:** Turn the speed control dial to the desired setting (1-7).
 - **Settings 1-3:** For gentle mixing, folding, and slow kneading.
 - **Settings 4-5:** For medium-speed mixing and beating.
 - **Settings 6-7:** For high-speed whisking and whipping.
 - **"M" (Pulse) Setting:** For short bursts of maximum power. Release the dial to return to "Off".
4. **Operation:** The mixing arm will begin to move, and the accessory will start processing the ingredients.
5. **Stopping Operation:** Turn the speed control dial to the "Off" position. Unplug the appliance from the power outlet.
6. **Removing Ingredients and Accessories:**

- Lift the mixing arm using the release button.
- Remove the accessory by pulling it downwards.
- Unlock and remove the mixing bowl by turning it counter-clockwise.

Recommended Usage:

- **Dough Hook:** Ideal for heavy doughs up to 2 kg (e.g., bread, pizza, pasta dough). Use lower speeds initially, then increase as the dough forms.
- **Beating Whisk:** Suitable for light doughs, cake batters, cookie dough, and creaming butter and sugar.
- **Stirring Whisk:** Perfect for whipping cream, egg whites, meringues, and light sauces.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your kitchen machine. Always unplug the appliance before cleaning.

- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not use abrasive cleaners or immerse it in water.
- **Mixing Bowl:** The stainless steel mixing bowl is dishwasher safe. Alternatively, wash it with warm soapy water and rinse thoroughly.
- **Accessories (Dough Hook, Beating Whisk, Stirring Whisk, Splash Guard):** These accessories are dishwasher safe. For manual cleaning, wash with warm soapy water and rinse.
- **Storage:** Store the cleaned and dried appliance and its accessories in a dry place. The accessory bag can be used to keep attachments organized.

6. TROUBLESHOOTING

If you encounter issues with your Bosch MUM54G00 Kitchen Machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; power outlet faulty; speed dial not set.	Ensure appliance is plugged in. Test power outlet with another device. Turn speed dial to a setting other than "Off".
Mixing arm does not lock.	Mixing arm not fully lowered.	Ensure the mixing arm is pressed down until it clicks into its locked position.
Accessory not attaching securely.	Accessory not aligned with drive shaft.	Ensure the accessory is correctly aligned and pushed firmly onto the drive shaft until it clicks.
Loud noise or vibration during operation.	Bowl or accessory not properly secured; too much load.	Check that the bowl and accessory are correctly locked. Reduce the amount of ingredients if overloaded.

If the problem persists after trying these solutions, please contact Bosch customer service.

7. SPECIFICATIONS

Technical details for the Bosch MUM54G00 StartLine Universal Kitchen Machine:

- **Model:** MUM54G00
- **Power:** 900 Watts
- **Voltage:** 220 Volts
- **Bowl Capacity:** 3.9 Liters (Stainless Steel)

- **Number of Speeds:** 7 + Pulse function
- **Weight:** 5.8 kg
- **Main Material:** Stainless Steel (bowl), Plastic (housing)
- **Color:** Green
- **Dishwasher Safe Parts:** Bowl, Dough Hook, Beating Whisk, Stirring Whisk, Splash Guard
- **Global Trade Item Number (GTIN/UPC):** 04242002865263

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official Bosch website.

Bosch Official Website: www.bosch-home.com

Please have your model number (MUM54G00) and serial number ready when contacting customer service.

