

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Safety 1st](#) /

› [Safety 1st Home Safeguarding and Childproofing Set \(80 Pieces\) Instruction Manual](#)

Safety 1st HS2650600

Safety 1st Home Safeguarding and Childproofing Set (80 Pieces) Instruction Manual

Model: HS2650600

PRODUCT OVERVIEW

The Safety 1st Home Safeguarding Set provides 80 essential items designed to childproof your home. This comprehensive set helps create a safer environment for infants and toddlers by securing common household hazards such as electrical outlets, doors, cabinets, and drawers. It is ideal for preparing nurseries and other living spaces before a child begins to crawl and explore.

COMPONENTS INCLUDED

This 80-piece set includes a variety of safety devices:

- 40 Plug Protectors
- 6 Grip 'n Twist Door Knob Covers
- 30 Cabinet & Drawer Latches
- 4 Cabinet Slide Locks



Image: Overview of the 80-piece Safety 1st Home Safeguarding Set.

INSTALLATION AND USE

1. Plug Protectors (40 pieces)

These protectors are designed to prevent children from accessing unused electrical outlets. Their smooth, non-grip design and opaque color help them blend in and deter curious hands.

- 1. Installation:** Insert the plug protector firmly into any unused electrical socket.
- 2. Removal:** To remove, insert your fingernail or a small, flat object under the edge of the protector and pull it out.



Image: Proper insertion of a plug protector into an electrical outlet.



Image: A baby interacting with a protected electrical outlet.

2. Grip 'n Twist Door Knob Covers (6 pieces)

These covers are designed to prevent young children from opening doors while allowing adults easy access. They are suitable for standard round doorknobs.

- 1. Assembly:** Align the interlocking tabs of the two halves of the cover and click them together around the doorknob.
- 2. Operation:** To open the door, grip the doorknob through the holes in the cover and turn. The cover will spin freely if not gripped correctly, preventing a child from turning the knob.

Your browser does not support the video tag.

Video: Demonstration of how to install and use the Grip 'n Twist Door Knob Cover.



6 Grip 'n Twist doorknob covers
Keep adult-only rooms off-limits

Image: Installation of a Grip 'n Twist Door Knob Cover.



30 cabinet & drawer latches

Help keep items inside away from curious kids

Image: A child trying to operate a doorknob with the safety cover.

3. Cabinet & Drawer Latches (30 pieces)

These latches are installed inside cabinets and drawers to keep contents secure from curious children. They require adult assembly and installation.

- 1. Installation:** Position the catch on the upper frame at the center of the drawer space with the curved edge facing out. Mark screw hole positions with a pencil. Pre-drill screw holes for the catch (3/8 inch / 0.9 cm deep). Screw the catch into place. Repeat for the latch on the drawer. Ensure there is a 1.5-inch gap when the drawer is opened for the latch to engage.
- 2. Operation:** To open a latched cabinet or drawer, press down on the latch with your finger to disengage it.

Your browser does not support the video tag.

Video: Demonstration of how to install and use the Cabinet & Drawer Latches.



Image: Installation of a Cabinet & Drawer Latch.



Image: A child attempting to open a latched drawer.


4. Cabinet Slide Locks (4 pieces)

These locks are designed for side-by-side cabinets with handles or knobs, preventing access to both doors simultaneously.

- 1. Installation:** Slide the lock around the handles or knobs of two adjacent cabinet doors. Adjust the length to fit snugly.
- 2. Operation:** To open, pinch the sides of the lock to release the mechanism and slide it off the handles/knobs.

Your browser does not support the video tag.

Video: Demonstration of how to install and use the Cabinet Slide Lock.

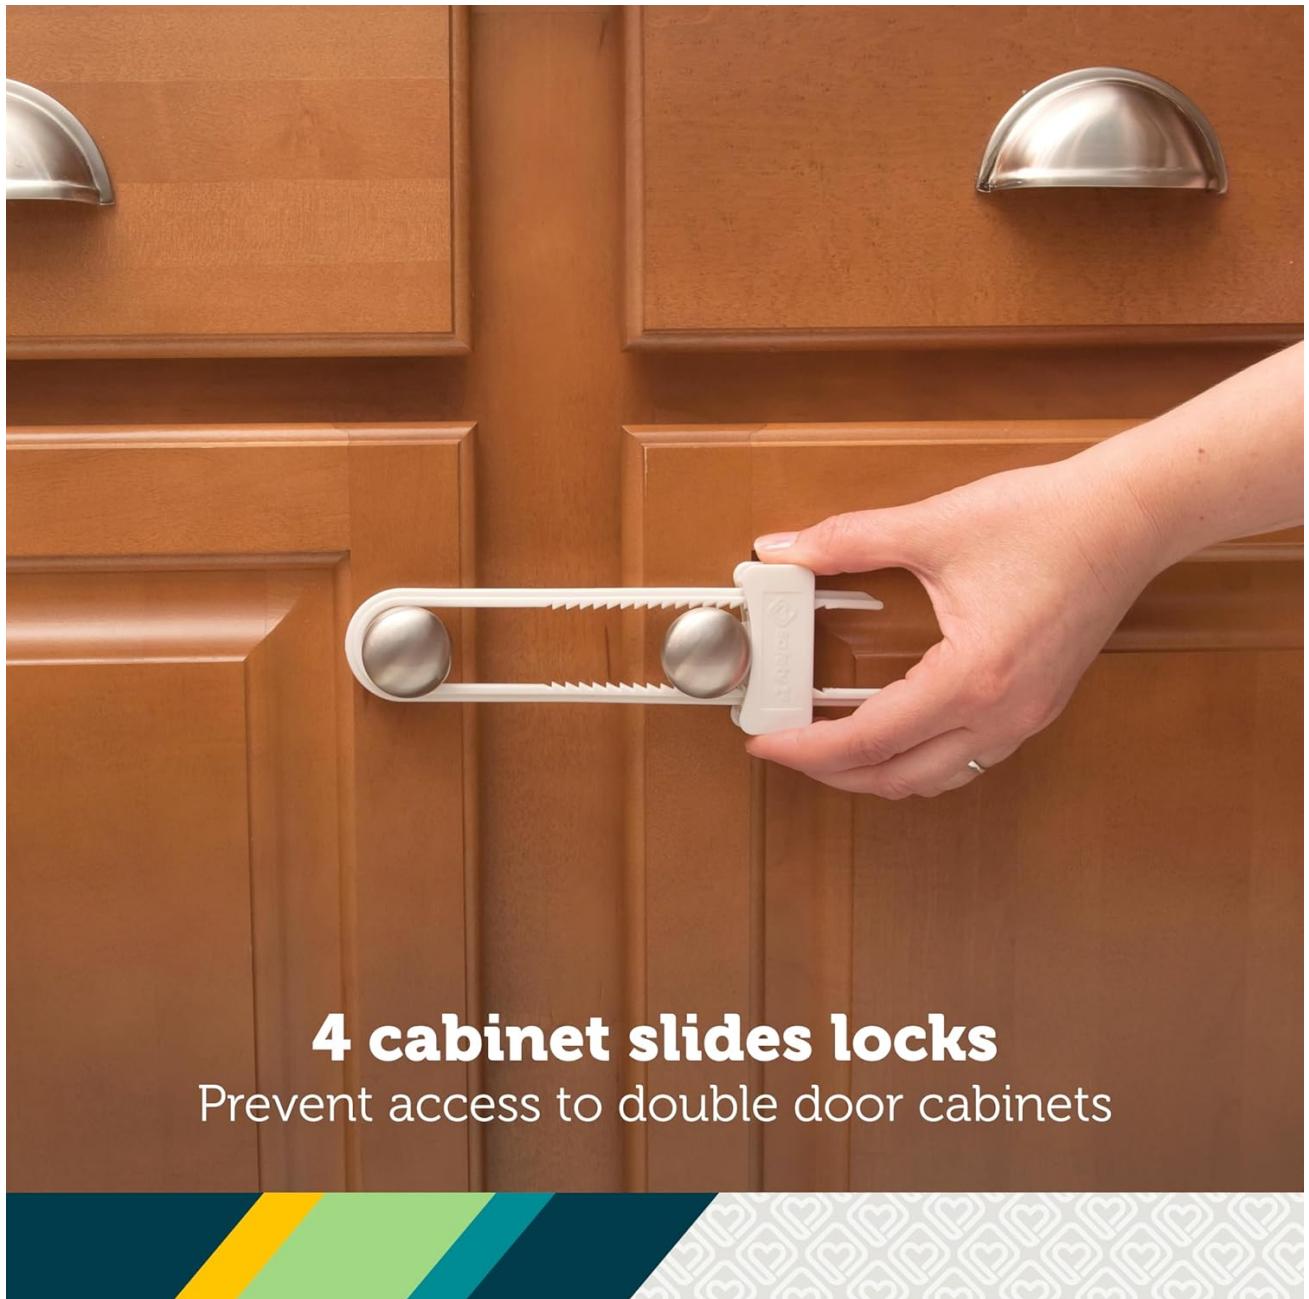

4 cabinet slides locks

Prevent access to double door cabinets

Image: Operating a Cabinet Slide Lock.

CARE AND MAINTENANCE

To ensure the longevity and effectiveness of your Safety 1st childproofing products, regularly inspect them for wear and tear. Clean all items with a damp cloth and mild soap as needed. Ensure they are completely dry before re-installation or use. Do not use abrasive cleaners or harsh chemicals, as these may damage the plastic components.

PRODUCT SPECIFICATIONS

- **Model Number:** HS2650600
- **Material Composition:** Plastic
- **Item Weight:** 1.68 pounds
- **Product Dimensions:** 2.12 x 11.57 x 10.71 inches
- **Number of Items:** 1 (set of 80 pieces)
- **Batteries Required:** No

TROUBLESHOOTING

- **Door Knob Cover spins freely:** Ensure the cover is correctly assembled and securely clicked around the doorknob. Adults must grip through the designated holes to turn the knob.
- **Cabinet/Drawer Latch not engaging:** Verify that the catch and latch components are aligned correctly and that there is sufficient space (approx. 1.5 inches) for the latch to engage when the door/drawer is slightly open. Re-check screw placement if necessary.
- **Plug Protector is loose:** Ensure the plug protector is fully inserted into the outlet. If the outlet is worn, the protector may not fit securely. Consider replacing the outlet or using a different type of cover.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official Safety 1st website or contact their customer service department. Keep your purchase receipt for any warranty claims.