

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Care Bears](#) /
- › [Care Bears - The Complete Original Series DVD Instruction Manual](#)

Care Bears B013FDBGWO

Care Bears - The Complete Original Series DVD Manual

Model: B013FDBGWO

INTRODUCTION

This manual provides instructions for the proper use and care of the Care Bears - The Complete Original Series 2-Disc DVD set. This collection features all 22 original stories of the Care Bears, who travel from Care-a-lot to help children and counter the plans of Professor Coldheart.

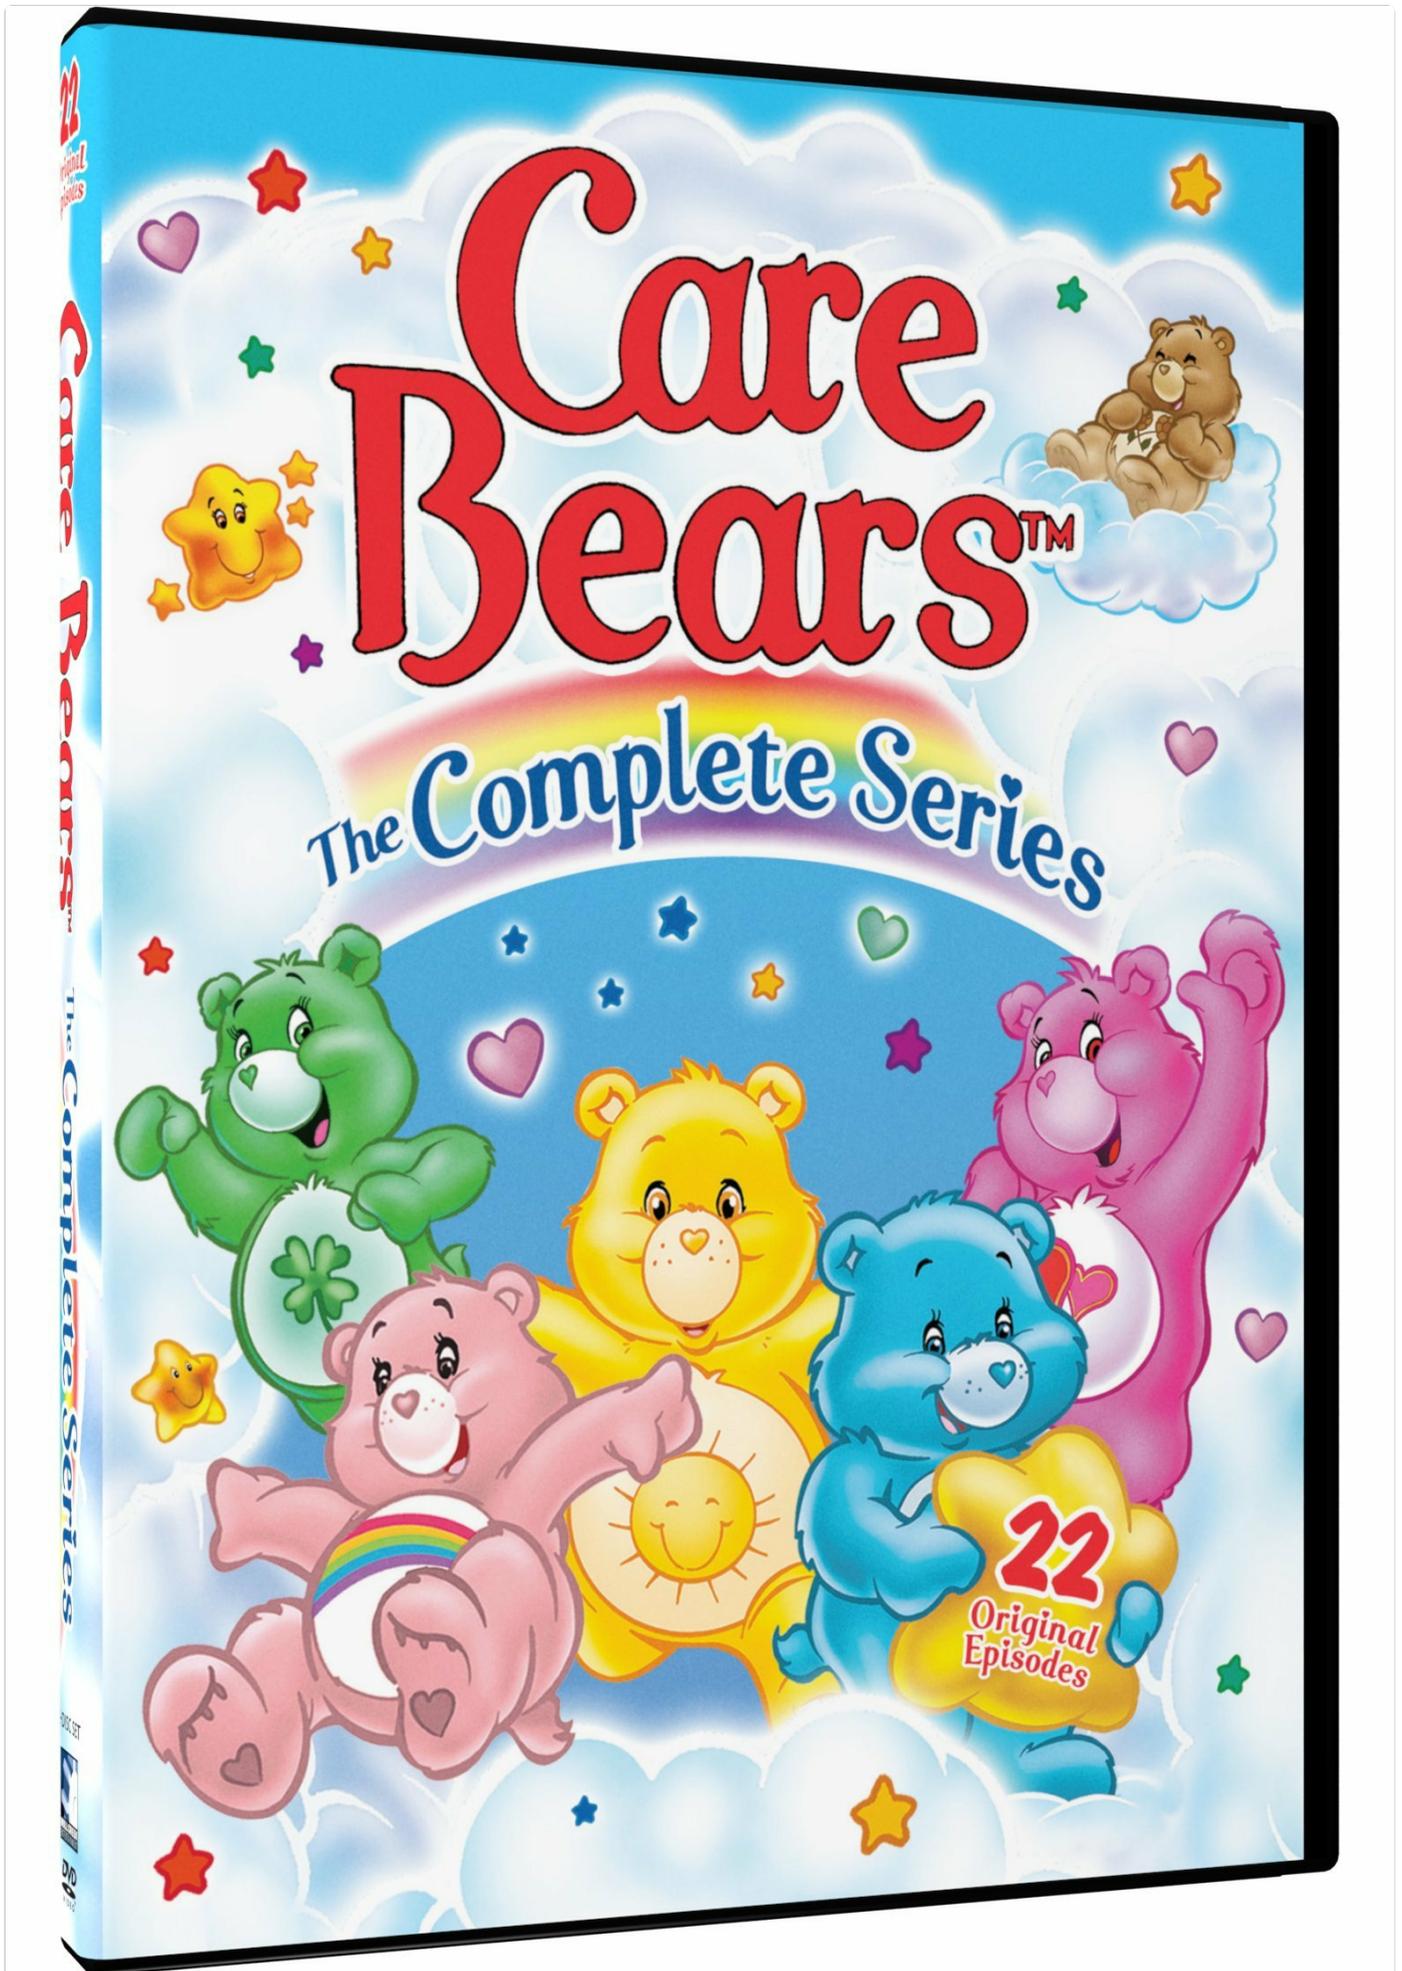


Image: Front cover of the Care Bears - The Complete Original Series DVD set, featuring various Care Bears characters.

SETUP

1. **Unpack the DVD Set:** Carefully remove the DVD case from its packaging.
2. **Open the Case:** Press the center hub of the disc tray to release the DVD. Handle discs by the edges to avoid fingerprints.
3. **Insert Disc:** Place the desired DVD into your DVD player or computer's optical drive with the label side facing up.
4. **Power On:** Ensure your DVD player and television/monitor are powered on and correctly connected.
5. **Select Input:** Use your television remote to select the correct input source (e.g., HDMI 1, AV) for your DVD player.

OPERATING INSTRUCTIONS

Once the DVD is inserted and your player is ready, the disc should automatically load and display a menu. If not, press the "Play" button on your remote or select "Play Disc" from your player's menu.

- **Main Menu:** Navigate the main menu using the arrow keys on your remote control. Select options like "Play All," "Episode Selection," or "Settings" using the "Enter" or "OK" button.
- **Episode Selection:** If available, select specific episodes from the episode list.
- **Playback Controls:**
 - **Play/Pause:** Press the **Play/Pause** button to start or temporarily stop playback.
 - **Stop:** Press the **Stop** button to end playback and return to the main menu or stop the disc.
 - **Skip:** Use the **Skip Forward** or **Skip Backward** buttons to jump between chapters or episodes.
 - **Fast Forward/Rewind:** Use the **FF/RW** buttons to quickly scan through the content.
- **Audio/Subtitle Options:** Access these options via the DVD menu or dedicated buttons on your remote (e.g., "Audio," "Subtitle") if available on the disc.

MAINTENANCE

Proper care will ensure the longevity and optimal performance of your DVDs.

- **Handling:** Always hold discs by their outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If a disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards. Do not use abrasive materials or harsh chemicals. Specialized DVD cleaning kits are recommended for stubborn marks.
- **Storage:** Store discs in their original case, away from direct sunlight, extreme temperatures, and high humidity. Laying discs flat or stacking them without cases can lead to warping or scratching.
- **Avoid Scratches:** Keep discs away from sharp objects and rough surfaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty, scratched, or inserted incorrectly. Player lens is dirty.	Clean the disc. Re-insert the disc correctly. Try another disc to check if the player is faulty. Consult your DVD player's manual for cleaning its lens.
Video skips, freezes, or pixelates.	Disc surface is dirty or damaged. Player is having difficulty reading the disc.	Clean the disc thoroughly. Inspect the disc for deep scratches. Try playing the disc in another DVD player.
No audio or distorted audio.	Audio settings on player/TV are incorrect. Cables are loose.	Check audio settings on your DVD player and television. Ensure all audio cables are securely connected. Try adjusting the volume.

Problem	Possible Cause	Solution
No video or distorted video.	Video cables are loose or incorrect input selected.	Verify all video cables (HDMI, AV, etc.) are securely connected. Ensure the correct input source is selected on your television.

SPECIFICATIONS

- **Title:** Care Bears - The Complete Original Series
- **Model Number (ASIN):** B013FDBGWO
- **Number of Discs:** 2
- **Run Time:** Approximately 4 hours and 7 minutes
- **Media Format:** Full Screen, Multiple Formats, NTSC
- **Release Date:** October 6, 2015
- **Product Dimensions:** 0.7 x 7.5 x 5.4 inches
- **Weight:** 5.12 ounces
- **Studio:** Dhx
- **Actors:** Cheer Bear, Funshine Bear, Grumpy Bear, Love-a-lot Bear, and others.
- **Director:** Various

WARRANTY INFORMATION

This DVD set is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase. For specific warranty terms and conditions, refer to the packaging or contact the distributor. Damage due to improper handling or storage is not covered.

SUPPORT

For further assistance or inquiries regarding this product, please refer to the contact information provided on the DVD packaging or the official website of the distributor. Ensure you have the model number (ASIN: B013FDBGWO) available when seeking support.

