

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PUR](#) /

› [PUR 7-Cup Water Pitcher Filtration System User Manual](#)

PUR PPT700W

PUR 7-Cup Water Pitcher Filtration System User Manual

Model: PPT700W

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your PUR 7-Cup Water Pitcher Filtration System. Designed for ease of use and effective water filtration, this system helps provide cleaner, great-tasting drinking water by reducing various contaminants. Please read these instructions carefully before first use and retain for future reference.



Image: The PUR 7-Cup Water Pitcher Filtration System, clear pitcher with blue filter housing and white lid.

SETUP

1. Initial Cleaning

Before first use, wash the pitcher, lid, and filter housing (excluding the filter itself) with mild soap and warm water. Rinse thoroughly. The pitcher is dishwasher safe for convenience.

2. Filter Preparation

Remove the new PUR filter from its packaging. Submerge the filter in cold water for 15 minutes to prepare it for use. This helps to remove any loose carbon dust and ensures optimal performance.

3. Filter Installation

Insert the prepared filter into the filter housing. Twist the filter clockwise to secure it firmly into place. Ensure a snug fit to prevent unfiltered water from bypassing the filter.



Image: Diagram illustrating the internal structure of a PUR filter, highlighting the LockFit Top Cap, larger holes for no soaking, flow-through material, and small particle trapping.

4. First Use

Fill the top reservoir with tap water. Allow the water to filter through completely. For the first two fillings, it is recommended to discard the filtered water to flush out any remaining carbon dust. After this, your pitcher is ready for regular use.

NOT ALL FILTERS ARE CREATED EQUAL.

Generic filters may fit in your PUR pitcher, but only Genuine PUR Filters are certified to reduce contaminants that could be lurking in your drinking water.*

LockFit™ Top Cap design for secure filter fit.

Larger holes (no more soaking).

Flows through material to reduce contaminants.

Helps trap small particles for great-tasting, cleaner water!

PUR FILTER

GENERIC FILTER

*PUR does not filter microbes.

Image: A hand pouring water from a faucet into the top reservoir of the PUR pitcher, demonstrating the filling process.

OPERATING INSTRUCTIONS

Filling the Pitcher

Open the easy-fill lid and pour tap water into the top reservoir. The water will slowly filter through the PUR filter into the main pitcher. The stay-tight lid allows for pouring even while water is still filtering.

Pouring Filtered Water

Once the water has completely filtered into the main pitcher, you can pour it for consumption. The comfort-grip handle ensures easy and secure pouring.



Image: A person pouring filtered water from the PUR pitcher into a drinking glass, illustrating typical use.

Filter Life Indicator

The lid features a filter life indicator. Press the button on the lid to check the filter status. A green light indicates the filter is OK, yellow means replace soon, and red means replace now. This indicator helps you know when it's time to change your filter for optimal performance.

MAINTENANCE

Cleaning the Pitcher

The pitcher (excluding the filter) is dishwasher safe. For best results, wash regularly to prevent mineral buildup and maintain cleanliness.

Filter Replacement

Replace your PUR filter approximately every 2 months or after filtering 40 gallons of water, whichever comes first. Refer to the filter life indicator on the lid for guidance. To replace, remove the old filter, prepare a new one as per setup instructions, and install it securely.

Resetting the Filter Indicator

After replacing the filter, press and hold the button on the filter life indicator for 3 seconds to reset it. The light should turn green, indicating a fresh filter cycle has begun.

TROUBLESHOOTING

- **Slow Filtration:** If water filters slowly, try removing the filter and re-submerging it in water to dislodge any air bubbles. Ensure the filter is securely seated in the housing. Sometimes, air bubbles from the tap can get trapped; try filling a separate container first and then pouring that water into the pitcher's reservoir.
- **Unpleasant Taste/Odor:** Ensure the filter has been properly prepared and installed. If the taste persists, the filter may need to be replaced, especially if it's nearing the end of its 2-month or 40-gallon lifespan.
- **Lid Issues:** If the lid feels wobbly or comes off easily, ensure it is properly aligned and snapped into place. Some users find that gluing the water filler lid closed can provide a more secure feel if not frequently used for direct faucet filling.

SPECIFICATIONS

Feature	Detail
Brand	PUR
Model Name	Water Filter Pitcher Filtration System
Model Number	PPT700W
Capacity	7 Cup
Color	Clear/Blue
Product Dimensions (LxWxH)	11.3" x 4.8" x 10.9"
Item Weight	1.8 Pounds
Installation Type	Countertop
Power Source	Manual Operation
Filter Life	Up to 2 months or 40 gallons
Dishwasher Safe	Yes (pitcher only)

WATER FILTER PITCHER



Image: A visual representation of the PUR Water Pitcher with key dimensions labeled, showing its compact design.

WARRANTY AND SUPPORT

Warranty Information

For specific warranty details regarding your PUR Water Pitcher Filtration System, please refer to the documentation included with your product at the time of purchase or visit the official PUR website. Warranty terms typically cover manufacturing defects.

Customer Support

If you encounter any issues or have questions not covered in this manual, please contact PUR customer support. Contact information can usually be found on the product packaging or the official PUR website. Always use genuine PUR filters to ensure optimal performance and to maintain your product's warranty.

Visit the official PUR Store for more products and support:[PUR Store on Amazon](#)