

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Miops](#) /
- › [Miops Smart Digital Camera Trigger User Manual](#)

Miops Miops

Miops Smart Digital Camera Trigger User Manual

Model: Miops

INTRODUCTION

The Miops Smart Digital Camera Trigger is an advanced device designed to expand the capabilities of your DSLR or mirrorless camera. It offers various triggering modes, including lightning, sound, laser, and timelapse, allowing photographers to capture unique moments with precision. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance of your Miops device.

SAFETY INFORMATION

- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Keep out of reach of children.
- Use only specified charging cables and power sources.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Miops Smart Digital Camera Trigger device
- USB charging cable
- Camera connection cable (specific to your camera model, may be sold separately)
- Quick Start Guide



Figure 1: Miops Smart Digital Camera Trigger product box, showing the device and key features.

PRODUCT OVERVIEW

The Miops Smart Trigger features a compact design with an LCD screen and intuitive controls. It connects wirelessly to your smartphone via Bluetooth for advanced control and mode selection.



Figure 2: The Miops Smart Digital Camera Trigger device shown alongside a DSLR camera, illustrating its compact size and purpose.

SETUP

1. Charging the Device

Before first use, fully charge your Miops device using the provided USB cable. Connect the cable to the device's charging port and a standard USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status.

2. Connecting to Your Camera

Connect the Miops device to your camera's remote port using the appropriate camera connection cable. Ensure the cable is securely plugged into both the Miops unit and your camera.



Figure 3: The Miops device connected to a camera's remote port using a dedicated cable, ready for operation.

3. App Installation and Pairing

1. Download the Miops app from your smartphone's app store (iOS or Android).

2. Turn on the Miops device.
3. Enable Bluetooth on your smartphone.
4. Open the Miops app and follow the on-screen instructions to pair with your device. The app will search for available Miops devices.



Figure 4: Screenshots of the Miops smartphone application interface, demonstrating its intuitive design for controlling the trigger.

OPERATING MODES

The Miops Smart Trigger offers various modes for different photographic scenarios, controllable via the mobile app.

Lightning Mode

This mode is designed to capture lightning strikes. The device detects sudden changes in light and triggers the camera instantly. Adjust sensitivity settings in the app for optimal performance.



Figure 5: An example photograph captured using the Miops Smart Trigger's lightning mode, showing multiple lightning bolts over a city.

Sound Mode

The sound mode triggers the camera when a sound above a set threshold is detected. Ideal for capturing breaking objects, balloons popping, or other sound-activated events.

Laser Mode

Utilizes a laser beam to detect movement. When the laser beam is broken, the camera is triggered. Useful for wildlife photography or capturing fast-moving subjects.

Timelapse Mode

Allows you to set intervals and exposure times for creating stunning timelapse sequences. Configure the number of shots, interval, and exposure duration directly from the app.



Figure 6: The Miops device mounted on a camera, demonstrating its use in capturing high-speed events, such as shattering glass.



Figure 7: A high-speed photograph illustrating the Miops trigger's capability to capture precise moments, such as an egg breaking upon impact.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery:** For long-term storage, ensure the battery is partially charged (around 50%) to preserve its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully.
Cannot pair with smartphone.	Bluetooth is off; device not in pairing mode; interference.	Ensure Bluetooth is on; restart both devices; try pairing in a different location.
Camera not triggering.	Incorrect cable connection; camera settings; trigger sensitivity.	Check cable connection; ensure camera is in remote trigger mode; adjust sensitivity in the app.

SPECIFICATIONS

Feature	Detail
Brand	Miops
Model Name	Miops
Connectivity Technology	Bluetooth
Compatible Devices	Camera
Special Features	Digital display, Rechargeable
Max Range	10 Meters
Battery Type	1 Lithium-ion battery required

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Miops website or contact their customer service. Keep your proof of purchase for warranty claims.

Manufacturer: Miops