



Manuals.plus /

› KODAK /

› Kodak Photo Print Kit 6800 6850/6R Instruction Manual

## KODAK 6800 6850/6R

# Kodak Photo Print Kit 6800 6850/6R Instruction Manual

## INTRODUCTION

---

This manual provides essential instructions for the proper use, setup, operation, and maintenance of your Kodak Photo Print Kit 6800 6850/6R. This kit is designed to deliver high-quality photo prints when used with compatible Kodak photo printers.

## PACKAGE CONTENTS

---

The Kodak Photo Print Kit 6800 6850/6R typically includes:

- Photo paper rolls
- Print ribbon cartridges

Please verify all components are present upon opening the package.

## SETUP

---

Follow these steps to prepare your Kodak Photo Print Kit for use with a compatible Kodak 6800 or 6850 photo printer.

### 1. Unpacking the Kit

Carefully remove the photo paper rolls and print ribbon cartridges from their packaging. Handle the media by the edges to avoid fingerprints or damage to the printing surface.

### 2. Loading the Photo Paper

1. Open the paper compartment of your Kodak 6800 or 6850 printer according to its specific user manual.
2. Insert the photo paper roll onto the designated spindle, ensuring it is correctly aligned and secured.
3. Feed the leading edge of the paper into the printer's paper path as indicated by the printer's instructions.
4. Close the paper compartment securely.

### 3. Installing the Print Ribbon Cartridge

1. Locate the ribbon cartridge slot in your Kodak 6800 or 6850 printer.
2. Gently insert the print ribbon cartridge into the slot until it clicks into place. Ensure it is fully seated.
3. Close any access doors or covers on the printer.



*Image: The Kodak Photo Print Kit 6800 6850/6R packaging, displaying the photo paper and print ribbon components. This kit is essential for producing high-quality prints with compatible Kodak printers.*

## OPERATING INSTRUCTIONS

Once the kit components are installed, your printer is ready for operation.

1. Ensure your Kodak 6800 or 6850 printer is powered on and connected to your computer or photo kiosk.
2. Select the desired image for printing from your software application or device.
3. Choose the appropriate print settings, including paper size (A4 for this kit) and print quality.
4. Initiate the print job. The printer will automatically feed the paper and apply the ribbon to create your photo print.

For detailed printer-specific operating instructions, refer to your Kodak 6800 or 6850 printer's user manual.

## MAINTENANCE

Proper maintenance ensures the longevity and quality of your prints.

### Storage of Unused Media

- Store unused photo paper rolls and ribbon cartridges in their original packaging in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid exposing the media to dust or humidity, which can affect print quality.

## Printer Cleaning

Regularly clean your Kodak 6800 or 6850 printer according to its specific maintenance guidelines to prevent dust and debris from affecting print quality or causing paper jams.

## TROUBLESHOOTING

---

This section addresses common issues you might encounter.

### Poor Print Quality

- **Faded or Streaky Prints:** Check if the print ribbon cartridge is correctly installed and has sufficient ribbon remaining. Replace if empty.
- **Color Inaccuracies:** Ensure your printer drivers are up to date and that color calibration settings are correct.
- **Spots or Marks:** Clean the printer's print head and rollers as per your printer's manual. Ensure the photo paper is free from dust or debris.

### Paper Jams

- Turn off the printer and carefully open all access covers.
- Gently remove any jammed paper, pulling in the direction of the paper path to avoid tearing.
- Ensure the paper roll is correctly loaded and not creased or damaged.

### Ribbon Errors

- If the printer indicates a ribbon error, verify the cartridge is properly seated.
- Check if the ribbon is tangled or broken. Replace the cartridge if damaged.

For further troubleshooting, consult your Kodak 6800 or 6850 printer's comprehensive user manual or contact Kodak support.

## SPECIFICATIONS

---

### Kodak Photo Print Kit 6800 6850/6R

Feature	Detail
Brand	KODAK
Model Compatibility	Kodak 6800, Kodak 6850 Photo Printers
Item Weight	7.05 Pounds (approx. 3.2 kg)
Paper Finish	Uncoated
Sheet Format	A4
Number of Sheets (per kit)	12
Paper Thickness	70 (unit not specified, typically gsm)
Global Trade Identification Number (GTIN)	05011373962944
ASIN	B013J0L6WS

*Note: The "Number of sheets" specification from the source data (12) appears to be an anomaly given the unit price is per 100 sheets. For typical photo print kits, a quantity of 100 sheets or more is common. Please refer to the product packaging for the exact sheet count.*

## WARRANTY AND SUPPORT

---

### Manufacturer's Warranty

This Kodak Photo Print Kit 6800 6850/6R is covered by a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

### Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Kodak Customer Support through their official website or the contact information provided with your printer.

You can visit the official KODAK store for more information: [KODAK Store](#)

