

## Hitachi MRO-RV100

# Hitachi MRO-RV100 Healthy Chef 33L Steam Oven Range User Manual

Model: **MRO-RV100** | Brand: **Hitachi**

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Hitachi MRO-RV100 Healthy Chef 33L Steam Oven Range. Please read it thoroughly before use and keep it for future reference. Your new oven range features intelligent cooking capabilities with a triple weight scanner, allowing for precise heating and defrosting. It supports healthy cooking methods such as degreasing with superheated steam and easy non-fry cooking. The bright interior color also aids in easily spotting and cleaning any cooking residue.

### Safety Precautions

- Always ensure the appliance is properly grounded.
- Do not operate the oven if the door seal is damaged.
- Keep children away from the appliance during operation.
- Use oven mitts when handling hot dishes or components.
- Never heat sealed containers, as they may explode.

## 2. SETUP

### Unpacking and Placement

1. Carefully remove all packaging materials from the oven range.
2. Inspect the appliance for any damage. If damaged, do not operate and contact customer support.
3. Place the oven range on a stable, level countertop. Ensure there is adequate ventilation space around the unit (minimum 10 cm on sides and back, 30 cm above).
4. The dimensions of the unit are approximately 39.4 cm (H) x 49.5 cm (W) x 46.5 cm (D).
5. Plug the power cord into a dedicated, grounded electrical outlet.

## Initial Cleaning

Before first use, wipe the interior and exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.



Figure 2.1: Front view of the Hitachi MRO-RV100 Steam Oven Range.

## 3. OPERATING INSTRUCTIONS

Your Hitachi MRO-RV100 offers various cooking modes to suit your needs.

### Microwave Function

The microwave function features advanced temperature control to preserve nutrients and enhance flavors. It also utilizes a triple weight scanner for precise heating.

- **Auto Cooking:** The 'Triple Weight Scanner' measures the weight of food, intelligently heating and defrosting according to the quantity, which helps minimize uneven heating. Select from 79 auto menus for various dishes including Japanese, Western, and Chinese cuisine.
- **Manual Settings:** For manual microwave operation, you can select from 5 power levels: 800W, 600W, 500W, 200W, and 100W equivalent. Adjust cooking time as needed.

## Steam Oven Function

The steam oven function enables healthy cooking methods using superheated steam.

- **Non-Fry Cooking:** Prepare crispy dishes with less oil using the superheated steam for degreasing.
- **Healthy Cooking:** This mode supports degreasing, salt reduction, and calorie cutting, contributing to healthier meals.

## General Operation Tips

- Always use microwave-safe or oven-safe dishes appropriate for the selected cooking mode.
- For best results with auto menus, follow the recipe guidelines provided in the full instruction manual (if applicable).
- Ensure the water tank (if present for steam function) is filled before using steam modes.

## 4. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your oven range. The bright interior color makes it easier to spot and clean dirt after cooking.

### Daily Cleaning

- After each use, wipe the interior of the oven with a damp cloth to remove food splatters and condensation.
- Clean the turntable and roller ring with warm, soapy water.
- Wipe the exterior surfaces with a soft, damp cloth.

### Deep Cleaning

- For stubborn stains, use a mild, non-abrasive oven cleaner specifically designed for microwave/oven interiors. Follow the product instructions carefully.
- Regularly clean the door seal and surrounding areas to prevent food buildup.
- If your model has a water tank for steam, empty and clean it regularly to prevent mineral buildup.

**Caution: Always unplug the appliance before cleaning. Do not immerse the appliance in water or spray water directly onto it.**

## 5. TROUBLESHOOTING

---

If you encounter issues with your oven range, refer to the following common problems and solutions. For more complex issues, contact customer support.

Problem	Possible Cause / Solution
Appliance does not turn on	Check if the power cord is securely plugged into a working outlet. Check your household circuit breaker.

Problem	Possible Cause / Solution
Uneven heating (microwave)	Ensure food is placed centrally on the turntable. Stir or rotate food halfway through cooking. The weight sensor may require specific placement for optimal results.
Steam function not working	Check if the water tank is filled correctly. Ensure the tank is properly inserted.
Oven produces smoke/odor	This may occur during initial use. Ensure the oven is clean and free of food residue. If smoke persists, unplug and contact service.
Display shows an error code	Refer to the comprehensive manual for specific error code meanings and solutions. If the issue persists, contact customer support.

## 6. SPECIFICATIONS

Key technical specifications for the Hitachi MRO-RV100 Steam Oven Range:

Feature	Specification
Model Number	MRO-RV100 R
Brand	Hitachi
Capacity	33 Liters
Dimensions (H x W x D)	39.4 x 49.5 x 46.5 cm
Product Weight	19.5 kg (approx. 51.5 lbs)
Power Consumption	70.6 kWh/year
Manual Microwave Settings	800W, 600W, 500W, 200W, 100W equivalent (5 levels)
Installation Type	Countertop
Color	Red

## 7. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Hitachi website. Keep your purchase receipt as proof of purchase.

### Customer Support

If you require technical assistance, service, or have questions not covered in this manual, please contact Hitachi customer support. Contact details can typically be found on the manufacturer's website or in the product packaging.

© 2023 Hitachi. All rights reserved.