

[Manuals.plus](#) /

> [Frigidaire](#) /

> Frigidaire 30-inch Stainless Steel Range Hood FJSE308TBJSM User Manual

Frigidaire FJSE308TBJSM

Frigidaire 30" Stainless Steel Range Hood

Model: FJSE308TBJSM

INTRODUCTION

Thank you for choosing a Frigidaire appliance. This instruction manual provides essential information for the safe and efficient installation, operation, and maintenance of your new 30-inch Stainless Steel Range Hood, Model FJSE308TBJSM. Please read this manual thoroughly before using the appliance and keep it for future reference.

SAFETY INFORMATION

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

General Safety Precautions:

- Read all instructions before installing or operating this appliance.
- Installation must be performed by a qualified technician in accordance with all applicable codes and standards.
- Always disconnect power to the range hood before servicing or cleaning.
- Do not operate the range hood if the power cord is damaged.
- Ensure proper ventilation in the room when the range hood is used simultaneously with appliances burning gas or other fuels.
- Clean grease filters regularly to prevent grease fires.
- Do not flambé under the range hood.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Frigidaire FJSE308TBJSM range hood is designed to effectively remove smoke, steam, grease, and odors from your cooking area. It features touch controls, LED lighting, and baffle filters for efficient operation and easy maintenance.



Figure 1: Front view of the Frigidaire 30-inch stainless steel range hood. This image shows the sleek stainless steel finish, the central touch control panel, and the three baffle filters visible through the glass panel below.



Figure 2: Angled view of the range hood. This perspective highlights the slim profile of the hood and the integrated glass panel that extends forward, providing additional capture area for cooking fumes.



Figure 3: Side angled view of the range hood with the glass panel fully extended. This shows how the glass canopy can be pulled out to increase the capture efficiency over the cooking surface.

Components:

- **Main Body:** Stainless steel housing.
- **Control Panel:** Touch-sensitive buttons for power, light, and fan speeds.
- **LED Light:** Provides illumination for the cooking area.
- **Baffle Filters:** Removable metal filters designed to trap grease.
- **Extendable Glass Panel:** A retractable glass canopy to enhance capture.

SETUP AND INSTALLATION

This range hood is designed for wall-mounted installation and requires external ventilation. Professional installation is recommended.

Pre-Installation Checklist:

- Verify that all components are present and undamaged.
- Ensure the wall structure can support the weight of the range hood.
- Confirm electrical supply meets the appliance requirements (120V, 60Hz).
- Plan the ductwork route for optimal ventilation.

Installation Steps (Summary):

1. Mark the mounting points on the wall according to the provided template.
2. Drill holes and install wall anchors/brackets.
3. Mount the range hood securely to the wall.
4. Connect the ductwork to the exhaust outlet of the hood and route it to the exterior.
5. Connect the electrical wiring to a grounded outlet or junction box, following local electrical codes.
6. Install the baffle filters and test the unit.

Refer to the detailed installation guide included in the product packaging for complete instructions and diagrams.

OPERATING INSTRUCTIONS

The range hood features intuitive touch controls located on the front panel.

Control Panel Functions:

- **Power Button ():** Press to turn the range hood ON or OFF.
- **Light Button ():** Press to turn the LED light ON or OFF.
- **Fan Speed Buttons (1, 2, 3):** Press to select the desired fan speed.
 - **Speed 1 (Low):** Ideal for simmering or light cooking.
 - **Speed 2 (Medium):** Suitable for general cooking.
 - **Speed 3 (High):** For heavy cooking, frying, or strong odors.

Using the Extendable Glass Panel:

Gently pull the glass panel forward to extend it over the cooking surface. This increases the capture area for smoke and steam. Push the panel back into the hood body when not in use.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your range hood.

Cleaning the Baffle Filters:

1. **Frequency:** Clean filters every 3-4 weeks, or more often depending on cooking habits.
2. **Removal:** Locate the release latches on each baffle filter. Push the latch and pull the filter downwards to remove.
3. **Cleaning:** Wash filters in hot soapy water or in a dishwasher. For stubborn grease, use a degreasing agent.
4. **Reinstallation:** Ensure filters are completely dry before reinserting them. Align the filter with the slots and push upwards until the latch clicks into place.

Cleaning the Exterior:

- Wipe the stainless steel surfaces with a soft cloth and a non-abrasive stainless steel cleaner.
- Do not use abrasive pads or cleaners that contain bleach or ammonia.
- Clean the glass panel with a glass cleaner and a soft cloth.

LED Light Replacement:

LED lights are designed for long life and typically do not require replacement. If a light fails, contact qualified service personnel.

TROUBLESHOOTING

Before contacting service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Hood does not operate.	No power supply.	Check if the power cord is plugged in. Check the circuit breaker or fuse.
Poor suction.	Grease filters are clogged. Ductwork is obstructed or too long. Incorrect fan speed selected.	Clean or replace baffle filters. Check ductwork for obstructions or kinks. Ensure proper duct size. Select a higher fan speed.
Excessive noise.	Loose components. Ductwork issues. Motor malfunction.	Check that filters are properly installed. Ensure ductwork is securely fastened. If noise persists, contact service.
Light does not work.	LED light failure.	LED lights are not user-replaceable. Contact qualified service personnel.

If the problem persists after attempting these solutions, please contact Frigidaire customer service or a qualified service technician.

SPECIFICATIONS

Feature	Detail
Brand	Frigidaire
Model Number	FJSE308TBJSM
ASIN	B013KV2FLW
Color	Stainless Steel
Finish Type	Stainless Steel
Mounting Type	Wall Mount
Control Type	Touch
Light Source Type	LED
Filter Type	Baffle
Ventilation Type	Vented
Product Form	Wall Mount Canopy Hood

WARRANTY AND SUPPORT

Frigidaire appliances come with a limited warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty period and coverage details.

For technical assistance, parts, or service, please contact Frigidaire Customer Service. Have your model number (FJSE308TBJSM) and serial number ready when you call.

You can find contact information for Frigidaire Customer Service on their official website or in the warranty documentation.

© 2024 Frigidaire. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.