

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SINGER](#) /

› [SINGER Legacy SE300 Computerized Sewing and Embroidery Machine Instruction Manual](#)

## SINGER SE300

# SINGER Legacy SE300 Computerized Sewing and Embroidery Machine Instruction Manual

## INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your SINGER Legacy SE300 Computerized Sewing and Embroidery Machine. Please read this manual thoroughly before operating the machine to ensure proper use and longevity.

## 1. GETTING STARTED: SETUP

### 1.1 Unboxing and Placement

Carefully remove the machine and all accessories from the packaging. Place the machine on a stable, flat surface with adequate space for operation.

### 1.2 Connecting Power and Foot Pedal

1. Connect the power cord to the machine's power input and then to a suitable electrical outlet.
2. Connect the foot pedal to its designated port on the machine.
3. Locate the On/Off switch, typically on the side or back of the machine, and turn it on.



Image 1: The SINGER Legacy SE300 machine with its embroidery unit attached, ready for operation.

### 1.3 Threading the Machine

Follow the numbered threading guides on the machine for correct upper thread placement. The machine features a built-in needle threader to simplify this step.

### 1.4 Winding the Bobbin

The SINGER Legacy SE300 includes an independent bobbin winding motor, allowing you to wind a bobbin without unthreading the needle. Follow the bobbin winding path indicated on the machine.

### 1.5 Attaching the Embroidery Unit and Hoops

To switch to embroidery mode, attach the embroidery unit to the machine. Secure your fabric within the appropriate embroidery hoop (large 10 $\frac{1}{4}$ " x 6" or small 4" x 4") and slide it onto the machine's embroidery carriage.

## 2. OPERATING THE MACHINE

---

### 2.1 LCD Touch Screen Controls

The intuitive LCD touch screen allows for easy selection and adjustment of stitches and embroidery designs. Use the touch-button controls for stitch selection, length, and width adjustments.



Image 2: The LCD touch screen displaying stitch selection options and adjustment controls.

## 2.2 Sewing Mode

The machine offers 250 built-in sewing stitches, including basic, decorative, quilting, and heirloom stitches. Select your desired stitch from the LCD screen. The machine automatically optimizes stitch settings for your selection.

- **Buttonholes:** Choose from 13 one-step buttonhole styles for consistent results.
- **Stitch Customization:** Utilize Mirror-Imaging and Elongation functions for creative stitch modifications.
- **Memory:** Save up to 4 unique stitch sequences for future use.

## 2.3 Embroidery Mode

Access 200 embroidery designs and 6 font options. Designs can be transferred via the included USB embroidery stick. The machine guides you through the embroidery process.



Image 3: Transferring embroidery designs to the machine using a USB stick.

## 2.4 General Controls

- **Speed Control:** Adjust sewing speed using the dedicated controls.
- **Needle Up/Down:** Program the needle to stop in the up or down position for precise pivoting and quilting.
- **Reverse Sewing:** Use the reverse button for reinforcing stitches.

Your browser does not support the video tag.

Video 1: An official demonstration of the SINGER Legacy SE300 stitching out an embroidery design, showcasing the machine's operation.

## 3. INCLUDED ACCESSORIES

Your SINGER Legacy SE300 comes with a comprehensive accessory kit to support various sewing and embroidery projects:

- Large Embroidery Hoop (10 $\frac{1}{4}$ " x 6")
- Small Embroidery Hoop (4" x 4")

- General Purpose Foot
- Satin Stitch Foot
- Overcasting Foot
- Blind Hem Foot
- Zipper Foot
- Buttonhole Foot with Underplate
- Straight Stitch Foot
- Button Sewing Foot
- Open Toe Foot
- Embroidery Foot
- Parallel Sewing Foot
- Quilting Bar
- Thread Spool Net
- Spool Pin Felt
- Screwdriver
- Needle Plate Screwdriver
- Seam Ripper/Lint Brush
- Thread Spool Caps
- Auxiliary Spool Pin
- Bobbins (Class 15 transparent)
- Pack of Needles
- USB Embroidery Stick
- Complementary Software

## Included in Box



Image 4: A visual representation of the extensive accessory kit included with the machine.

## 4. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your machine.

### 4.1 General Cleaning

- Always unplug the machine before cleaning.
- Use a soft brush to remove lint and dust from the bobbin area and feed dogs.
- Wipe the exterior with a soft, dry cloth. Avoid harsh chemicals.

### 4.2 Needle Replacement

Replace needles regularly, especially when working with new projects or if you notice skipped stitches or fabric damage. Use SINGER-approved needles appropriate for your fabric type.

### 4.3 Bobbin Area Care

Periodically remove the needle plate and bobbin case to clean out any accumulated lint or thread fragments. This

prevents thread jamming and ensures smooth operation.

## 5. TROUBLESHOOTING

This section addresses common issues you might encounter. For more detailed troubleshooting, refer to the online owner's class or support resources.

- Thread Jamming:** Often caused by incorrect threading, improper bobbin insertion, or accumulated lint. Re-thread the machine, check bobbin placement, and clean the bobbin area.
- Needle Breakage:** Can occur if the needle is bent, dull, or the wrong type for the fabric. Ensure the needle is inserted correctly and replace it if necessary. Avoid pulling fabric while sewing.
- Motor Overload Message:** This may indicate the machine is struggling with thick fabric or multiple layers. Reduce the number of layers or use a heavier-duty needle. Ensure the machine is not forced.
- Skipped Stitches:** Typically due to a bent or dull needle, incorrect needle insertion, or improper threading. Replace the needle and re-thread the machine carefully.

## 6. SPECIFICATIONS

Feature	Detail
Product Dimensions	20.25 x 8 x 12.25 inches (51.44 x 20.32 x 31.12 cm)
Item Weight	20.5 pounds (9.3 kg)
Manufacturer	SINGER
Model Number	SE300
Built-in Stitches	250
Embroidery Designs	200
Embroidery Fonts	6
Buttonhole Styles	13 (one-step)
Embroidery Hoops Included	Large (10¼" x 6"), Small (4" x 4")
Needle Threader	Built-in Automatic
Bobbin System	Top-drop transparent, Independent Winding Motor
Display	LCD Touch Screen

## 7. SUPPORT AND RESOURCES

For additional assistance, learning resources, and product information, please refer to the following:

- Online Owner's Class:** Access guided learning sessions to maximize your machine's potential.
- Digital Manuals:** SINGER product manuals are available in paperless format on the official SINGER support website.
- SINGER Support Website:** Visit [singer.com/support](https://singer.com/support) for comprehensive support, FAQs, and contact information.

## Related Documents - SE300

 INSTRUCTION MANUAL 44S <small>SINGER is sewing made easy.™</small>	<p><a href="#">Singer 44S Sewing Machine Instruction Manual</a></p> <p>Comprehensive instruction manual for the Singer 44S sewing machine, covering setup, operation, maintenance, and troubleshooting. Learn how to thread your machine, wind bobbins, sew various stitches, and resolve common issues.</p>
	<p><a href="#">Singer Sewing Machine Accessories User Guide</a></p> <p>A comprehensive user guide detailing Singer sewing machine accessories, including presser feet, needles, scissors, and dress forms. This guide categorizes accessories by sewing type (utility, decorative, quilting, embroidery, overlock) and provides instructions for their use.</p>
	<p><a href="#">SINGER M3330 Sewing Machine: Features and Specifications</a></p> <p>Explore the SINGER M3330 sewing machine, a special edition model featuring 97 stitch applications, 23 built-in stitches, a one-step buttonhole, and a heavy-duty metal frame. Ideal for all types of sewing.</p>
 LIST OF PARTS  SINGER® MACHINE No. 111w155 <small>THE SINGER MANUFACTURING COMPANY From the early days of the sewing machine &amp; Supply LLC</small>	<p><a href="#">Singer Machine No. 111w155 Parts List and Instructions</a></p> <p>Comprehensive parts list and essential instructions for the Singer 111w155 sewing machine, including oiling and ordering procedures. Features a detailed numerical listing of all components, accessories, feed dogs, presser feet, and throat plates.</p>
 SINGER 331K Fittings	<p><a href="#">Singer 331K Fittings Guide: Parts and Applications for Industrial Sewing Machines</a></p> <p>A comprehensive guide detailing the various fittings, including feed dogs, presser feet, throat plates, and roller presses, for Singer 331K series industrial sewing machines (331K, 331K1, 331K2, 331K3, 331K4, 331K5, 331K6, 331K16, 331K24). Includes part numbers, descriptions, and applicable machine models for each component.</p>
	<p><a href="#">SINGER HD6380 Sewing Machine Stitch Guide</a></p> <p>A comprehensive guide to various sewing machine stitches and their applications for the SINGER HD6380 model, including straight, zigzag, multi-step zigzag, blind hem, picot hem, decorative, straight stretch, reinforced zigzag, honeycomb, overlock, slant overedge, and bartack buttonhole stitches. Learn about techniques like seaming, quilting, topstitching, darning, applique, gathering, pleating, zipper insertion, hemming, couching, and attaching trims.</p>

