

Bestron APZ400

Electric Pizza Pan & Grill

Model: APZ400

Brand: Bestron

INTRODUCTION

Thank you for purchasing the Bestron APZ400 Electric Pizza Pan & Grill. This versatile appliance is designed for preparing delicious pizzas, grilling various foods, and cooking a wide range of dishes. Please read this instruction manual carefully before first use to ensure safe and optimal operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW AND COMPONENTS

The Bestron APZ400 is designed for versatile cooking. It features two heating plates that can be used simultaneously or individually, depending on the cooking mode.



Image: The Bestron APZ400 Electric Pizza Pan in its closed position, actively cooking a pizza with red peppers and other toppings. The control knob and power indicator light are visible on the front.



Image: The Bestron APZ400 Electric Pizza Pan opened to reveal its two distinct cooking surfaces: a ribbed grill plate on the top lid and a flat, round cooking pan on the base. Both surfaces are non-stick.

Key Components:

- **Upper Grill Plate:** Ribbed surface for grilling.
- **Lower Flat Pan:** Round, flat surface ideal for pizzas, pancakes, or general frying.

- **Temperature Control Knob:** Adjusts heating intensity.
- **Power Indicator Light:** Illuminates when the appliance is powered on.
- **Ready Indicator Light:** Illuminates when the desired temperature is reached.
- **Heat-Resistant Handles:** For safe opening and closing.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance from its packaging. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the cooking plates with a damp cloth and then dry thoroughly. Do not immerse the appliance in water.
3. **Placement:** Place the appliance on a stable, heat-resistant, and flat surface. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a suitable 220-240V, 50/60Hz electrical outlet. The power indicator light will illuminate.
5. **Pre-heating (Initial Burn-off):** For the first use, it is recommended to pre-heat the appliance for approximately 5-10 minutes at maximum temperature without food. This helps to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated. After this, unplug and allow to cool completely before wiping down the plates again.

OPERATING INSTRUCTIONS

Using as a Pizza Oven:



Image: The Bestron APZ400 Electric Pizza Pan shown with a pizza cooking inside, featuring bacon and onion toppings. The appliance is in its closed position, ready for baking.

1. Ensure the appliance is clean and dry.
2. Plug the appliance into the power outlet. The power indicator light will turn on.
3. Turn the temperature control knob to the desired setting. For most pizzas, a higher setting is recommended. The ready indicator light will illuminate when the set temperature is reached.
4. Carefully place your pizza onto the lower flat pan. For best results with frozen pizzas, ensure they are fully thawed.
5. Close the lid. The upper grill plate will help cook the top of the pizza evenly.
6. Cook for the recommended time, typically 8-15 minutes depending on the pizza type and desired crispiness. Monitor cooking progress through the gap or by carefully lifting the lid.
7. Once cooked, carefully remove the pizza using a heat-resistant spatula.
8. Unplug the appliance after use and allow it to cool completely before cleaning.

Using as a Grill/Open Pan:



Image: The Bestron APZ400 Electric Pizza Pan fully opened, demonstrating its dual cooking surfaces. The left side shows grilled salmon, burgers, and shrimp, while the right side features roasted potatoes, meatballs, and sautéed vegetables, highlighting its versatility as a grill and pan.

The appliance can be fully opened to utilize both the grill plate and the flat pan simultaneously for grilling and frying.

1. Ensure the appliance is clean and dry.
2. Plug the appliance into the power outlet.
3. Turn the temperature control knob to the desired setting.
4. Carefully open the lid fully until it lies flat, creating two separate cooking surfaces.
5. Place food on the desired cooking surface (grill or flat pan).
6. Cook food, turning as necessary, until done.
7. Unplug the appliance after use and allow it to cool completely before cleaning.

MAINTENANCE AND CLEANING

Always unplug the appliance and allow it to cool completely before cleaning.

- **Cleaning the Cooking Plates:** Use a soft, damp cloth or sponge to wipe down the non-stick cooking surfaces. For stubborn food residues, a small amount of mild dish soap can be used. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
- **Exterior Cleaning:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive materials.
- **Do Not Immerse:** Never immerse the appliance, power cord, or plug in water or any other liquid.
- **Storage:** Ensure the appliance is clean and dry before storing. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; appliance malfunction.	Ensure plug is fully inserted. Test outlet with another device. If still not working, contact customer support.
Food sticks to the cooking plates.	Insufficient oil/butter; non-stick coating damaged; food type.	Lightly grease plates before cooking. Avoid using metal utensils. Ensure plates are clean.
Smoke or unusual odor during use.	Initial burn-off; food residue; excessive oil/grease.	Normal for first use. Ensure plates are clean before use. Use less oil. If excessive or persistent, unplug and contact support.
Pizza not cooking evenly.	Temperature setting too low; uneven pizza thickness; pre-heating insufficient.	Increase temperature. Ensure pizza is evenly spread. Allow appliance to fully pre-heat until ready light illuminates.

SPECIFICATIONS

- **Model:** APZ400
- **Brand:** Bestron
- **Power Source:** Electric
- **Voltage:** 220-240 V
- **Frequency:** 50/60 Hz
- **Control Type:** Knob
- **Item Weight:** Approximately 6.39 Pounds (2.9 kg)
- **Cable Length:** 77 Centimeters
- **Included Components:** Sheet Pan (integrated cooking surfaces)

WARRANTY AND SUPPORT

This Bestron APZ400 Electric Pizza Pan & Grill comes with a manufacturer's warranty, typically 5 years as indicated on product packaging. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact Bestron customer service. Contact information can usually be found on the Bestron official website or on the product packaging.

Website: www.bestron.com

Please note: Warranty may be voided if the appliance is not used according to the instructions in this manual or if unauthorized modifications are made.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question