

Smeg BLF01RDUS

Smeg BLF01RDUS 50s Style Blender Instruction Manual

Model: BLF01RDUS | Brand: Smeg

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect use of the appliance may result in injury or damage.

- Always unplug the blender from the power outlet before cleaning or when not in use.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender.
- Blades are sharp. Handle with care when cleaning.
- Ensure the lid is securely in place before operating the blender.
- Do not blend hot liquids in large quantities as this may cause pressure buildup and result in scalding.
- Do not operate the blender with a damaged cord or plug.

2. PRODUCT OVERVIEW

The Smeg BLF01RDUS 50s Style Blender combines iconic retro design with modern functionality, offering a versatile solution for your blending needs.

Key Features:

- Die-cast aluminum powder-coated body with backlit chrome knob.
- 1.5 Liter (48 oz / 6 cups) Tritan BPA-Free Jug.
- Stainless steel dual blades, detachable for easy cleaning.
- Safety lock mechanism when removing the blender jug.
- Three preset programs: Smoothie, Ice Crush, and Pulse.
- Four adjustable speed settings.







Figure 1: Front view of the Smeg BLF01RDUS 50s Style Blender, showcasing its retro design and main components.

3. SETUP

- Unpack:** Carefully remove all packaging materials and ensure all components are present.
- Clean:** Before first use, wash the blender jug, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry. The motor base can be wiped with a damp cloth.
- Assemble:** Place the blade assembly securely into the bottom of the blender jug. Ensure the rubber gasket is correctly seated to prevent leaks.
- Position:** Place the blender jug onto the motor base. The safety interlock system will ensure the blender only operates when the jug is correctly positioned.
- Connect:** Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

The Smeg BLF01RDUS blender features intuitive controls for various blending tasks.

Controls:

- Speed Knob:** Located on the front, this knob allows you to select speeds from 1 to 4.
- Start/Stop Button:** Press to start or stop the selected program or speed.
- Preset Programs:** Dedicated buttons for 'Smoothie', 'Ice Crush', and 'Pulse' functions.

General Operation:

- Add ingredients to the blender jug. Do not exceed the 'MAX' fill line.
- Securely place the lid on the jug. Ensure the measuring cup is inserted into the lid opening.
- Select your desired speed using the speed knob or choose a preset program.
- Press the 'Start/Stop' button to begin blending.
- To stop, press the 'Start/Stop' button again or turn the speed knob to '0'.

Using Preset Programs:

- Smoothie:** Ideal for creamy drinks and purees.
- Ice Crush:** Specifically designed for crushing ice cubes.
- Pulse:** Provides short bursts of power for chopping or quick blending.







Figure 2: Detail of the control knob and preset buttons on the Smeg BLF01RDUS Blender.

Your browser does not support the video tag.

Video 1: Official Smeg BLF01 Blender demonstration, showing basic operation and features.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your blender.

Cleaning the Jug and Blades:

1. Unplug the blender from the power outlet.
2. Remove the blender jug from the motor base.
3. Carefully detach the blade assembly from the bottom of the jug.
4. Wash the jug, lid, and blade assembly in warm, soapy water. The Tritan jug is also dishwasher safe.
5. Rinse thoroughly and allow all parts to dry completely before reassembling.

Cleaning the Motor Base:

- Wipe the motor base with a soft, damp cloth.
- Do not use abrasive cleaners or scourers.
- Never immerse the motor base in water or any other liquid.

6. TROUBLESHOOTING

If you encounter issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Jug not correctly seated; Overload protection activated.	Check power connection; Ensure jug is locked into place; Unplug, wait 15 minutes, then restart.
Ingredients are not blending smoothly.	Too little liquid; Too many ingredients; Ingredients are too large.	Add more liquid; Reduce ingredient quantity; Cut ingredients into smaller pieces.
Blender is leaking.	Blade assembly not tightened; Gasket improperly seated or damaged.	Ensure blade assembly is tightly screwed onto the jug; Check and reposition or replace the gasket.
Unusual noise or odor.	Overloading; Foreign object in blades; Motor issue.	Reduce load; Unplug and check for obstructions; Contact customer support if issue persists.

7. SPECIFICATIONS

Detailed technical specifications for the Smeg BLF01RDUS Blender:

- **Brand:** Smeg
- **Model Number:** BLF01RDUS
- **Color:** Red
- **Capacity:** 1.5 Liters (48 Ounces / 6 Cups)
- **Power Source:** Corded Electric
- **Voltage:** 240 Volts
- **Number of Speeds:** 4
- **Control Type:** Preset and Manual
- **Blade Material:** Stainless Steel
- **Container Material:** Plastic (Tritan BPA-Free)
- **Body Material:** Die-cast aluminum (powder coated)
- **Special Features:** Cord Storage, Multiple Speeds
- **Product Dimensions:** 11 x 10 x 14 inches
- **Item Weight:** 10 pounds
- **UPC:** 683203999786, 812895020359
- **Date First Available:** July 27, 2015



Figure 3: Visual representation of the Smeg BLF01RDUS Blender's dimensions.

8. WARRANTY AND SUPPORT

The Smeg BLF01RDUS Blender comes with a manufacturer's warranty. For specific warranty details, registration, or technical support, please refer to the warranty card included with your product or visit the official Smeg website.

For customer service inquiries, please contact Smeg customer support directly.

