

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TIMEX](#) /
- › [Timex Expedition TW4B02400GP Digital Chronograph Watch User Manual](#)

TIMEX TW4B02400GP

Timex Expedition TW4B02400GP Digital Chronograph Watch User Manual

Model: TW4B02400GP | Brand: TIMEX

PRODUCT OVERVIEW

The Timex Expedition TW4B02400GP is a robust digital chronograph watch designed for outdoor activities. It features a durable resin case, a comfortable Fast-Wrap Velcro strap, and essential functions like a stopwatch, countdown timer, alarm, and Indiglo night-light. Its 100-meter water resistance makes it suitable for various water-related activities.





Image: Timex Expedition TW4B02400GP Digital Chronograph Watch, showcasing its black and blue design with a digital display and Fast-Wrap Velcro strap.

SETUP

Initial Time and Date Setting

1. **Enter Set Mode:** Press and hold the **SET** button (typically top-left) until the display flashes.
2. **Adjust Values:** Use the **START/STOP** button (typically top-right) to increase the flashing value (e.g., hours, minutes, year).

3. **Select Next Field:** Press the **MODE** button (typically bottom-left) to move to the next setting field (e.g., minutes, month, day).
4. **Exit Set Mode:** Once all settings are adjusted, press the **SET** button again to save and exit.

Strap Adjustment

The watch features a Fast-Wrap Velcro strap for easy and secure fitting. Adjust the strap by pulling the end through the buckle and securing the Velcro to achieve a comfortable and snug fit on your wrist. Ensure it is not too tight to allow for proper circulation, nor too loose to prevent the watch from moving excessively.

OPERATING INSTRUCTIONS

Basic Time Display

In the default time mode, the watch displays the current time (hours, minutes, seconds) and date (month, day of week, day of month).

Indiglo Night-Light

Press the **LIGHT** button (typically top-right or a dedicated button) to activate the Indiglo night-light. The entire watch face will illuminate for a few seconds, allowing for easy readability in low-light conditions.

Stopwatch Function

1. **Access Stopwatch:** Press the **MODE** button repeatedly until 'CHRONO' or 'STW' appears on the display.
2. **Start/Stop:** Press the **START/STOP** button to begin timing. Press it again to pause.
3. **Reset:** While paused, press the **RESET** button (typically bottom-right) to clear the stopwatch to zero.

Countdown Timer

1. **Access Timer:** Press the **MODE** button repeatedly until 'TIMER' or 'TMR' appears.
2. **Set Timer:** Press and hold the **SET** button to enter timer setting mode. Use **START/STOP** to adjust hours/minutes/seconds and **MODE** to move between fields. Press **SET** to confirm.
3. **Start/Stop:** Press **START/STOP** to begin the countdown. Press again to pause.
4. **Reset:** While paused, press **RESET** to return to the set time. An audible alarm will sound when the timer reaches zero.

Alarm Function

1. **Access Alarm:** Press the **MODE** button repeatedly until 'ALARM' or 'ALM' appears.
2. **Set Alarm:** Press and hold the **SET** button to enter alarm setting mode. Use **START/STOP** to adjust hours/minutes and **MODE** to move between fields. Press **SET** to confirm.
3. **Activate/Deactivate:** In alarm mode, press **START/STOP** to toggle the alarm ON/OFF. An alarm icon will appear when active.
4. **Snooze:** When the alarm sounds, press any button (except **RESET**) to activate snooze, which will sound again after a few minutes. Press **RESET** to turn off the alarm completely.

MAINTENANCE

Cleaning

Clean your watch regularly with a soft, damp cloth. For the Velcro strap, occasional hand washing with mild soap and water is recommended to remove dirt and sweat. Ensure the watch is completely dry before

wearing.

Water Resistance

The watch is water resistant to 100 meters (330 feet). This means it is suitable for showering, swimming, and snorkeling. However, it is **not** suitable for scuba diving or high-impact water sports. Do not operate buttons underwater to maintain water resistance integrity.

Battery Replacement

When the display dims or functions become erratic, the battery may need replacement. It is highly recommended to have the battery replaced by an authorized Timex service center or a professional watch repairer to ensure proper sealing and maintain the watch's water resistance.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery as described in the Maintenance section.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, consult specific model instructions for lock features). If the issue persists, a battery replacement or a soft reset (removing and reinserting the battery) by a professional may be required.
- **Time is inaccurate:** Re-set the time and date as described in the Setup section. If the watch continues to lose or gain time significantly, the internal movement may require servicing.
- **Water inside the watch:** If condensation or water appears inside the watch, immediately take it to an authorized service center. This indicates a breach in the water resistance seal.

SPECIFICATIONS

Model Number	TW4B02400GP
Brand	TIMEX
Color	Black Blue
Material	Resin
Screen Size	1.25 Inches
Water Resistance	100 Meters (330 Feet)
Item Weight	90 g
Features	Stopwatch, Countdown Timer, Alarm, Indiglo Night-Light, Fast-Wrap Velcro Strap

WARRANTY INFORMATION

This Timex watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official Timex website for detailed information regarding warranty coverage and claims.

SUPPORT

For further assistance, technical support, or service inquiries, please contact Timex customer service. Contact information can typically be found on the official Timex website or in the documentation provided with your watch. When contacting support, please have your watch model number (TW4B02400GP) and purchase details readily available.