

Manuals.plus /

- › SanDisk /
- › SanDisk 32GB microSD Memory Card User Manual

## SanDisk SDSQUNB-032G-AZFMN

# SanDisk 32GB microSD Memory Card User Manual

## 1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Made for Amazon SanDisk 32GB microSD Memory Card. Designed specifically for Fire Tablets and Fire TV devices, this memory card offers a seamless way to expand your device's storage capacity, allowing you to store more apps, games, photos, and videos.



Figure 1: SanDisk 32GB microSD Memory Card

## 2. SETUP

### 2.1 Physical Installation

To install your SanDisk microSD card into a compatible Fire Tablet or Fire TV device, locate the microSD card slot. This is typically found on the side or bottom edge of your device, often covered by a small flap or tray. Gently open the flap or eject the tray.



Figure 2: Proper insertion of the microSD card into a device slot.

Carefully align the microSD card with the slot, ensuring the gold contacts are facing the correct direction as indicated by your device's manual or the slot's design. Gently push the card into the slot until it clicks into place. Close the flap or reinsert the tray.

### 2.2 Initial Setup and Formatting

After physical installation, your device may prompt you to set up the new storage. It is recommended to format the SD card as internal storage to allow for seamless integration with your device's operating system. This enables you to store apps, files, and media directly on the card, extending your device's original capacity.

**Important: Do not remove the SanDisk SD card during the formatting process. Formatting will erase any existing content on the card.**

Follow the on-screen prompts to complete the formatting. Once formatted, the card will be ready for use.

### 3. OPERATING THE MEMORY CARD

The SanDisk 32GB microSD card is designed for optimal performance with your Fire Tablet and Fire TV. Key operational features include:

- **Class 10 Performance:** Ensures smooth Full HD (1080p) video recording and playback.
- **Direct App & Game Downloads:** Download your applications and games directly to the SD card, freeing up internal device storage.
- **Multitasking Capability:** Designed to perform multiple simultaneous activities with no noticeable lag or delay.
- **Media Storage:** Store additional photos, music, and movies without impacting your device's performance.

### 4. MAINTENANCE

To ensure the longevity and optimal performance of your SanDisk microSD card, follow these maintenance guidelines:

- **Handle with Care:** Avoid bending, dropping, or exposing the card to excessive force.
- **Keep Clean:** If necessary, gently wipe the gold contacts with a soft, dry, lint-free cloth. Avoid touching the contacts directly with your fingers.
- **Temperature Control:** Store and use the card within recommended temperature ranges (typically -25°C to 85°C or -13°F to 185°F).
- **Safe Removal:** Always eject the microSD card from your device's settings before physically removing it to prevent data corruption.

### 5. TROUBLESHOOTING

#### 5.1 Card Not Recognized

- **Reinsert the Card:** Gently remove and reinsert the microSD card, ensuring it is properly seated in the slot.
- **Restart Device:** Power off your Fire Tablet or Fire TV completely, then power it back on.
- **Check for Corruption:** If the device indicates the card is