

Amazon Renewed CTRSKAAAUSZ

Nintendo 3DS Handheld System - Cosmo Black User Manual

Model: CTRSKAAAUSZ | Brand: Amazon Renewed

INTRODUCTION

This manual provides essential information for the Nintendo 3DS Handheld System. The Nintendo 3DS is a portable video game console produced by Nintendo. This particular unit is a renewed product, professionally inspected and tested to work and look like new by Amazon-qualified suppliers. It offers an immersive gaming experience with its unique 3D capabilities without the need for special glasses, dual screens, and a variety of input methods.

The Nintendo 3DS is designed for gaming on the go, featuring a built-in camera, touchscreen, and stylus for interactive gameplay and capturing moments. Its compact design makes it suitable for travel and entertainment anywhere.

SETUP GUIDE

1. Initial Setup

Upon receiving your Nintendo 3DS, ensure all components are present: the Nintendo 3DS console, AC adapter, stylus, and any included documentation. Before first use, it is recommended to fully charge the device.



Figure 1: The Nintendo 3DS console in its open position, showcasing both screens and controls.

2. Charging the Console

To charge your Nintendo 3DS, connect the AC adapter to the charging port located on the back of the console. Plug the other end of the AC adapter into a standard wall outlet. The charging indicator light will illuminate, typically orange, to show that the console is charging. A full charge is indicated when the light turns off.



Figure 2: Charging port location on the Nintendo 3DS.

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on the console, press the **POWER** button located on the bottom right of the console. To power off, hold the **POWER** button until the system shuts down.

2. Basic Controls

- **Circle Pad:** Used for analog movement in games.
- **Directional Pad (D-Pad):** Used for directional input, menu navigation.
- **A/B/X/Y Buttons:** Action buttons for gameplay and menu selection.
- **L/R Buttons:** Shoulder buttons, often used for specific in-game actions.
- **Touch Screen:** The bottom screen is a touch screen, operable with the included stylus or your finger.
- **3D Slider:** Located on the right side of the top screen, this slider adjusts the intensity of the 3D effect or turns it off.



Figure 3: Overview of the Nintendo 3DS controls.

3. Playing Games

Insert a Nintendo 3DS game card into the game card slot on the back of the console. The game icon will appear on the Home Menu. Tap the icon to start the game. For digital titles, select the game from the Home Menu.



Figure 4: The Nintendo 3DS Home Menu.

4. Using the Camera

The Nintendo 3DS features two outer cameras for 3D photos and videos, and one inner camera for 2D photos. Access the Camera application from the Home Menu to take pictures or record videos. The stylus can be used to tap on-screen controls.



Figure 5: Outer cameras on the Nintendo 3DS.

MAINTENANCE

1. Cleaning the Console

To clean the Nintendo 3DS, use a soft, dry cloth. For stubborn smudges on the screens, a slightly damp, lint-free cloth can be used. Avoid using harsh chemicals or abrasive materials, as these can damage the console's finish or screens.

2. Storage

Store the console in a cool, dry place away from direct sunlight and extreme temperatures. When not in use, close the console to protect the screens. It is advisable to store it in a protective case to prevent scratches and impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Console does not power on.	Low battery or power issue.	Ensure the console is fully charged. Check the AC adapter connection.
Game card not recognized.	Improperly inserted game card or dirty contacts.	Remove and reinsert the game card firmly. Clean the game card contacts with a soft cloth.
3D effect is blurry or causes discomfort.	Incorrect viewing angle or 3D slider setting.	Adjust the 3D slider to a comfortable level or turn it off. Ensure you are holding the console at the correct viewing distance and angle.

SPECIFICATIONS

Model Number: CTRSKAAAUSZ

Product Dimensions: 5.3 x 2.9 x 0.8 inches

Item Weight: 14.4 ounces

Platform: Nintendo 3DS

Input Device: Gamepad, Touchscreen, Stylus

Compatible Flash Memory Type: SDHC

Date First Available: August 12, 2015

WARRANTY AND SUPPORT

As an Amazon Renewed product, this Nintendo 3DS Handheld System is backed by the **Amazon Renewed Guarantee**. If you are not satisfied with your purchase, renewed products are eligible for replacement or refund within 90 days of receipt under this guarantee.

For further assistance or to inquire about additional protection plans, please refer to the Amazon Renewed product page or contact Amazon customer support directly.

- **2-Year Protection Plan:** Available for purchase.
- **3-Year Protection Plan:** Available for purchase.
- **Complete Protect:** Monthly plan covering eligible past and future purchases.

For detailed terms and conditions regarding the Amazon Renewed Guarantee and available protection plans, please visit the official Amazon website or consult the documentation provided with your purchase.