



[Manuals.plus](#) /

> [Panasonic](#) /

> Panasonic KX-TG1611 DECT Cordless Telephone User Manual

Panasonic KX-TG1611

Panasonic KX-TG1611 DECT Cordless Telephone User Manual

Model: KX-TG1611

1. INTRODUCTION AND OVERVIEW

This manual provides instructions for the safe and efficient use of your Panasonic KX-TG1611 DECT Cordless Telephone. The KX-TG1611 is designed for clear communication and ease of use, featuring Caller ID with a 50-entry memory, a user-friendly interface, and a selection of ringtones. It also supports conference calls and intercom functionality between handsets (if multiple are registered).

Please read these instructions carefully before using the telephone and retain them for future reference.



Figure 1: Panasonic KX-TG1611 DECT Cordless Telephone Handset and Base Unit. This image shows the black and red handset resting on its compact base station.

2. SETUP

2.1 Unpacking and Component Check

Before beginning setup, ensure all components are present in the package:

- Cordless Handset
- Base Unit
- AC Power Adaptor for Base Unit
- Telephone Line Cord
- Rechargeable NiMH Battery (1 x NiMH)
- Handset Cover

2.2 Battery Installation

1. Remove the handset cover by sliding it downwards.
2. Insert the supplied NiMH rechargeable battery into the battery compartment, ensuring correct polarity (+/-).
3. Replace the handset cover.

2.3 Base Unit Connection

1. Connect the AC power adaptor to the base unit and then plug it into a standard electrical outlet.
2. Connect the telephone line cord to the base unit and then to your telephone wall jack.
3. Place the base unit on a flat, stable surface.

2.4 Initial Battery Charge

Place the handset on the base unit and allow it to charge for at least 7 hours before initial use. The charge indicator on the handset will illuminate during charging.

3. OPERATING INSTRUCTIONS

3.1 Making Calls

- **Dialing Manually:** Lift the handset, press the **TALK** button, then dial the phone number.
- **From Phonebook:** Press the **PHONEBOOK** button, navigate to the desired entry, then press **TALK**.
- **Redial:** Press the **REDIAL** button, select the number, then press **TALK**.

3.2 Receiving Calls

When the phone rings, press the **TALK** button to answer the call. To end a call, press the **END** button or place the handset back on the base unit.

3.3 Caller ID

The telephone displays the caller's information (number and name, if available) before you answer.

- **Viewing Call Log:** Press the **CALL LOG** button to scroll through recent incoming calls.
- **Storing Numbers:** From the call log, you can save numbers to the phonebook by following the on-screen prompts. The phone can store up to 50 entries.

3.4 Phonebook Management

- **Adding an Entry:** Press **MENU**, navigate to "Phonebook", select "Add Entry", then enter the name and number.
- **Editing an Entry:** Press **PHONEBOOK**, select the entry, press **MENU**, then select "Edit".
- **Deleting an Entry:** Press **PHONEBOOK**, select the entry, press **MENU**, then select "Delete".

3.5 Ringtone Selection

To change the ringtone: Press **MENU**, navigate to "Ringer Settings", then select "Ringtone" and choose from the available options.

3.6 Speakerphone Function

During a call, press the **SPEAKER** button to activate the speakerphone. Press it again to switch back to the handset earpiece.

3.7 Conference Call and Intercom

If you have multiple registered handsets, you can initiate an intercom call between them or set up a 3-way conference call (two internal handsets and one external line). Refer to the on-screen menu for specific steps to initiate these functions.

4. MAINTENANCE

4.1 Cleaning

Wipe the telephone and base unit with a soft, damp cloth. Do not use abrasive cleaners, benzene, thinner, or any other chemical agents, as these may damage the surface. Ensure the unit is unplugged from the power outlet before cleaning.

4.2 Battery Care

- Use only the supplied rechargeable NiMH battery.
- If the handset will not be used for an extended period, remove the battery to prevent leakage.
- Dispose of used batteries according to local regulations. Do not incinerate.

4.3 Storage

Store the telephone in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

Problem	Solution
No dial tone.	<ul style="list-style-type: none">• Ensure the telephone line cord is securely connected to both the base unit and the wall jack.• Check if the AC power adaptor is properly connected to the base unit and the power outlet.• Verify that the handset battery is charged.
Cannot make or receive calls.	<ul style="list-style-type: none">• Check the telephone line connection.• Ensure the handset is within range of the base unit.• Confirm the battery is charged.• If using a DSL service, ensure a DSL filter is installed.
Poor sound quality / Static.	<ul style="list-style-type: none">• Move the handset closer to the base unit.• Avoid placing the base unit near other electronic devices (e.g., microwaves, computers) that may cause interference.• Check for loose connections.
Handset battery does not charge.	<ul style="list-style-type: none">• Ensure the handset is correctly placed on the base unit.• Clean the charging contacts on both the handset and base unit with a dry cloth.• Verify the AC power adaptor is connected.• The battery may need replacement if it is old.

6. SPECIFICATIONS

Feature	Detail
Model Number	KX-TG1611
Technology	DECT (Digital Enhanced Cordless Telecommunications)
Caller ID	Yes, with 50-entry memory
Phonebook Capacity	50 entries

Feature	Detail
Speakerphone	Yes
Ringtones	Wide range available
Conference Call Capability	Basic (3-way with multiple handsets)
Intercom Function	Yes (between multiple handsets)
Battery Type	1 x NiMH Rechargeable Battery
Talk Time	Up to 900 minutes (approx. 15 hours)
Standby Time	Up to 170 hours
Color	Black/Red
Material	Metal (Enclosure)
Dimensions (Base Unit)	Approx. 18 x 13 x 9.6 cm (from Parcel Dimensions, assuming this is for the package)
Weight	Approx. 540 g (from Parcel Dimensions, assuming total package weight)

Note: Specifications are subject to change without notice. Talk and standby times are approximate and depend on usage conditions.

7. WARRANTY AND SUPPORT

Your Panasonic KX-TG1611 telephone is covered by a limited warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details. For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact Panasonic customer support. You may find contact information and additional resources on the official Panasonic website or through the retailer where you purchased the product.

Online Resources: For further information and support, visit the official [Panasonic Store on Amazon](#).