

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Invicta](#) /

› [Invicta S1 Rally Analog Watch Model 20218 User Manual](#)

## Invicta 20218

# Invicta S1 Rally Analog Watch Model 20218 User Manual

Model: 20218

## INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Invicta S1 Rally Analog Watch, Model 20218. This timepiece features a 51 mm ion-plated stainless steel case, a flexible polyurethane strap, 100-meter water resistance, and a two-subdial chronograph function. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Image: Front view of the Invicta S1 Rally Analog Watch, Model 20218, showcasing its grey dial, chronograph subdials, and black and red strap accents.

## SETUP

## Setting the Time

1. Pull the crown out to position 2. The second hand will stop.
2. Turn the crown to set the hour and minute hands to the desired time.
3. Push the crown back into position 0 (normal operating position). The second hand will resume movement.

## Setting the Date

1. Pull the crown out to position 1.
2. Turn the crown clockwise to set the date. Adjust the date to the day before the current date.
3. Pull the crown out to position 2.
4. Turn the crown to advance the hour hand past 12 o'clock until the date changes to the current date. Continue turning to set the correct time (AM/PM).
5. Push the crown back into position 0.

## Chronograph Reset to Zero Position

If the chronograph hands (second, minute) are not at the zero position after resetting, they can be adjusted as follows:

1. Pull the crown out to position 2.
2. Press button A (top pusher) repeatedly to advance the chronograph second hand to the zero position.
3. Press button B (bottom pusher) repeatedly to advance the chronograph minute hand to the zero position.
4. Once all chronograph hands are at zero, push the crown back into position 0.

---

## OPERATION

### Using the Chronograph

The chronograph function allows for precise timing of events up to 60 minutes.

1. **Start/Stop:** Press button A (top pusher) to start the chronograph. Press button A again to stop it.
2. **Reset:** While the chronograph is stopped, press button B (bottom pusher) to reset all chronograph hands to the zero position.

### Using the Tachymeter

The tachymeter scale on the bezel can be used to measure speed over a known distance (e.g., 1 kilometer or 1 mile) or to measure production per hour.

- **To measure speed:** Start the chronograph at the beginning of the measured mile/kilometer. When you reach the end of the mile/kilometer, stop the chronograph. The number indicated by the chronograph second hand on the tachymeter scale is the average speed in units per hour.
- **To measure production:** Start the chronograph when you begin a task. When one unit of work is completed, stop the chronograph. The number indicated by the chronograph second hand on the tachymeter scale is the number of units produced per hour.



## MAINTENANCE

### Water Resistance

Your Invicta S1 Rally watch is water-resistant up to 100 meters (330 feet). This rating makes it suitable for swimming and snorkeling, but it is **not** recommended for scuba diving. Always ensure the crown is fully pushed in before exposing the watch to water. Do not operate the crown or pushers while the watch is wet or submerged.

### Cleaning

To maintain the appearance of your watch, wipe the case and strap with a soft, damp cloth. For the polyurethane strap, mild soap and water can be used. Avoid harsh chemicals or abrasive materials that could damage the watch's finish or crystal.

### Battery Replacement

This watch is powered by a product-specific quartz battery. When the battery needs replacement, it is recommended to take your watch to an authorized Invicta service center or a reputable watchmaker to ensure proper battery installation and maintenance of water resistance.

### Flame Fusion Crystal Care

The watch features a Flame Fusion Crystal, known for its scratch resistance. While durable, avoid direct impact and abrasive contact to prevent damage. Clean with a soft, lint-free cloth.

---

## TROUBLESHOOTING

- Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- Incorrect time/date:** Refer to the "Setting the Time" and "Setting the Date" sections to re-adjust. Ensure the crown is securely pushed in after setting.
- Chronograph hands not resetting to zero:** Follow the "Chronograph Reset to Zero Position" instructions in the Setup section.
- Water inside the watch:** If condensation or water appears inside the watch, immediately take it to an authorized service center. This indicates a breach in water resistance.

---

## SPECIFICATIONS

Feature	Detail
Model Number	20218
Brand	Invicta
Movement Type	Quartz

Feature	Detail
Case Diameter	51 Millimetres
Case Material	Ion Plated Stainless Steel
Crystal Type	Flame Fusion Crystal
Band Material Type	Plastic (Polyurethane)
Band Colour	Black
Water Resistance Depth	100 Meters (330 Feet)
Chronograph Functions	60 Second and 60 Minute Subdials
Date Display	Date Window at 3:00
Special Features	Luminous hands/markers, Tachymeter
Item Weight	136 g
Batteries	1 Product Specific battery (included)

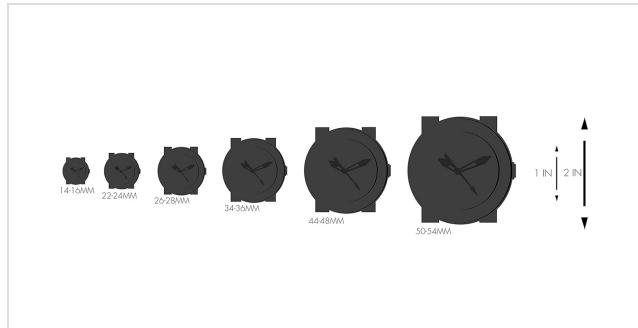


Image: Visual guide illustrating various watch case diameters for size comparison, including the 50-54mm range relevant to this watch.

## WARRANTY AND SUPPORT

Your Invicta S1 Rally Analog Watch, Model 20218, comes with a manufacturer's warranty. For specific warranty details, claims, or technical support, please contact the seller of record or visit the official Invicta website. Keep your proof of purchase for warranty validation.

You can find more information and contact details on the [Invicta Store on Amazon](#).



Image: The yellow Invicta branded watch box, indicating original packaging.

© 2023 Invicta. All rights reserved. This manual is for informational purposes only.