

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hobart](#) /

› [Hobart Dishwasher Blanking Plug Instruction Manual for AUXXT, AMX-900, AMXS-900, AUXX-1300, UXT Models](#)

Hobart 774808-1

Hobart Dishwasher Blanking Plug Instruction Manual

Model: 774808-1

INTRODUCTION

This manual provides essential information for the proper installation, function, and maintenance of the Hobart Blanking Plug, Model 774808-1. Please read these instructions carefully before installation and retain them for future reference. This plug is designed to seal specific openings within Hobart dishwasher systems.

PRODUCT OVERVIEW

The Hobart Blanking Plug (Part Number 774808-1) is a critical component used in various Hobart commercial dishwashers. Its primary function is to seal unused ports or openings, ensuring the integrity of the dishwasher's internal systems, particularly in boiler sections. This prevents leaks and maintains optimal operating conditions.



Figure 1: Hobart Blanking Plug. This image displays the cylindrical blanking plug, featuring a ribbed design for secure fitting and sealing within a dishwasher system. It is designed for durability in demanding commercial kitchen environments.

COMPATIBILITY

This blanking plug is compatible with the following Hobart dishwasher models:

- AUXXT
- AMX-900
- AMXS-900
- AUXX-1300
- UXT

It is specifically designed for applications requiring a plug with a width of 17 mm and a length of 69 mm, typically found in boiler sections of these machines.

INSTALLATION (SETUP)

1. **Safety First:** Ensure the dishwasher is completely powered off and disconnected from the main power supply before beginning any installation or maintenance.
2. **Locate the Port:** Identify the specific opening or port in the dishwasher system where the blanking plug is to be installed. This is typically in the boiler or water circulation system.
3. **Clean the Area:** Thoroughly clean the port area, removing any debris, scale, or old sealant residues to ensure a proper seal.
4. **Insert the Plug:** Carefully insert the Hobart Blanking Plug into the designated port. Apply firm, even pressure.
5. **Secure the Seal:** Depending on the specific dishwasher model and port design, additional securing methods (e.g., a clamp, retaining clip, or sealant) may be required. Refer to your dishwasher's main service manual for specific instructions regarding the port you are sealing.
6. **Verify Installation:** Once installed, visually inspect the plug to ensure it is seated correctly and securely.
7. **Test for Leaks:** After reassembling the dishwasher and restoring power, perform a test cycle and carefully check for any leaks around the newly installed blanking plug.

Note: If you are unsure about any step, consult a qualified service technician.

OPERATION

The blanking plug is a passive component. Once correctly installed, it functions by sealing an opening within the dishwasher's system. It requires no active operation. Its presence ensures the closed integrity of the system, preventing water or steam leakage from the sealed port during dishwasher operation.

MAINTENANCE

Regular inspection of the blanking plug is recommended as part of routine dishwasher maintenance:

- **Visual Inspection:** Periodically check the plug for any signs of wear, cracking, or degradation, especially if it is exposed to high temperatures or harsh chemicals.
- **Leak Detection:** During dishwasher operation, observe the area around the plug for any signs of water drips or steam leaks.
- **Replacement:** If the plug shows any signs of damage or leakage, it should be replaced immediately with a genuine Hobart replacement part (Model 774808-1) to prevent potential damage to the dishwasher or surrounding environment.

TROUBLESHOOTING

While the blanking plug is a simple component, issues can arise if it is not installed correctly or if it becomes damaged.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Water leakage around the plug	<ul style="list-style-type: none"> • Improper installation • Damaged or worn plug • Incorrect plug size/type 	<ul style="list-style-type: none"> • Re-install the plug, ensuring a secure fit. • Replace the plug with a new Hobart 774808-1. • Verify that the correct plug for your dishwasher model is being used.
Plug appears loose	<ul style="list-style-type: none"> • Vibration during operation • Improper initial seating 	<ul style="list-style-type: none"> • Ensure the plug is fully seated and secured. • Inspect for any damage to the port or plug that might prevent a tight fit.

For persistent issues or if you are unable to resolve a problem, contact Hobart customer support or a certified service technician.

SPECIFICATIONS

Brand	Hobart
Model Number / Part Number	774808-1
Application	Dishwasher (AUXXT, AMX-900, AMXS-900, AUXX-1300, UXT models)
Width	17 mm
Length	69 mm
ASIN	B013VRKETK
Batteries Required	No

WARRANTY INFORMATION

Specific warranty details for replacement parts like the Hobart Blanking Plug are typically covered under the general warranty terms for Hobart spare parts. Please refer to your original dishwasher's warranty documentation or contact Hobart customer service for precise warranty coverage applicable to this component. Keep your purchase receipt as proof of purchase.

SUPPORT INFORMATION

For technical assistance, spare parts, or service inquiries, please contact Hobart customer support. You can find contact information on the official Hobart website or through your local authorized Hobart dealer.

Online Resources: www.hobart.com

When contacting support, please have your dishwasher model number and the blanking plug part number (774808-1) ready.

