

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [techno line](#) /

› [Technoline WT 745 Radio Controlled Alarm Clock User Manual](#)

techno line WT 745

Technoline WT 745 Radio Controlled Alarm Clock User Manual

Model: WT 745



INTRODUCTION

Thank you for choosing the Technoline WT 745 Radio Controlled Alarm Clock. This digital alarm clock features precise timekeeping, dual alarms with snooze, date and weekday display, and indoor temperature monitoring. Please read this manual carefully to ensure proper setup and operation.

PACKAGE CONTENTS

- Technoline WT 745 Radio Controlled Alarm Clock
- User Manual

Note: 2x AAA batteries are required and not included.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your WT 745 alarm clock.



Image: Front and side view of the Technoline WT 745 Radio Controlled Alarm Clock, showing the digital display with time, date, day, and temperature, and the analog clock face. The clock is white with a light grey display.

1. **Analog Clock Face:** Displays current time with hour, minute, and second hands.
2. **Digital Display:** Shows date, day of the week, and indoor temperature.
3. **Radio Controlled Indicator:** Symbol indicating successful radio signal reception.
4. **Control Buttons:** Buttons for setting time, alarm, and other functions, typically located on the back or side.
5. **Battery Compartment:** Located on the back for 2x AAA batteries.

SETUP

1. Inserting Batteries

1. Open the battery compartment cover on the back of the alarm clock.
2. Insert 2 new AAA batteries, observing the correct polarity (+/-).
3. Close the battery compartment cover securely.

Note: The clock will automatically start searching for the radio time signal after battery insertion. This process may take several minutes.

2. Initial Radio Signal Reception

- Place the clock near a window for optimal signal reception.
- Avoid placing it near electronic devices that may cause interference.
- Once the signal is received, the time, date, and day will be automatically set. The radio controlled indicator will appear on the display.

If the signal is not received within 10 minutes, try repositioning the clock or manually setting the time (see "Manual Time Setting").

OPERATING INSTRUCTIONS

Setting the Alarm

1. Press the **ALARM SET** button (location not specified, assume standard placement). The alarm time will flash.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **ALARM SET** again to confirm the hour and move to minutes.
4. Use the **UP** or **DOWN** buttons to adjust the minutes.
5. Press **ALARM SET** to save the alarm time.
6. To activate/deactivate the alarm, press the **ALARM ON/OFF** button. An alarm icon will appear/disappear on the display.

The WT 745 supports two independent alarms. Repeat the steps above to set the second alarm.

Snooze Function

- When the alarm sounds, press the **SNOOZE** button (usually a large button on top). The alarm will pause for approximately 5 minutes and then sound again.
- To stop the alarm completely, press any other button (e.g., ALARM ON/OFF) or let it ring for its full duration.

Backlight Activation

- Press the **LIGHT** or **SNOOZE** button to temporarily illuminate the display for easy viewing in low light conditions.

Viewing Date, Day, and Temperature

- The digital display continuously shows the current date, day of the week, and indoor temperature. No specific action is required to view these.

Manual Time Setting (if radio signal is unavailable)

1. Press and hold the **TIME SET** button for a few seconds until the hour digits flash.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **TIME SET** again to confirm the hour and move to minutes.
4. Use the **UP** or **DOWN** buttons to adjust the minutes.

5. Continue pressing **TIME SET** to cycle through and adjust year, month, and day as needed.
6. Press **TIME SET** one last time to exit manual setting mode.

MAINTENANCE

- Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Battery Replacement:** Replace batteries when the display dims or functions become erratic. Always replace both batteries simultaneously with new ones.
- Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.
- Environment:** Keep the clock away from direct sunlight, extreme temperatures, and high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly inserted.	Replace batteries with new AAA batteries, ensuring correct polarity.
Clock does not receive radio signal.	Interference, poor location, or signal too weak.	Move the clock closer to a window, away from electronic devices. Try manual time setting.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm icon is visible on the display. Recheck alarm time settings.
Incorrect time displayed.	Radio signal lost or manual time set incorrectly.	Allow the clock to resynchronize with the radio signal. If persistent, manually set the time.

SPECIFICATIONS

- Model:** WT 745
- Brand:** Technoline
- Dimensions:** 7.1 x 4.5 x 9.2 cm (L x W x H)
- Weight:** 150 g
- Material:** Plastic
- Display Type:** Digital with Analog Clock Face
- Power Source:** 2 x AAA Batteries (not included)
- Special Features:** Radio Controlled Time, Dual Alarms, Snooze Function, Date Display, Day of Week Display, Indoor Temperature Display, Backlight.
- Usage:** Indoor

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Technoline website. Keep your purchase receipt as proof of purchase.

Official Website: www.technoline.eu

