

Manuals.plus /

- › Viko /
- › VIKO Push-Rotary Dimmer Switch Rocker User Manual

Viko Push-Rotary Dimmer Switch Rocker

VIKO Push-Rotary Dimmer Switch Rocker User Manual

Brand: Viko | Model: Push-Rotary Dimmer Switch Rocker

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your VIKO Push-Rotary Dimmer Switch Rocker. Please read this manual thoroughly before installation and use to ensure safe and efficient operation. This device is designed for controlling lighting circuits with a 1-way configuration.

2. SAFETY INFORMATION

- **Electrical Hazard:** Installation must be performed by a qualified electrician or in accordance with local electrical codes. Turn off power at the circuit breaker before installation or servicing.
- Do not install with wet hands or when standing on wet surfaces.
- Ensure the dimmer switch is compatible with your lighting fixtures and bulbs.
- Do not exceed the maximum current rating of 1 Ampere.
- This product is for indoor use only.

3. PACKAGE CONTENTS

- VIKO Push-Rotary Dimmer Switch Rocker (1 unit)
- Mounting Screws (quantity may vary)
- Instruction Manual (this document)

4. SETUP AND INSTALLATION

Follow these steps to install your dimmer switch. Always ensure power is OFF at the circuit breaker before beginning any electrical work.

1. **Turn Off Power:** Locate the circuit breaker controlling the light fixture and turn off the power. Verify power is off using a voltage tester.

2. **Remove Old Switch:** Carefully remove the existing wall plate and switch from the wall box. Disconnect the wires from the old switch, noting their connections.
3. **Wire the Dimmer:** Connect the wires from the wall box to the VIKO dimmer switch terminals. This dimmer uses a Blade terminal type and is designed for 1-way circuits. Ensure secure connections.
4. **Mount the Dimmer:** Gently push the wired dimmer switch into the wall box. Secure it with the provided mounting screws.
5. **Attach Wall Plate:** Install the decorative wall plate over the dimmer switch.
6. **Restore Power:** Turn the power back on at the circuit breaker.



Image of the VIKO Push-Rotary Dimmer Switch Rocker, showing its front face and rotary knob. This image illustrates the general appearance of the device for installation reference.

5. OPERATING INSTRUCTIONS

The VIKO Push-Rotary Dimmer Switch Rocker features a simple and intuitive operation:

- **Turn ON/OFF:** Press the rotary knob firmly to toggle the connected lights ON or OFF. The operation mode is ON-OFF.
- **Dimming:** Once the lights are ON, rotate the knob clockwise to increase brightness and counter-clockwise to decrease brightness. The actuator type is Rotary.

6. MAINTENANCE

- **Cleaning:** To clean the dimmer switch, wipe it with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the plastic material.
- **Inspection:** Periodically inspect the dimmer switch for any signs of damage or loose connections. If any issues are found, turn off power at the circuit breaker and consult a qualified electrician.

7. TROUBLESHOOTING

- **Lights do not turn ON:**

- Check if the circuit breaker is ON.
- Ensure all wiring connections are secure.
- Verify that the light bulb is functional and properly installed.

- **Dimming function does not work:**

- Confirm that the light bulbs are dimmable. Not all LED or CFL bulbs are compatible with dimmers.
- Ensure the dimmer is correctly wired for dimming functionality.

- **Dimmer is hot to the touch:**

- A slight warmth is normal. If it's excessively hot, turn off power immediately and check for overloaded circuits or incorrect wiring. Do not exceed the 1 Ampere current rating.

8. SPECIFICATIONS

Brand	Viko
Manufacturer	VIKO
Model (ASIN)	B013Y3LL84
Operation Mode	ON-OFF
Current Rating	1 Ampere
Contact Type	Normally Open
Switch Type	Rocker Switch
Terminal Type	Blade
Material	Plastic
Circuit Type	1-way
Mounting Type	Wall Mount
Actuator Type	Rotary
Dimensions (Approx.)	50 x 50 mm (based on product description)

9. WARRANTY AND SUPPORT

Specific warranty details are not provided in the product information. For warranty claims or technical support, please contact your retailer or the manufacturer, VIKO, directly. Keep your proof of purchase for any warranty-related inquiries.