

Manuals.plus /

- › Westclox /
- › WESTCLOX 70012BK Instant-Set LED Alarm Clock User Manual

Westclox 70012BK

WESTCLOX 70012BK Instant-Set LED Alarm Clock User Manual

Model: 70012BK | Brand: Westclox

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Westclox 70012BK Instant-Set LED Alarm Clock. Please read this manual thoroughly before using the device to ensure proper function and longevity.



Figure 1: Westclox 70012BK Instant-Set LED Alarm Clock. This image shows the front view of the black alarm clock with a large red LED display. Below the display are several control buttons, including 'HOUR', 'MINUTE', 'AL ON/OFF', 'TIME', 'ALARM', and a prominent 'SNOOZE' bar. The brand name "Westclox" is visible below the digital time.

SETUP

The Westclox 70012BK alarm clock is designed for easy setup. Follow these steps to prepare your clock for use.

Powering the Clock

This alarm clock is battery powered. Ensure you have the correct type and number of batteries as specified in the 'Specifications' section.

1. Locate the battery compartment on the back or bottom of the clock.
2. Open the battery compartment cover.
3. Insert the required batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Initial Time Setting

Upon inserting batteries, the clock may automatically display a default time or begin flashing. You will need to set the current time.

- Press and hold the **TIME** button.
- While holding the **TIME** button, press the **HOUR** button repeatedly to advance the hour. Observe the PM indicator if setting a PM time.
- Release the **HOUR** button when the correct hour is displayed.
- While still holding the **TIME** button, press the **MINUTE** button repeatedly to advance the minute.
- Release both buttons when the correct time is set.

OPERATING INSTRUCTIONS

This section details the daily operation of your Westclox alarm clock.

Setting the Alarm

1. Press and hold the **ALARM** button.
2. While holding the **ALARM** button, press the **HOUR** button repeatedly to set the desired alarm hour. Pay attention to the PM indicator.
3. Release the **HOUR** button.
4. While still holding the **ALARM** button, press the **MINUTE** button repeatedly to set the desired alarm minute.
5. Release both buttons when the alarm time is set.

Activating/Deactivating the Alarm

To turn the alarm on or off, locate the **AL ON/OFF** button.

- Press the **AL ON/OFF** button once to activate the alarm. An alarm indicator (e.g., a small light or icon) should appear on the display.
- Press the **AL ON/OFF** button again to deactivate the alarm. The alarm indicator should disappear.

Snooze Function

When the alarm sounds, you can temporarily silence it using the snooze function.

- Press the large **SNOOZE** bar located on the front of the clock.

- The alarm will temporarily stop and sound again after a few minutes (typically 9 minutes, refer to product specifications for exact duration if available).

Stopping the Alarm

To stop the alarm completely until the next set time, press the **AL ON/OFF** button when the alarm is sounding. This will turn off the alarm for the current cycle.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your alarm clock.

Cleaning

- Unplug the clock from any power source (if applicable) or remove batteries before cleaning.
- Wipe the exterior of the clock with a soft, dry cloth.
- For stubborn marks, slightly dampen the cloth with water, then wipe dry immediately.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish or internal components.

Battery Replacement

If the display dims, the alarm sounds weakly, or the clock stops functioning, it may be time to replace the batteries.

- Follow the steps outlined in the 'Powering the Clock' section under 'Setup' to replace the old batteries with new ones.
- Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

If you encounter issues with your Westclox 70012BK alarm clock, refer to the following common problems and their solutions.

| Problem | Possible Cause | Solution |
|--------------------------------|---|--|
| Clock display is blank or dim. | Batteries are dead or inserted incorrectly. | Check battery polarity and replace with fresh batteries. |
| Alarm does not sound. | Alarm is not activated or set incorrectly. | Ensure the alarm time is set correctly and the AL ON/OFF button is pressed to activate the alarm (alarm indicator should be visible). |
| Time is incorrect. | Time was not set properly or batteries were removed. | Reset the current time following the 'Initial Time Setting' instructions. |
| Snooze function not working. | Snooze bar not pressed correctly or alarm was turned off. | Ensure you press the SNOOZE bar while the alarm is sounding. If the alarm was turned off, it will not snooze. |

SPECIFICATIONS

Key technical specifications for the Westclox 70012BK Instant-Set LED Alarm Clock.

- **Brand:** Westclox
- **Model Number:** 70012BK
- **Product Dimensions:** 10.41 x 11.43 x 16.26 cm
- **Item Weight:** 295 g
- **Material:** Plastic

- **Display Type:** Digital (LED)
- **Special Features:** Alarm
- **Power Source:** Battery Powered

WARRANTY INFORMATION

The Westclox 70012BK Instant-Set LED Alarm Clock comes with a limited warranty.

- **Warranty Period:** One (1) Year from the date of purchase.
- This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty claims, please contact Westclox customer service. Refer to the product packaging or the official Westclox website for the most current contact information.

When contacting support, please have your model number (70012BK) and purchase date available.

