

Manuals.plus /

› Hasbro /

› Hasbro Nerf Mega Series Sonic Ice ThunderBow Blaster Instruction Manual

Hasbro nerf-icethunderbow

Nerf Mega Series Sonic Ice ThunderBow Blaster Instruction Manual

Model: nerf-icethunderbow

[Information](#) [Setup](#) [Operation](#) [Maintenance](#) [Overview](#) [Safety](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Nerf Mega Series Sonic Ice ThunderBow Blaster is a high-performance, bow-action dart blaster designed for exciting play. This transparent blue version of the Mega ThunderBow fires Mega darts up to 100 feet (30 meters). The blaster is part of the N-Strike Mega Series and uses Whistler Darts that produce a screaming sound as they fly.



Image: The Nerf Mega Series Sonic Ice ThunderBow Blaster, showcasing its transparent blue design and bow-action mechanism.

2. IMPORTANT SAFETY INFORMATION

CAUTION:

- Do not aim at eyes or face.
- To avoid injury, use only darts designed for this product.
- Do not modify darts or the dart blaster.

3. SETUP

3.1 Unboxing

Carefully remove all components from the packaging. Ensure you have the Nerf Mega Series Sonic Ice ThunderBow Blaster and the included Mega darts.

3.2 Loading Darts

1. Ensure the blaster is not primed.
2. Insert one Mega dart into each of the dart loading ports on the front of the blaster. Push the darts in firmly until they are securely seated.

4. OPERATING INSTRUCTIONS

4.1 Priming the Blaster

To prime the Sonic Ice ThunderBow, grasp the bowstring handle and pull it back firmly until it locks into place. You will hear a click when it is fully primed.

4.2 Firing Darts

1. Once the blaster is primed and loaded with darts, aim at your target, ensuring it is not at anyone's eyes or face.
2. Pull the trigger to fire a dart. The ThunderBow fires multiple darts in quick succession with each pull of the trigger.

5. MAINTENANCE

5.1 Cleaning

Wipe the blaster with a clean, damp cloth to remove dust and debris. Do not submerge the blaster in water or use harsh chemicals.

5.2 Dart Care

Inspect darts regularly for damage. Discard any torn or damaged darts as they may affect performance or cause jams. Store darts in a clean, dry place.

6. TROUBLESHOOTING

6.1 Darts Not Firing

- Ensure the blaster is fully primed. Pull the bowstring handle back until it clicks.
- Check if darts are properly loaded into the loading ports. Push them in firmly.

- Inspect darts for damage. Damaged darts may not fire correctly.

6.2 Jams

- If a dart becomes jammed, ensure the blaster is unprimed.
- Carefully remove the jammed dart from the loading port or barrel. Do not force it.
- Always use official Nerf Mega darts to prevent jams.

7. SPECIFICATIONS

Product Name	Nerf Mega Series Sonic Ice ThunderBow Blaster
Brand	Hasbro
Model Number	nerf-icethunderbow
Product Dimensions	31 x 16 x 3 inches
Item Weight	4.04 pounds
Manufacturer Recommended Age	8 years and up (based on packaging)
Dart Type	Nerf Mega Darts (Whistler Darts)
Firing Range	Up to 100 feet (30 meters)

8. WARRANTY & SUPPORT

For warranty information or product support, please contact Hasbro customer service directly. Refer to the product packaging or the official Hasbro website for the most current contact details and warranty terms.
Website: www.hasbro.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question