

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Funko](#) /
- › [Funko Pop! Jurassic Park Dennis Nedry & Dilophosaurus Figure Set User Manual](#)

Funko B0141T2TP4

Funko Pop! Jurassic Park Dennis Nedry & Dilophosaurus Figure Set User Manual

Your guide to the care and display of your collectible figures.

1. INTRODUCTION

This manual provides essential information for the proper handling, display, and care of your Funko Pop! Jurassic Park Dennis Nedry and Dilophosaurus vinyl figure 2-pack. These collectible figures are designed for display and are not intended for active play.

2. PRODUCT OVERVIEW

The Funko Pop! Jurassic Park Dennis Nedry and Dilophosaurus 2-pack features two stylized vinyl figures from the iconic 1993 film. Dennis Nedry is depicted with goo splattered on his face, and the Dilophosaurus is shown with its frills extended, ready to spit. This set is an Entertainment Earth Exclusive.



Image: The Funko Pop! Jurassic Park Dennis Nedry and Dilophosaurus 2-pack, showcasing both figures within their window display box.

Key Features:

- Stylized vinyl figures of Dennis Nedry and Dilophosaurus.
- Inspired by the 1993 Jurassic Park film.
- Exclusive goo-splattered decoration on Dennis Nedry.

- Comes in a collector-friendly window display box.

3. SETUP AND DISPLAY

Your Funko Pop! figures are designed for immediate display. Carefully remove the figures from their packaging. The figures may include a clear plastic display base for added stability. Place the figures on a flat, stable surface away from direct sunlight, extreme temperatures, and high humidity to preserve their condition.

Unboxing:

1. Gently open the top or bottom flap of the window box.
2. Slide out the plastic insert containing the figures.
3. Carefully remove each figure from its molded plastic tray.
4. If a display base is included, attach the figure's feet to the pegs on the base.

4. CARE AND MAINTENANCE

To maintain the quality and appearance of your Funko Pop! figures, follow these simple care instructions:

- **Cleaning:** Use a soft, dry cloth or a soft-bristled brush to gently remove dust. Avoid abrasive cleaners or harsh chemicals, as these can damage the paint finish.
- **Handling:** Handle figures by their base or body to avoid smudging or damaging delicate parts.
- **Storage:** If storing, keep figures in their original packaging or in a cool, dry place away from direct light and extreme temperatures.

5. TROUBLESHOOTING

While Funko Pop! figures are generally robust, minor issues can sometimes occur.

Figure Stability:

If a figure seems unstable, ensure it is properly seated on its display base (if applicable) and placed on a completely flat surface. Slight variations in manufacturing can sometimes affect balance; repositioning or gently adjusting the figure's stance may help.

6. SPECIFICATIONS

Attribute	Detail
Brand	Funko
Model Number (ASIN)	B0141T2TP4
Theme	Film (Jurassic Park)
Material	Plastic (Vinyl)

Attribute	Detail
Color	Multicolor
Product Dimensions	20.3L x 16.5W x 8.9H centimeters (approximate for packaging)
Number of Pieces	2
Special Features	Goo-Splattered (Dennis Nedry)
Batteries Required	No
GTIN/UPC	889698294515

7. SAFETY INFORMATION

- **Age Recommendation:** This product is recommended for ages 3 years and up.
- **Small Parts:** Figures may contain small parts which could pose a choking hazard for young children. Keep out of reach of infants and toddlers.
- **Not a Toy:** While durable, these are collectible figures and not designed for rough play. Excessive force may cause damage.

8. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the retailer's policies where the product was purchased or visit the official Funko website. Specific warranty details are not provided in this manual.