

[Manuals.plus](#) /

› [Severin](#) /

› Severin BC 7058 Bagged Cylinder Vacuum Cleaner User Manual

Severin BC 7058

Severin BC 7058 Bagged Cylinder Vacuum Cleaner User Manual

Model: BC 7058

INTRODUCTION

This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your Severin BC 7058 Bagged Cylinder Vacuum Cleaner. Please read these instructions carefully before using the appliance for the first time and keep them for future reference.

The Severin BC 7058 is a powerful and quiet bagged cylinder vacuum cleaner designed for effective cleaning of hard floors, carpets, and upholstered furniture. It features adjustable suction power, a HEPA 14 activated carbon filter for odor neutralization, and comes with a range of specialized nozzles for various cleaning tasks.

SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the rating label matches your mains voltage.
- Do not operate the appliance with a damaged power cord or plug.
- Do not vacuum water or other liquids. This appliance is designed for dry vacuuming only.
- Do not vacuum hot ashes, burning cigarette butts, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the appliance from the mains socket before cleaning or performing any maintenance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

PRODUCT COMPONENTS

Familiarize yourself with the main components of your Severin BC 7058 vacuum cleaner.





Figure 1: Overall view of the Severin BC 7058 vacuum cleaner, showing the main unit, flexible hose, telescopic tube, and floor nozzle.



Figure 2: Top view of the vacuum cleaner body, highlighting the hose connection point and carrying handle.





Figure 3: Front view of the vacuum cleaner, showing the power button, cord rewind button, and suction power control dial.



Figure 4: Rear view of the vacuum cleaner, showing the exhaust filter cover and the power cord plug storage.

Included Accessories:

- 3 x Dust Bags
- XXL Upholstery Nozzle with Claw-Collect-System
- XL Parquet Nozzle
- Jet Drive Turbo Brush for carpets and mattresses
- Fabric bag containing: Crevice Nozzle and Furniture Brush

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Attaching the Hose:** Insert the flexible hose into the suction opening on the main unit until it clicks securely into place. To remove, press the release buttons on the side of the hose connection.
3. **Assembling the Telescopic Tube:** Connect the handle end of the hose to the telescopic tube. Adjust the length of the telescopic tube by pressing the release button and sliding it to the desired height.
4. **Attaching the Floor Nozzle:** Attach the desired floor nozzle (e.g., switchable floor nozzle, parquet nozzle, or turbo brush) to the end of the telescopic tube. Ensure it is firmly attached.
5. **Checking the Dust Bag:** Before first use, ensure a dust bag is correctly inserted. Open the dust bag compartment cover and verify the bag is seated properly. Close the cover securely.

OPERATING INSTRUCTIONS

1. **Power Connection:** Pull out the power cord to the desired length (up to 6 meters) and plug it into a suitable mains socket. The red mark on the cord indicates the maximum safe length.
2. **Switching On/Off:** Press the On/Off button (usually marked with 'I/O') on the main unit to start or stop the vacuum cleaner.
3. **Adjusting Suction Power:** Use the rotary dial on the main unit to adjust the suction power according to the surface being cleaned. Lower settings are suitable for delicate fabrics or light cleaning, while higher settings are for heavily soiled areas or hard floors.
4. **Using Floor Nozzles:**
 - **Switchable Floor Nozzle:** Use the foot switch on the nozzle to extend brushes for hard floors or retract them for carpets.
 - **Parquet Nozzle:** Ideal for delicate hard floors like parquet, laminate, or tiles.
 - **Turbo Brush:** Designed for deep cleaning carpets and removing pet hair. The rotating brush bar effectively agitates dirt and hair.



Figure 5: The floor nozzle transitioning between carpet and hard floor, demonstrating its versatility.

5. **Using Accessories:** Attach the crevice nozzle for narrow gaps, the furniture brush for dusting surfaces, or the XXL upholstery nozzle for cleaning sofas and cushions.
6. **Parking Aid:** The telescopic tube can be hooked into the parking slot on the rear of the vacuum cleaner for convenient storage during breaks or when not in use.
7. **Cord Rewind:** After use, press the cord rewind button to automatically retract the power cord into the appliance. Guide the cord manually to prevent tangling.

MAINTENANCE

1. Replacing the Dust Bag

The dust bag should be replaced when the dust bag indicator turns red, or when suction power noticeably decreases. Even if the bag is not full, it should be replaced if it has been used for a long period or if unpleasant odors occur.

1. Unplug the vacuum cleaner from the power outlet.
2. Open the dust bag compartment cover.
3. Carefully remove the full dust bag by pulling the cardboard collar. The bag opening will automatically seal.
4. Dispose of the full dust bag responsibly.
5. Insert a new Severin original dust bag into the holder, ensuring the cardboard collar is fully seated.
6. Close the dust bag compartment cover securely until it clicks.

2. Cleaning/Replacing Filters

Regular cleaning and replacement of filters are crucial for maintaining optimal suction power and air quality.

Motor Protection Filter:

- Open the dust bag compartment.
- Remove the motor protection filter.
- Tap the filter gently to remove loose dust. If heavily soiled, replace it.
- Reinsert the clean or new filter and close the compartment.

HEPA 14 Activated Carbon Exhaust Filter:

This filter cleans the exhaust air and neutralizes odors. It should be replaced approximately once a year, or more frequently with heavy use or pet ownership.

- Locate the exhaust filter compartment, typically at the rear of the vacuum cleaner.
- Open the filter cover.
- Remove the old HEPA filter.
- Insert a new HEPA 14 activated carbon filter.
- Close the filter cover securely.

3. Cleaning the Appliance

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Periodically check the floor nozzle and other attachments for blockages (e.g., hair, threads) and remove them.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not switch on.	No power supply; plug not inserted correctly.	Check power cord and plug; try a different power outlet.
Low suction power.	Dust bag full; filters clogged; hose/tube/nozzle blocked.	Replace dust bag; clean/replace filters; check for and remove blockages.
Unpleasant odor from vacuum cleaner.	Dust bag needs replacement; exhaust filter (HEPA) needs replacement.	Replace dust bag; replace HEPA 14 activated carbon filter.
Motor overheats and switches off.	Blockage in hose/tube/nozzle; filters heavily clogged.	Unplug, allow to cool for 30 minutes. Check and clear blockages; clean/replace filters.

SPECIFICATIONS

- **Model:** BC 7058
- **Brand:** Severin
- **Type:** Bagged Cylinder Vacuum Cleaner
- **Power:** 750 W
- **Energy Efficiency Class:** A
- **Noise Level:** 72 dB
- **Dust Bag Capacity:** 4 Liters
- **Operating Radius:** 9 Meters
- **Cable Length:** 6 Meters
- **Filter System:** HEPA 14 Activated Carbon Filter
- **Dimensions (Product):** 28.5 x 48 x 23.5 cm (approx.)
- **Weight (Item):** 4.8 kg

WARRANTY AND SUPPORT

Severin products are manufactured to high quality standards. In the unlikely event of a defect, please contact your retailer or the official Severin customer service for assistance.

Please retain your proof of purchase for warranty claims. The warranty period and conditions may vary by region. Refer to

the warranty card included with your product or visit the official Severin website for detailed information.
For further support, spare parts, or accessories, please visit the[Severin Store on Amazon](#) or the official Severin website.

© 2025 Severin. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question