

Manuals.plus /

- › Procter & Gamble /
- › Gillette Fusion ProGlide All Purpose Styler Instruction Manual

Procter & Gamble Gillette Fusion ProGlide All Purpose Styler

Gillette Fusion ProGlide All Purpose Styler Instruction Manual

Brand: Procter & Gamble | **Model:** Gillette Fusion ProGlide All Purpose Styler

INTRODUCTION

The Gillette Fusion All Purpose Styler is a versatile grooming tool designed to trim evenly, shave deeply, and ensure precise contours. This styler allows you to achieve various looks with a single device. Equipped with Braun technology, it is waterproof, making it suitable for use in the shower. The precision razor is compatible with all Gillette Fusion blades.

PRODUCT OVERVIEW





This image displays the retail packaging of the Gillette Fusion ProGlide All Purpose Styler. It features the main trimmer unit with a power button, a detachable razor head, and three different sized comb attachments for varying hair lengths. The packaging highlights its 'ALL IN ONE' capability and 'WATERPROOF' feature.

WHAT'S INCLUDED

- One Gillette Fusion ProGlide All Purpose Styler trimmer unit
- One ProGlide blade (manufactured at the Gillette Berlin factory)
- Three comb attachments (2mm, 4mm, 6mm for different hair lengths)
- One AA battery

SETUP

1. **Battery Installation:**

Locate the battery compartment at the bottom of the trimmer handle. Twist or slide the cover to open. Insert the included AA battery, ensuring the positive (+) and negative (-) ends are aligned correctly as indicated inside the compartment. Close the cover securely.

2. **Attaching the Razor Head:**

Align the razor head with the top of the trimmer unit. Gently push until it clicks into place. To remove, press the release button (if present) or pull firmly away from the unit.

3. **Attaching Comb Attachments:**

Select the desired comb length (2mm, 4mm, or 6mm). Slide the comb attachment over the trimmer blade until it securely locks into position. Ensure it is fully seated to prevent uneven trimming. To remove, gently pull the comb away from the blade.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button located on the trimmer handle to turn the device on or off.

Trimming (with comb attachments)

- Attach the desired comb length (2mm, 4mm, or 6mm) for your preferred hair length.
- Hold the trimmer with the comb flat against your skin.
- Move the trimmer slowly against the direction of hair growth for an even trim.
- For best results, ensure hair is clean and dry before trimming.

Shaving (with razor head)

- Ensure the razor head is securely attached.
- Apply shaving gel or foam to the area to be shaved.
- Shave with light, gentle strokes in the direction of hair growth, then against for a closer shave if desired.
- Rinse the razor head frequently during shaving to clear hair and shaving cream.

Edging and Precision Trimming

- Remove any comb attachments for precision work.
- Use the trimmer blade directly against the skin to create sharp lines and define edges for beards, sideburns, or necklines.
- The small precision blade on the back of the razor head can be used for intricate detailing.

Wet and Dry Use

The Gillette Fusion ProGlide All Purpose Styler is waterproof and can be used in wet conditions, including in the shower. Ensure the battery compartment is securely closed before exposing the device to water.

MAINTENANCE

Cleaning

- After each use, turn off the trimmer.
- Remove the comb attachment and razor head.
- Rinse the trimmer head and comb attachments under running water to remove hair and debris.
- Shake off excess water and allow all parts to air dry completely before reassembling or storing.
- Do not use abrasive cleaners or harsh chemicals on the device.

Blade Replacement

The razor head is compatible with all Gillette Fusion blades. Replace the blade when it becomes dull or you notice discomfort during shaving. To replace, simply detach the old razor head and click a new one into place.

Battery Replacement

When the trimmer's performance diminishes, it is time to replace the AA battery. Follow the battery installation steps outlined in the "Setup" section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is dead or incorrectly installed.	Check battery orientation. Replace with a new AA battery.
Poor trimming/shaving performance.	Blades are dull or clogged with hair.	Clean the trimmer head and comb attachments. Replace the razor blade if dull.
Trimmer pulls hair.	Blades are dull or hair is too long/tangled.	Ensure hair is clean and untangled. Replace the razor blade. Move the trimmer slower.
Device feels hot during use.	Prolonged use or motor strain.	Turn off the device and allow it to cool down. Ensure it is clean and free of obstructions.

SPECIFICATIONS

Model Name: Gillette Fusion ProGlide All Purpose Styler Razor and Edger

Model Number: 7702018458189

Power Source: Battery powered (1 AA battery included)

Special Feature: Waterproof

Blade Material: Stainless Steel

Dimensions (L x W x H): 10.1 x 20.2 x 3.6 cm (4.0 x 8.0 x 1.4 inches)

Weight: 140 grams (4.9 ounces)

Country of Origin: China

Compatible Blades: All Gillette Fusion blades

SAFETY INFORMATION

- Keep out of reach of children.
- Do not disassemble the device beyond what is instructed in this manual.

- Do not expose the device to extreme temperatures or direct sunlight.
- Ensure the battery compartment is sealed before using the device in wet conditions.
- If the device is damaged, do not use it. Contact customer support.
- Dispose of batteries according to local regulations.

WARRANTY AND SUPPORT

For product support, warranty information, or to purchase replacement parts, please visit the official Gillette website or contact their customer service department. Keep your purchase receipt as proof of purchase. For further assistance, please refer to the contact information provided on the product packaging or the official brand website.