

[Manuals.plus](#) /

› [Cyber Acoustics](#) /

› Cyber Acoustics CA-3610 2.1 Multimedia Speaker System User Manual

Cyber Acoustics CA-3610

Cyber Acoustics CA-3610 2.1 Multimedia Speaker System User Manual

Model: CA-3610

INTRODUCTION

Thank you for choosing the Cyber Acoustics CA-3610 2.1 Multimedia Speaker System. This system is designed to provide high-quality audio for your PC, Mac, music, movies, and gaming experiences. It features a powerful subwoofer and dual-driver satellite speakers for crisp highs, warm mid-tones, and deep, powerful bass. This manual will guide you through the setup, operation, and maintenance of your new speaker system.



The Cyber Acoustics CA-3610 2.1 Multimedia Speaker System, including two satellite speakers, a subwoofer, and a control pod.

What's in the Box

Your Cyber Acoustics CA-3610 package should contain the following items:

- One (1) Subwoofer unit
- Two (2) Satellite Speakers
- One (1) Control Pod (attached to the subwoofer)
- One (1) 120V AC Power Adapter
- One (1) User Guide (this document)

Satellite Speakers with Sub

A 2.1 computer speaker system designed to provide the best sound for the money



The main components of the CA-3610 system: satellite speakers, subwoofer, and control pod.

SETUP INSTRUCTIONS

Follow these steps to set up your Cyber Acoustics CA-3610 speaker system:

1. **Position the Subwoofer:** Place the subwoofer on the floor or under your desk. Ensure the down-firing speaker is not obstructed.
2. **Position the Satellite Speakers:** Place the two satellite speakers on either side of your monitor or listening area. The angled design is optimized for desktop placement.

3. **Connect Satellite Speakers to Subwoofer:** Plug the cables from the satellite speakers into the corresponding ports on the back of the subwoofer.
4. **Connect to Audio Source:** Plug the 3.5mm audio cable from the control pod into the headphone jack or audio output port of your computer, laptop, gaming console (PS4, PS5, Xbox, Nintendo Switch), tablet, or smartphone.
5. **Connect Power:** Plug the 120V AC power adapter into the power input on the subwoofer, then plug the adapter into a standard wall outlet.
6. **Power On:** Turn the power switch on the control pod to the "ON" position. The LED indicator on the control pod will illuminate.
7. **Adjust Volume:** Start with the volume knob on the control pod at a low setting before playing audio to avoid sudden loud sounds.

Simplified Set Up

Just plug in the satellites and then connect to your source via standard 3.5mm connection



Simplified setup showing connections on the back of the subwoofer.

Setup Videos

How to Setup Your Speakers on Windows 10

Your browser does not support the video tag.

This video provides a step-by-step guide on how to connect and configure your Cyber Acoustics speakers with a Windows 10 operating system.

How to Setup Your Speakers on a Mac

Your browser does not support the video tag.

This video demonstrates the process of setting up your Cyber Acoustics speakers with a Mac computer, covering physical connections and audio settings.

OPERATING INSTRUCTIONS

The Cyber Acoustics CA-3610 system is designed for ease of use with its convenient desktop control pod.

- **Master Volume Control:** The large knob on the top of the control pod adjusts the overall volume of the speaker system. Rotate clockwise to increase volume and counter-clockwise to decrease.
- **Bass Level Adjustment:** A separate dial on the side of the control pod allows you to customize the bass output from the subwoofer. Adjust to your preference for music, movies, or gaming.
- **3.5mm AUX Input:** An easily accessible 3.5mm auxiliary input jack is located on the control pod. This allows for quick connection of additional audio devices like a gaming system, tablet, or smartphone without needing to access the back of the subwoofer.
- **Headphone Jack:** For private listening, plug your headphones into the headphone jack on the control pod. Audio will automatically mute from the speakers when headphones are connected.
- **Power On/Off:** Use the toggle switch on the side of the control pod to turn the speaker system on or off. The blue LED light on the top indicates power status.

Convenient Desktop Control Pod

- LED light on/off indicator
- Power on/off toggle
- Master volume control
- 3.5mm AUX input



The convenient desktop control pod for easy access to volume, bass, and inputs.



The CA-3610 system integrated with a computer setup, demonstrating typical usage.

MAINTENANCE

To ensure the longevity and optimal performance of your Cyber Acoustics CA-3610 speaker system, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the surfaces of the speakers, subwoofer, and control pod. Avoid using liquid cleaners, aerosols, or abrasive materials, as they may damage the finish or internal components.
- **Placement:** Keep the system in a dry environment, away from direct sunlight, heat sources, and excessive dust. Ensure proper ventilation around the subwoofer to prevent overheating.
- **Cable Management:** Avoid kinking or sharply bending the cables. Ensure cables are not under heavy objects or in high-traffic areas where they could be tripped over or damaged.
- **Power Off When Not in Use:** If you plan not to use the speakers for an extended period, it is advisable to turn them off using the power switch on the control pod.

TROUBLESHOOTING

If you encounter any issues with your Cyber Acoustics CA-3610 speaker system, please refer to the following common troubleshooting steps:

Problem	Possible Solution
No Sound	Ensure the power adapter is securely plugged into the subwoofer and a working wall outlet. Verify the power switch on the control pod is in the "ON" position and the blue LED is illuminated. Check that the 3.5mm audio cable is fully inserted into both the control pod and your audio source (computer, phone, etc.). Increase the volume on both the control pod and your audio source. Ensure headphones are not plugged into the control pod's headphone jack. Confirm that your computer's audio output is set to the correct device (e.g., "Speakers" or "Headphones" connected to your sound card).
Distorted Sound	Lower the volume on both the control pod and your audio source. Adjust the bass level on the control pod. Excessive bass can cause distortion. Ensure all cables are securely connected and not damaged. Test with a different audio source to rule out issues with the original device.
Subwoofer Not Working	Check the bass level dial on the control pod and ensure it is not set to minimum. Verify that the satellite speakers are properly connected to the subwoofer. Ensure the subwoofer is receiving power (indicated by the control pod's LED).
One Satellite Speaker Not Working	Check the connection of the non-working satellite speaker to the subwoofer. Ensure your audio source's balance settings are centered.

SPECIFICATIONS

Feature	Detail
Model Name	CA-3610
Speaker Type	Multimedia 2.1 System
Speaker Maximum Output Power	62 Watts Peak / 30 Watts RMS
Subwoofer Diameter	5.25 Inches
Satellite Drivers	Dual 2-inch titanium drivers per satellite
Frequency Response	20 Hz - 20 KHz
Connectivity Technology	Wired (3.5mm Auxiliary)
Input Voltage	110 Volts AC

Feature	Detail
Product Dimensions (Subwoofer)	10.6"D x 13.2"W x 9.8"H
Item Weight	9.1 Pounds
Color	Black
Manufacturer	Cyber Acoustics
UPC	646422002477

5.25" Subwoofer

Delivers the lower frequencies known as “bass”
a richer computer audio experience



The 5.25-inch down-firing subwoofer provides deep bass.

Dual Driver Cones

Dual 2" drivers embedded in satellite speakers



The satellite speakers feature dual 2-inch drivers for clear audio.

WARRANTY AND SUPPORT

The Cyber Acoustics CA-3610 2.1 Multimedia Speaker System comes with a **1-year manufacturer warranty**. For technical support, warranty claims, or any questions regarding your product, please contact the Cyber Acoustics US-based customer service team. You can typically find contact information through the official Cyber Acoustics website or by contacting them through the Amazon platform where the product was purchased. Please retain your proof of purchase for warranty purposes.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question