

**AEG AG3015SW**

# AEG ECO Li 35 Ergorapido AG3015SW 2-in-1 Hand Vacuum Cleaner Instruction Manual

[Introduction](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your AEG ECO Li 35 Ergorapido AG3015SW 2-in-1 Hand Vacuum Cleaner. Please read this manual thoroughly before operating the appliance and retain it for future reference. This model features a 2-in-1 design, lithium power battery, patented self-cleaning brush, and 4 LED front lights, with a design incorporating Swarovski elements.

## 2. SAFETY INFORMATION

Always observe the following basic safety precautions when using electrical appliances:

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store your appliance indoors in a cool, dry area.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.

### 3. PRODUCT OVERVIEW

---

The AEG ECO Li 35 Ergorapido AG3015SW is a versatile 2-in-1 vacuum cleaner designed for efficient cleaning of various surfaces. It combines a powerful stick vacuum with a detachable handheld unit for maximum flexibility.


#### Key Features:

- **2-in-1 Functionality:** Easily switch between a stick vacuum and a removable handheld unit.
- **Lithium Power Battery:** Provides consistent power and extended runtime.
- **Patented Self-Cleaning Brush Roll:** Simplifies maintenance by clearing tangled hair and fibers.
- **4 LED Front Lights:** Illuminates dark areas for improved visibility during cleaning.
- **Cyclone Technology:** Maintains consistent suction performance.
- **Self-Contained Parking Function:** Allows the unit to stand upright independently.
- **Integrated Accessories:** Crevice nozzle and brush can be stored on the device or charging station.
- **Swarovski Design Elements:** This specific model, AG3015SW, incorporates Swarovski crystals as a design feature.





**Figure 1:** The AEG ECO Li 35 Ergorapido AG3015SW in its upright stick vacuum configuration, with the detachable handheld unit visible. The design features a sleek black finish with silver accents and Swarovski crystal elements on the handheld unit.

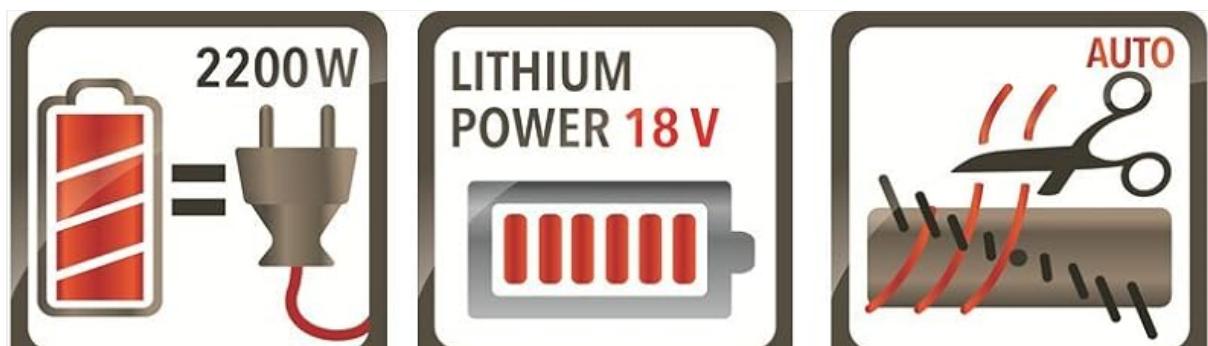

Leistungsstark  
wie ein Staub-  
sauger mit Kabel

Schnelles Laden  
Geringes Gewicht  
Kein Memory-Effekt

BrushRollClean™  
Patentierte Bürsten-  
Reinigungsfunktion



**BIS ZU 35 MIN.  
LAUFZEIT**


Extra lange  
Laufzeit



Ladestoppfunktion  
vermeidet unnötige  
Stromaufnahme



**QUICK CLEAN**  
Für hygienische und  
Schnelle Reinigung

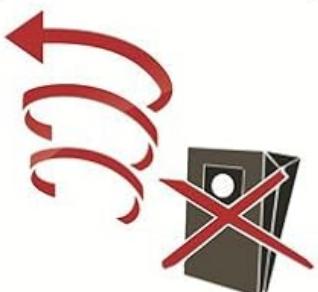

Zyklonfiltersystem  
gleichbleibende  
Saugleistung



Elektrosaugbürste



**Flexible 2in1  
Funktion**



LED-Frontlicht



Freistehende  
Parkfunktion



**Integrierte  
Zubehörteile**

\* Getestet auf Hartboden im Vergleich zum AEG AE7810

Figure 2: Visual representation of key features including 2200W power equivalent, 18V Lithium Power battery, BrushRollClean™ self-cleaning function, up to 35 minutes runtime, charging stop function, Quick Clean, cyclonic filter system, motorized brush, flexible 2-in-1 function, LED front light, freestanding parking function, and integrated

## 4. SETUP

---

### 4.1 Assembly

Your Ergorapido comes partially assembled. Follow these steps to complete the assembly:

1. Insert the handle into the main body of the vacuum cleaner until it clicks securely into place.
2. Ensure the handheld unit is correctly seated within the stick vacuum body.

### 4.2 Charging the Battery

Before first use, fully charge the battery for approximately 4 hours. The intelligent charging system automatically shuts off when fully charged to extend battery life.

1. Place the vacuum cleaner on its charging station.
2. Connect the charger to a power outlet.
3. The charging indicator lights will illuminate, showing the charging status.
4. Once fully charged, the indicator lights will show a steady full charge, and the system will stop charging.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Using as a Stick Vacuum

1. Press the power button on the handle to turn on the vacuum cleaner.
2. Select the desired power level (2 available) using the power selector button.
3. The 4 LED front lights will automatically illuminate the cleaning path.
4. Maneuver the vacuum cleaner across floors. The double joint allows for flexible movement around furniture.

### 5.2 Using as a Handheld Vacuum

1. Press the release button to detach the handheld unit from the main body.
2. Press the power button on the handheld unit to turn it on.
3. Attach the crevice nozzle or brush accessory as needed for specific cleaning tasks (e.g., upholstery, car interiors, tight spaces).
4. After use, turn off the handheld unit and reattach it to the stick vacuum body until it clicks into place.



**Figure 3:** The detachable handheld unit being used to clean crumbs from a kitchen counter, demonstrating its versatility for quick clean-ups.



**Figure 4:** A collage showing various uses of the Ergorapido, including cleaning a sofa with the handheld unit, vacuuming under a chair with the stick vacuum, a close-up of the LED lights on the floorhead, and the handheld unit's design.

### 5.3 Self-Contained Parking Function

The vacuum cleaner can stand upright on its own without needing to be placed in the charging station or leaned against a wall. This feature allows for convenient temporary storage during cleaning tasks.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 6.1 Emptying the Dust Container

Empty the dust container regularly, preferably after each use, or when the maximum fill line is reached.

1. Ensure the vacuum cleaner is turned off.
2. Detach the handheld unit.
3. Press the dust container release button and remove the container.
4. Empty the contents into a waste bin.
5. Reattach the dust container and handheld unit.

### 6.2 Cleaning the Filters

Clean the filters regularly to maintain suction power. The Ergorapido uses a HEPA filter type.

1. Remove the dust container as described above.
2. Carefully remove the inner and outer filters.
3. Tap the filters over a waste bin to remove loose dust.
4. If heavily soiled, wash the filters under lukewarm running water. Ensure they are completely dry before reinserting.
5. Reassemble the filters and dust container.

### 6.3 Self-Cleaning Brush Roller

The patented BrushRollClean™ function allows for easy cleaning of tangled hair and fibers from the brush

roller.

1. Ensure the vacuum cleaner is turned on and standing upright.
2. Press the BrushRollClean™ pedal (usually located on the floorhead) with your foot.
3. Hold the pedal down for approximately 5 seconds while the brush roller rotates and cuts away tangled hair.
4. Release the pedal. The cut debris will be sucked into the dust container.

## 7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged.	Charge the battery fully.
Reduced suction power.	Dust container is full.	Empty the dust container.
Reduced suction power.	Filters are clogged.	Clean or replace the filters.
Reduced suction power.	Brush roller is blocked or tangled.	Use the BrushRollClean™ function or manually clear any obstructions.
Brush roller does not rotate.	Obstruction in the brush roller.	Turn off the vacuum, remove any obstructions from the brush roller.
Vacuum cleaner stops during operation.	Battery is low.	Recharge the battery.
Vacuum cleaner stops during operation.	Overheating protection activated.	Turn off the vacuum, check for blockages, and allow it to cool down for at least 30 minutes.

## 8. SPECIFICATIONS

Technical specifications for the AEG ECO Li 35 Ergorapido AG3015SW:

Feature	Value
Brand	AEG
Model Number	AG3015SW
Product Dimensions	26.5 x 14.5 x 114.5 cm
Item Weight	2.46 kg
Capacity	0.5 litres

Feature	Value
Voltage	18 Volts
Number of Speeds	2
Runtime	Up to 35 minutes
Special Features	Bagless, Battery indicator, Cordless, Extra long battery life, LED Lighting, Controls on handle, Wireless
Filter Type	HEPA Filter
Power Source	Electric (Battery)
Included Components	Charger

## 9. WARRANTY AND SUPPORT

Your AEG ECO Li 35 Ergorapido AG3015SW comes with a standard warranty. An extended warranty of 1 year, totaling 3 years, may be available upon registration or specific purchase conditions. Please refer to your purchase documentation for details on warranty registration and terms.

### Customer Support:

For technical assistance, spare parts, or warranty claims, please contact AEG customer service. Contact information can typically be found on the official AEG website or in your product packaging.