

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Singer](#) /

› Singer 70-Seventy Sewing Machine Instruction Manual

Singer 70-Seventy

Singer 70-Seventy Sewing Machine Instruction Manual

Your guide to operating and maintaining your Singer 70-Seventy machine.

1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Singer 70-Seventy Sewing Machine. Designed for versatility, this machine is capable of standard sewing, embroidery, and serging tasks. Please read this manual thoroughly before operating the machine to ensure safe and efficient use and to achieve optimal results.

Familiarize yourself with all components and safety precautions outlined herein. Proper understanding and care will extend the life of your machine and enhance your sewing experience.

2. SETUP

2.1 Unpacking and Placement

- Carefully remove the machine from its packaging. Retain all packing materials for future transport or storage.
- Place the machine on a stable, level surface with adequate lighting. Ensure there is sufficient space around the machine for fabric handling.
- Connect the foot controller and power cord to the machine and then to a suitable electrical outlet.

2.2 Needle Installation

1. Turn the handwheel towards you to raise the needle bar to its highest position.
2. Loosen the needle clamp screw.
3. Insert a new needle with the flat side facing the back of the machine, pushing it up as far as it will go.
4. Tighten the needle clamp screw securely.

2.3 Bobbin Winding

To wind the bobbin:

- Place a spool of thread on the spool pin.
- Guide the thread through the tension disc for bobbin winding.
- Place the empty bobbin onto the bobbin winder spindle.

- Start the machine; the bobbin will wind automatically. Stop when full.

2.4 Threading the Machine

Follow the numbered threading path indicated on the machine, ensuring the thread passes through all guides and the take-up lever. Thread the needle from front to back.

3. OPERATING

3.1 Basic Sewing

- Select your desired stitch pattern using the stitch selector dial.
- Adjust stitch length and width as needed for your fabric and project.
- Place fabric under the presser foot, lower the presser foot, and begin sewing by gently pressing the foot controller.
- Use the reverse lever for backstitching at the beginning and end of seams.

3.2 Tension Adjustment

Correct thread tension is crucial for balanced stitches. Adjust the upper thread tension dial according to your fabric and thread type. A balanced stitch will show equal amounts of upper and bobbin thread on both sides of the fabric.

3.3 Embroidery Functions

For embroidery, attach the embroidery unit (if applicable) and follow the specific instructions for pattern selection and hoop placement. Ensure the correct needle and stabilizer are used for your embroidery project.

3.4 Serging Functions

When using the serging capabilities, ensure the appropriate needles and threads are installed. Adjust differential feed and cutting width as required for neat, professional edges on various fabrics.

4. MAINTENANCE

4.1 Cleaning

- Regularly clean lint and dust from the bobbin case, feed dogs, and needle plate area using a small brush.
- Disconnect the machine from power before cleaning.

4.2 Lubrication

Refer to the lubrication points indicated in the original manual. Apply a small drop of high-quality sewing machine oil to these points periodically, especially after extended use.

4.3 Needle Replacement

Replace needles frequently (approximately every 8-10 hours of sewing) or when they become bent, dull, or damaged. Using a fresh, sharp needle prevents skipped stitches and fabric damage.

4.4 Storage

When not in use, cover the machine with a dust cover to protect it from dust and debris. Store in a dry, temperate environment.

5. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------|---|---|
| Skipped Stitches | Incorrect needle, bent needle, improper threading, incorrect tension. | Replace needle, rethread machine, adjust tension. |
| Thread Breakage | Incorrect threading, high tension, burr on needle plate, poor quality thread. | Rethread, reduce tension, check for burrs, use quality thread. |
| Machine Jams | Thread tangled in bobbin case, fabric pulled too hard, incorrect stitch settings. | Clear bobbin area, gently guide fabric, verify stitch settings. |
| Uneven Stitches | Incorrect tension, worn needle, inconsistent fabric feeding. | Adjust tension, replace needle, ensure smooth fabric feeding. |

If problems persist after attempting these solutions, please consult a qualified service technician.

6. SPECIFICATIONS

- **Model:** Singer 70-Seventy
- **Machine Type:** Mechanical Sewing, Embroidery, and Serger Machine
- **Stitch Types:** Multiple utility and decorative stitches
- **Needle System:** Standard home sewing machine needles
- **Power Requirements:** AC 220-240V, 50Hz (specifics may vary by region)
- **Weight:** Approximately 7-9 kg (varies by specific model variant)

Note: Exact specifications may vary based on the specific production year and regional model of the Singer 70-Seventy. Refer to the original machine's documentation for precise details.

7. WARRANTY AND SUPPORT

For information regarding the warranty coverage for your Singer 70-Seventy Sewing Machine, please refer to the original warranty card or documentation that accompanied your purchase. Warranty terms and conditions can vary by region and retailer.

For technical support, service, or to inquire about replacement parts, please contact your authorized Singer dealer or visit the official Singer website for customer service contact information. When contacting support, please have your machine's model number and serial number readily available.