

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DB DRIVE](#) /

› [DB Drive 8-inch Pro Audio Midrange Car Stereo Component Speaker System Instruction Manual](#)

DB DRIVE 8-inch Pro Audio Midrange Component Speaker System

DB Drive 8-inch Pro Audio Midrange Car Stereo Component Speaker System Instruction Manual

INTRODUCTION

Thank you for choosing the DB Drive 8-inch Pro Audio Midrange Car Stereo Component Speaker System. This manual provides essential information for the proper installation, operation, and maintenance of your new audio system. Please read this manual thoroughly before attempting installation or use to ensure optimal performance and safety.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Two (2) DB Drive 300 Watts 8-inch Pro Audio Midrange Speakers
- Two (2) 1-inch (25mm) Aluminum Pro Audio Tweeters
- Two (2) 12dB per Octave Passive Crossover Networks



Image: All components of the DB Drive 8-inch Pro Audio Midrange Car Stereo Component Speaker System, including two midrange speakers, two tweeters, and two passive crossover networks.

IMPORTANT SAFETY INFORMATION

Observe the following safety precautions during installation and operation:

- **Electrical Safety:** Always disconnect the vehicle's battery negative terminal before beginning any electrical work to prevent short circuits and electrical shock.
- **Professional Installation:** If you are unsure about any aspect of the installation, consult a qualified professional car audio installer.
- **Hearing Protection:** Prolonged exposure to high volume levels can cause permanent hearing damage. Operate your audio system at moderate levels.
- **Ventilation:** Ensure adequate ventilation around all components, especially amplifiers, to prevent overheating.
- **Secure Mounting:** Securely mount all speakers and components to prevent them from becoming projectiles in the event of a sudden stop or collision.

INSTALLATION GUIDE

Proper installation is crucial for optimal performance. Follow these steps carefully.

Before You Begin

- Gather necessary tools: wire strippers, crimpers, screwdrivers, drill, mounting hardware.
- Plan your speaker placement to ensure proper sound staging and clearance.
- Disconnect the vehicle's battery.

Mounting the Midrange Speakers

The 8-inch midrange speakers require a suitable mounting location, typically in door panels or custom enclosures. Ensure the mounting surface is rigid and free from obstructions.

1. Carefully mark the cutout diameter for the speaker.
2. Cut the opening using appropriate tools, ensuring a clean edge.
3. Position the speaker in the opening and mark the screw holes.
4. Drill pilot holes for the mounting screws.
5. Secure the speaker using the provided mounting screws, ensuring it is flush and tight. Do not overtighten.



Image: Side profile of a DB Drive 8-inch midrange speaker, illustrating its shallow mount design and cloth edge surround.



Image: Rear view of a DB Drive 8-inch midrange speaker, showing the mounting frame and speaker terminals for wiring connections.

Mounting the Tweeters

The 1-inch tweeters can be flush-mounted or surface-mounted depending on your vehicle's interior and desired sound dispersion. Refer to the tweeter's specific mounting hardware for detailed instructions.

Wiring the Crossover Network

The passive crossover network separates the audio signal into appropriate frequency ranges for the midrange speaker and tweeter. Each crossover has clearly labeled input and output terminals.

- **AMP Input:** Connect the speaker output wires from your amplifier to the 'AMP' input terminals on the crossover. Observe correct polarity (+ to + and - to -).
- **WOOFER Output:** Connect the wires from the 'WOOFER' output terminals on the crossover to the 8-inch midrange speaker.
- **TWEETER Output:** Connect the wires from the 'TWEETER' output terminals on the crossover to the 1-inch tweeter.

Ensure all connections are secure and properly insulated to prevent short circuits.

Connecting to the Amplifier

Connect the 'AMP' input of the crossover network to the corresponding speaker output channels of your car amplifier. Ensure the amplifier is capable of handling the speaker system's power requirements (300 Watts peak power). Refer to your amplifier's manual for specific wiring diagrams and settings.

OPERATING YOUR SPEAKER SYSTEM

Once installed, reconnect your vehicle's battery. Power on your car stereo and amplifier. Start with the volume at its lowest setting and gradually increase it to a comfortable listening level. Adjust your amplifier's gain and crossover settings according to its manual and your personal preference for optimal sound quality.

CARE AND MAINTENANCE

To ensure the longevity and performance of your DB Drive speaker system, follow these maintenance guidelines:

- Cleaning:** Use a soft, dry cloth to wipe down the speaker grilles and surrounds. Avoid using harsh chemicals or abrasive cleaners.
- Avoid Moisture:** Keep the speakers dry. While designed for car environments, excessive moisture can damage components.
- Temperature Extremes:** Avoid exposing the speakers to extreme temperatures for prolonged periods, as this can affect material integrity.
- Secure Connections:** Periodically check all wiring connections to ensure they remain tight and free from corrosion.

TROUBLESHOOTING COMMON ISSUES

If you experience problems with your speaker system, consult the following table before seeking professional assistance.

Problem	Possible Cause	Solution
No Sound from Speakers	<ul style="list-style-type: none">Loose or incorrect wiring connections.Amplifier not powered on or in protect mode.Head unit output issues.	<ul style="list-style-type: none">Check all wiring from head unit to amplifier, amplifier to crossover, and crossover to speakers for proper connection and polarity.Verify amplifier power and status indicators.Test head unit with another speaker or device.
Distorted Sound	<ul style="list-style-type: none">Amplifier gain set too high.Crossover settings incorrect.Speaker damaged.	<ul style="list-style-type: none">Reduce amplifier gain.Review crossover settings on amplifier and ensure passive crossovers are correctly wired.Inspect speaker cones for physical damage.
Intermittent Sound	<ul style="list-style-type: none">Loose wiring connection.Faulty cable.	<ul style="list-style-type: none">Inspect and secure all wiring connections.Replace suspected faulty cables.

TECHNICAL SPECIFICATIONS

Detailed specifications for the DB Drive 8-inch Pro Audio Midrange Car Stereo Component Speaker System:

Feature	Specification
Brand	DB DRIVE

Feature	Specification
Speaker Type	Surround Sound Component System
Speaker Size	8 Inches (Midrange)
Tweeter Diameter	1 Inch (25mm)
Speaker Maximum Output Power	300 Watts
Voice Coil	1.5-inch (38mm) High Temperature
Surround Material	Cloth Edge
Basket Material	Die Cast Aluminum
Crossover Network	12dB per Octave Passive
Mounting Type	Shallow Mount Application
Number of Items	2 (Set of 2 Speakers)
Recommended Uses For Product	Car Audio

WARRANTY INFORMATION

This DB Drive speaker system comes with a **One Year Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by improper installation, accident, misuse, abuse, negligence, or unauthorized modification. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, warranty service, or general inquiries, please contact DB Drive customer support through their official website or the retailer where the product was purchased. Have your product model number and proof of purchase ready when contacting support.