

Manuals.plus /

› Fujifilm /

› Fujifilm Instax Mini 8+ Instant Film Camera User Manual

Fujifilm Instax Mini 8+

Fujifilm Instax Mini 8+ Instant Film Camera User Manual

Model: Instax Mini 8+

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Fujifilm Instax Mini 8+ Instant Film Camera. Please read this manual thoroughly before using the camera and keep it in a safe place for future reference.

SAFETY PRECAUTIONS

- Do not disassemble, modify, or attempt to repair the camera.
- Keep the camera away from water and moisture.
- Use only specified batteries (AA alkaline batteries).
- Do not expose the camera or film to extreme temperatures.
- Keep out of reach of small children.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Fujifilm Instax Mini 8+ Camera
- Camera Strap
- Close-up Lens
- AA Batteries (x2)
- User Manual (this document)

CAMERA PARTS



Figure 1: Front View. This image displays the front of the Instax Mini 8+ camera, highlighting the lens, flash, viewfinder, and shutter button.



Figure 2: Self-Shot Mirror. The camera features a small mirror next to the lens, designed for convenient self-portraits.



Figure 3: Top View. This view shows the film ejection slot and the exposure mode dial, which allows selection of various lighting conditions.



Figure 4: Back View. The back of the camera features the film compartment door and the film counter.

Key Components:

- **Lens:** Captures the image.
- **Flash:** Provides illumination for low-light conditions.
- **Viewfinder:** Used to frame your shots.
- **Shutter Button:** Press to take a picture.
- **Exposure Mode Dial:** Adjusts brightness settings based on ambient light.
- **Film Ejection Slot:** Where printed photos emerge.
- **Film Compartment Door:** Access for loading and unloading film packs.
- **Self-Shot Mirror:** Small mirror on the lens barrel for framing selfies.

SETUP

1. Battery Installation

1. Open the battery compartment cover located on the side of the camera.
2. Insert two AA alkaline batteries, ensuring correct polarity (+/-).

3. Close the battery compartment cover securely.

2. Film Loading

1. Open the film compartment door on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark on the camera.
3. Insert the film pack straight into the compartment. Do not press down on the film pack.
4. Close the film compartment door. The camera will automatically eject the black film cover.
5. The film counter will display "10" (or the number of films in the pack).

Important: Do not open the film compartment door after loading film until all exposures are used, as this will expose the film and render it unusable.

OPERATING THE CAMERA

1. Powering On/Off

- To power on, press the button next to the lens. The lens will extend.
- To power off, push the lens back into the camera body.

2. Taking Photos

1. **Select Exposure Mode:** Turn the exposure mode dial to the recommended setting indicated by the lit LED next to the dial. Options include Indoor, Cloudy, Sunny, Very Sunny, and Hi-Key.
2. **Frame Your Shot:** Look through the viewfinder to compose your picture. For selfies, use the self-shot mirror next to the lens.
3. **Press the Shutter Button:** Hold the camera steady and press the shutter button. The flash will fire automatically.
4. **Wait for Print:** The photo will eject from the film slot. Allow approximately 90 seconds for the image to develop fully. Do not shake or bend the print during development.

3. Using the Close-up Lens

- The close-up lens allows you to take photos from a distance of 35 cm to 50 cm.
- Attach the close-up lens by snapping it onto the camera lens.
- When using the close-up lens, aim the center of the viewfinder slightly to the right of the subject to compensate for parallax.

MAINTENANCE

Cleaning the Camera

- Wipe the camera body with a soft, dry cloth.
- For the lens and viewfinder, use a lens cleaning cloth. Do not use abrasive cleaners or solvents.

Storage

- Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.
- Remove batteries if the camera will not be used for an extended period.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Batteries are dead or incorrectly inserted.	Replace batteries with new AA alkaline batteries, ensuring correct polarity.
Photos come out completely black.	Film compartment opened after loading, or exposure setting is too dark for conditions.	Ensure film compartment remains closed. Adjust exposure dial to a brighter setting (e.g., "Hi-Key" or "Sunny").
Photos come out completely white.	Exposure setting is too bright for conditions.	Adjust exposure dial to a darker setting (e.g., "Indoor" or "Cloudy").
Film does not eject.	No film loaded, or film jam.	Check film counter. If 0, load new film. If film is jammed, power off, gently open film door, and remove jammed film (note: film will be wasted).

SPECIFICATIONS

- **Film:** Fujifilm Instax Mini Instant Film
- **Picture Size:** 62mm x 46mm
- **Lens:** 2 components, 2 elements, f=60mm, 1:12.7
- **Viewfinder:** Real image finder, 0.37x, with target spot
- **Focusing:** 0.6m - ∞
- **Shutter Speed:** 1/60 sec.
- **Exposure Control:** Manual switching system (LED indicator in exposure meter)
- **Flash:** Constant firing flash (automatic light adjustment)
- **Flash Charging Time:** 0.2 sec. to 6 sec. (when using new batteries)
- **Flash Range:** 0.6m - 2.7m
- **Power Supply:** Two AA-size 1.5V alkaline batteries
- **Dimensions:** 116mm x 118.3mm x 68.2mm (2.68 x 4.57 x 4.65 inches)
- **Weight:** 307g (10.8 ounces) (without batteries, strap, and film pack)
- **Special Features:** Self-Shot Mirror, Close-up Lens

WARRANTY

Please note that this product is an International Version and may not include a manufacturer's warranty in all regions. For specific warranty information, please refer to the documentation provided at the time of purchase or contact your retailer.

SUPPORT

For further assistance or inquiries, please visit the official Fujifilm website or contact their customer support. You can also visit the Fujifilm Store on Amazon for product information and accessories.

