

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Zeppelin](#) /

› [Zeppelin 100 Years Men's Analogue Quartz Watch 7674-6 Instruction Manual](#)

Zeppelin 7674-6

Zeppelin 100 Years Men's Analogue Quartz Watch 7674-6 Instruction Manual

Model: 7674-6

INTRODUCTION

This manual provides essential instructions for the proper use, setup, and maintenance of your Zeppelin 100 Years Men's Analogue Quartz Watch, Model 7674-6. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

The Zeppelin 100 Years watch features a silver stainless-steel case, a blue dial, and a brown calfskin strap. It is powered by a reliable quartz movement and includes chronograph functions. Familiarize yourself with the main components:

- **Crown:** Used for setting time and date.
- **Pushers:** Used to operate the chronograph functions.
- **Hour, Minute, Second Hands:** Indicate the current time.
- **Sub-dials:** Chronograph minute and second counters.
- **Date Window:** Displays the current date.
- **Calfskin Strap:** Secures the watch to your wrist.





Image 1: Front view of the Zeppelin 100 Years Men's Analogue Quartz Watch 7674-6, showcasing the blue dial, silver case, and brown calfskin strap.

SETUP

1. Setting the Time

1. Pull the crown out to position 2 (the outermost position).

2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Push the crown back into position 0 (normal operating position).

2. Setting the Date

1. Pull the crown out to position 1 (the middle position).
2. Rotate the crown clockwise to advance the date until the correct date is displayed. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. Push the crown back into position 0.

OPERATING THE CHRONOGRAPH

Your watch is equipped with a chronograph function for measuring elapsed time.

1. **Start:** Press the upper pusher to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** With the chronograph stopped, press the lower pusher to reset all chronograph hands to their zero positions.

Note: Ensure the chronograph is stopped before attempting to reset it.

MAINTENANCE

Cleaning

Wipe the watch case and crystal with a soft, dry cloth. For the calfskin strap, avoid excessive moisture. If the strap becomes wet, allow it to air dry naturally away from direct heat.

Water Resistance (50 meters / 5 ATM)

This watch is water resistant to 50 meters (5 ATM). This rating means it is suitable for short periods of recreational swimming. It is not suitable for diving, snorkeling, or prolonged water exposure. Always ensure the crown is fully pushed in before any contact with water.

Battery Replacement

The watch is powered by a quartz movement requiring a product-specific battery. When the battery needs replacement, it is recommended to have it replaced by a qualified watchmaker or authorized service center to maintain the watch's water resistance and integrity.

Strap Care

The calfskin strap is a natural material and will develop a unique patina over time. To prolong its life, avoid prolonged exposure to direct sunlight, extreme temperatures, and harsh chemicals. Clean with a soft, damp cloth if necessary, and allow to air dry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Depleted battery	Have the battery replaced by a professional.
Incorrect time/date	Crown not fully pushed in, or incorrect setting.	Ensure crown is in position 0. Re-set time and date as per "Setup" section.

Problem	Possible Cause	Solution
Chronograph hands not resetting to zero	Chronograph was not stopped before reset, or internal misalignment.	Ensure chronograph is stopped before pressing the reset pusher. If issue persists, consult a service center.

SPECIFICATIONS

- **Model Number:** 7674-6
- **Movement:** Quartz
- **Case Material:** Stainless Steel
- **Case Diameter:** 42mm
- **Strap Material:** Calfskin
- **Dial Color:** Blue
- **Water Resistance:** 50 meters (5 ATM)
- **Battery:** 1 Product Specific battery (included)
- **Product Dimensions:** 2 x 4.2 x 1.2 cm
- **Weight:** 400 g

WARRANTY AND SUPPORT

Your Zeppelin watch is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact Zeppelin customer support. For service or repairs, please contact an authorized Zeppelin service center.

For further assistance, please visit the official Zeppelin website or contact their customer service department.

